



# NP-6xxC Series

7", 8", 10.1", 12.1", 15", 15.6", 17", 18.5", 19" and 21.5" Intel Atom E3845/Celeron  
N2930, Fanless Industrial Compact Size Panel PC

## User Manual

**Release Date**

Sep. 2020

**Revision**

V2.1

# Revision History

| Reversion | Date       | Description  |
|-----------|------------|--|
| 1.0       | 2015/03/25 | Official Version   |
| 1.1       | 2015/07/15 | Modify Motherboard Description, add Mounting Description and BIOS OS Selection on P.67   |
| 1.2       | 2015/10/20 | Add "UL" Certificate, Modify OS Support  |
| 1.3       | 2016/02/02 | Modify Bay Trail to Atom or Celeron, Add 8GB Memory Spec. for option, UPS battery for option, and power consumption, com driver installation, and Net Weight Spec. ; Modify USB Spec. to 2 x USB 3.0, OS Support Spec., and 17" and 15" LCD Spec.. Change product and dimension images. Modify motherboard spec. in p. 28~35, 37~38, 41~44 |
| 1.4       | 2016/02/26 | Modify OS Support Spec.  |
| 1.5       | 2016/04/19 | Modify memory Spec.: Remove 2GB memory, and change 4GB memory from option to default. Add warning words about UL Certificate.  |
| 1.6       | 2016/09/21 | Add 19" HMI, Modify 15.6" back cover image   |
| 1.7       | 2017/03/13 | Modify 821(P)H Operating temperature 0~40  |
| 1.8       | 2017/10/16 | Modify memory efficacy<br>Modify IP rating   |
| 1.9       | 2019/03/18 | Update Power Consumption and Weight  |
| 2.0       | 2019/10/03 | Update Mechanical and MB Information<br>Change dimension and Product Photo for 18.5"and 21.5"  |
| 2.1       | 2020/09/08 | Modify 1.1 Specification data  |

## Warning!

---

This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions manual, it may cause interference to radio communications. It has been tested and found to comply with the limits for a Class A computing device pursuant to FCC Rules, which are designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case the user at his own expense will be required to take whatever measures may be required to correct the interference.

Electric Shock Hazard – Do not operate the machine with its back cover removed. There are dangerous high voltages inside.

## Avertissement!

---

Cet équipement génère, utilise et peut émettre une énergie de radiofréquence et s'il n'est pas installé et utilisé conformément au manuel d'instructions, il peut provoquer des interférences dans les communications radio. Il a été testé et approuvé conforme aux limites pour un dispositif de classe A et selon les règles de la FCC, qui sont conçues pour fournir une protection raisonnable contre de telles interférences dans un environnement commercial. Le fonctionnement de cet équipement dans une zone résidentielle est susceptible de provoquer des interférences, dans ce cas l'utilisateur, à ses propres frais, devra faire le nécessaire pour prendre toutes les mesures requises pour corriger le problème.

Risque de choc électrique - Ne pas faire fonctionner la machine avec son capot arrière enlevé. Des tensions dangereuses sont élevées à l'intérieur.

**Caution**

Risk of explosion if the battery is replaced with an incorrect type.

Batteries should be recycled where possible. Disposal of used batteries must be in accordance with local environmental regulations.

**Precaution**

Risque d'explosion si la pile usagée est remplacée par une pile de type incorrect.

Les piles usagées doivent être recyclées dans la mesure du possible. La mise au rebut des piles usagées doit respecter les réglementations locales en vigueur en matière de protection de l'environnement.

**This product is intended to be supplied by a Listed Power Adapter or DC power source, output meets SELV, rated 9-36Vdc, 4.5-1.5A or 12Vdc, 4.5A or 19Vdc, 6.31A., Tma = 50degree C, and the altitude of operation = 2000m.**

**If need further assistance with purchasing the power source, please contact to manufacturer for further information.**

## Packing List

| Accessories (as ticked) included in this package are:  |
|--|
| <input type="checkbox"/> Adaptor                       |
| <input type="checkbox"/> Driver & manual CD disc       |
| <input type="checkbox"/> Other. _____ (please specify) |

## Safety Precautions

Follow the messages below to prevent your systems from damage:

- ◆ Avoid your system from static electricity on all occasions.
- ◆ Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
- ◆ Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

## Consignes de sécurité

Suivez les messages ci-dessous pour éviter que vos systèmes contre les dommages:

- ◆ Éviter votre système contre l'électricité statique sur toutes les occasions.
- ◆ Évitez les chocs électriques. Ne pas toucher les composants de cette carte lorsque la carte est sous tension. Toujours débrancher lorsque le système n'est pas en cours d'utilisation.
- ◆ Couper l'alimentation électrique lorsque vous changez tous les périphériques matériels. Par exemple, lorsque vous connectez un cavalier ou d'installer des cartes, une forte augmentation de la puissance peut endommager les composants électroniques ou l'ensemble du système.

# Table of Contents

|   |   |
|---|---|
| Revision History.....                         | 1 |
| Warning!/Avertissement!.....                  | 2 |
| Caution/Precaution.....                       | 3 |
| Packing List.....                             | 4 |
| Safety Precautions/Consignes de sécurité..... | 5 |

## **Chapter 1** **Getting Started**

|  |    |
|--|----|
| 1.1 Features.....  | 8  |
| 1.2 Specifications.....                                      | 8  |
| 1.3 Dimensions.....  | 11 |
| 1.4 Brief Description of NP-6XXC.....                        | 17 |
| 1.5 Installation of HDD – 7”/8”.....                         | 22 |
| 1.6 Installation of HDD – 10.1”/18.5”.....                   | 24 |
| 1.7 Installation of HDD – 12.1”/15”/15.6”/17”/19”/21.5”..... | 25 |
| 1.8 VESA Mounting.....                                       | 27 |
| 1.9 Panel Mounting.....                                      | 27 |

## **Chapter 2** **Hardware**

|  |    |
|--|----|
| 2.1 Motherboard Introduction.....        | 28 |
| 2.2 Specifications.....                  | 28 |
| 2.3 Jumpers and Connectors Location..... | 32 |
| 2.4 Jumpers Setting and Connectors.....  | 33 |

## **Chapter 3** **BIOS Setup**

|                                       |    |
|---------------------------------------|----|
| 3.1 Operations after POST Screen..... | 47 |
| 3.2 BIOS Setup Utility.....           | 47 |
| 3.3 Main Settings.....                | 48 |
| 3.4 Advanced Settings.....            | 49 |
| 3.5 Chipset Settings.....             | 56 |
| 3.6 Security Settings.....            | 59 |
| 3.7 Boot Settings.....                | 60 |

|                               |    |
|-------------------------------|----|
| 3.8 Save & Exit Settings..... | 62 |
|-------------------------------|----|

## **Chapter 4** **Installation of Drivers**

|  |    |
|--|----|
| 4.1 Intel® Atom™ SoC Chipset .....                   | 65 |
| 4.2 Intel® VGA Chipset.....                          | 68 |
| 4.3 Intel® LAN Driver.....                           | 72 |
| 4.4 Realtek ALC662 HD Audio Driver Installation..... | 75 |
| 4.5 USB 3.0 Driver.....                              | 76 |
| 4.6 Com Driver.....                                  | 79 |

## **Chapter 5** **Touch Screen Installation**

|   |    |
|---|----|
| 5.1 Windows XP/2003/Vista/7 Universal Driver Installation for PenMount 6000 Series..... | 82 |
| 5.2 Software Functions.....   | 92 |

## **Figures**

|   |    |
|---|----|
| Figure 1.1: Dimensions of NP-607C(P).....                         | 11 |
| Figure 1.2: Dimensions of NP-608C(P).....                         | 11 |
| Figure 1.3: Dimensions of NP-610C(P).....                         | 12 |
| Figure 1.4: Dimensions of NP-612C(P).....                         | 12 |
| Figure 1.5: Dimensions of NP-615C(P).....                         | 13 |
| Figure 1.6: Dimensions of NP-616C(P).....                         | 13 |
| Figure 1.7: Dimensions of NP-617C(P).....                         | 14 |
| Figure 1.8: Dimensions of NP-618C(P).....                         | 14 |
| Figure 1.9: Dimensions of NP-619C(P).....                         | 15 |
| Figure 1.10: Dimensions of NP-621C(Resistive Touch).....          | 15 |
| Figure 1.11: Dimensions of NP-621C(Projected Capacitive Touch).16 |    |
| Figure 1.12: Front View of NP-6XXC Series.....                    | 17 |
| Figure 1.13: Rear View of NP-607C/808.....                        | 18 |
| Figure 1.14: Rear View of NP-610C.....                            | 18 |
| Figure 1.15: Rear View of NP-612C.....                            | 19 |
| Figure 1.16: Rear View of NP-615C.....                            | 19 |
| Figure 1.17: Rear View of NP-616C.....                            | 20 |
| Figure 1.18: Rear View of NP-617C.....                            | 20 |
| Figure 1.19: Rear View of NP-618C.....                            | 21 |
| Figure 1.20: Rear View of NP-619C.....                            | 21 |
| Figure 1.21: Rear View of NP-621C.....                            | 21 |
| Figure 1.22: NP-6XXC Series VESA Mounting.....                    | 27 |



Figure 1.23: NP-6XXC Series Panel Mounting ... .. 27

Figure 2.1: Motherboard Dimensions.....31

Figure 2.2: Jumpers and Connectors Location-Board Top.....32

Figure 2.3: Jumpers and Connectors Location-Board Bottom.....32

# Chapter 1 Getting Started

## 1.1 Features

- 7"/8"/10.1"/12.1"/15"/15.6"/17"/18.5"/19"/21.5" Industrial Compact Size  
Panel PC
- Flat front panel touch screen and fanless design
- Aluminum die-casting chassis for NP-6XXC-7"~15.6" and 21.5"
- Intel Celeron N2930(1.83GHz) CPU built-in/Atom E3845(1.91GHz) for option
- Onboard 4GB DDR 3L 1333 MHz/8GB(option)
- DC 9~36V wide-ranging power input
- IP66 compliant front panel
- Optional projected capacitive touchscreen support 7H anti-scratch surface

## 1.2 Specifications

|                 | NP-6XXC Series  |
|-----------------|---|
| <b>System</b>   |   |
| CPU             | Onboard Intel Celeron N2930(1.83GHz )/Atom E3845(1.91GHz) for option    |
| Chipset         | SoC   |
| Memory          | Onboard 4GB DDR 3L 1333 MHz/8GB(option)                                 |
| <b>IO Port</b>  |   |
| USB             | 2 x USB 3.0 type A  |
| Serial/Parallel | 1 x RS-232 DB-9(COM2)<br>1 x DB-9 RS-232/422/485 (Default RS-232)(COM1) |
| Audio           | 1 x Audio Line Out  |
| LAN             | 2 x GbE LAN RJ-45   |
| Power           | 1 x 3-pin DC Power input terminal                                       |

|  |  |
|--|--|
|  | 1 x 2-pin connector for power on/off button  |
| Option<br><b>(Not available for NP-607C and NP-608C)</b> | 2 x RS-232 DB-9 + 1 x Mini-PCIe slot via TB-528C2ME1<br>2 x CAN bus via TB-528CAN2<br>4 x USB 2.0 type A Via TB-528U4<br>2 x USB 2.0 type A + 1 x Mini-PCIe slot + 1xRS-232 DB-9 + 1 x Power button via TB-528C1U2P1 <b>(TB-528C1U2 for NP-610C)</b><br>UPS Battery 21W/10.8W/1.95Ah(3S1P)<br><b>UPS Battery and TB-528 expansion board can't be used in the same time for NP-610C/812/818</b> |
| <b>Storage Space</b>                                     |  |
| Storage  | 1 x SD card slot, up to 32GB<br>1 x MO-297 SATA SSD bay (Easy Accessible) <b>(for 7"/8")</b><br>1 x 2.5" SATA HDD bay for SATA HDD (Easy Accessible)   |
| <b>Expansion</b>   |  |
| Expansion Slot   | 1 x Internal Mini-PCIe slot full size  |
| <b>Touch Screen – Resistive Touch Window Type</b>        |  |
| TS Control IC  | PenMount 6000 on Board   |
| Interface  | USB  |
| Light Transmission                                       | Over 80%   |
| <b>Touch Screen – Projected Capacitive Type</b>          |  |
| TS Control IC  | Chip on tail   |
| Interface  | USB  |
| Light Transmission                                       | Over 90%   |
| <b>Power</b>   |  |
| Power Input  | DC 9~36V   |
| <b>Mechanical</b>  |  |
| Front Bezel Metal  | Aluminum Die-casting Chassis(7"~15.6"/21.5")<br>Aluminum front bezel/Aluminum die-casting for back cover(17"~19")  |
| Construction   | RAL 9007   |
| IP Rating  | IP66 compliant front panel   |
| <b>Environmental</b>                                     |  |
| Operating temperature                                    | 0~50°C<br>0~40°C only for NP-621C(P)H  |
| Storage temperature                                      | -30~70°C   |
| Humidity   | 10 to 90% @ 40°C, non- condensing  |
| Certification  | CE / FCC Class A   |
| <b>Operating System Support</b>                          |  |


|            |                           |
|------------|---------------------------|
| OS Support | Windows 10 IoT Enterprise |
|------------|---------------------------|

|                               | NP-607C(P)         | NP-608C(P)         | NP-610C(P)           | NP-612C(P)         | NP-615C(P)         |
|-------------------------------|--------------------|--------------------|----------------------|--------------------|--------------------|
| <b>Display</b>                |                    |                    |                      |                    |                    |
| Display Type                  | 7" TFT LCD         | 8" TFT LCD         | 10.1" TFT LCD        | 12.1" TFT LCD      | 15" TFT LCD        |
| Max. Resolution               | 800 x 480          | 800 x 600          | 1280 x 800           | 800 x 600          | 1024 x 768         |
| Max. Color                    | 262K               | 16.2M              | 16.2M                | 16.2M              | 16.7M              |
| Luminance(cd/m <sup>2</sup> ) | 350                | 350                | 350                  | 450                | 450                |
| Contrast Ratio                | 400 : 1            | 500 : 1            | 800 : 1              | 800 : 1            | 800 : 1            |
| Viewing angle                 | 140(H)/110(V)      | 140(H)/125(V)      | 160(H)/160(V)        | 160(H)/140(V)      | 160(H)/140(V)      |
| Backlight Lifetime            | 40,000 hrs         | 40,000 hrs         | 40,000 hrs           | 50,000 hrs         | 60,000 hrs         |
| <b>Power Consumption</b>      |                    |                    |                      |                    |                    |
| Power Consumption             | MAX: 14W<br>(807P) | MAX: 13W<br>(808P) | MAX: 14W<br>(810P)   | MAX: 15W<br>(812P) | MAX: 18W<br>(815P) |
| <b>Mechanical</b>             |                    |                    |                      |                    |                    |
| Mounting                      | VESA Mount 75 x 75 |                    | VESA Mount 100 x 100 |                    |                    |
| Dimensions(mm)                | 202 x 149 x 40     | 231.1 x 176.1 x 50 | 285 x 189 x 48.9     | 319 x 245 x 51.7   | 410 x 310 x 54.7   |
| Net Weight                    | 1.2 Kg             | 1.9 Kg             | 2Kg                  | 2.9 Kg             | 4.4 Kg             |


|                               | NP-616C(P)           | NP-617C(P)         | NP-618C(P)         | NP-619C(P)         | NP-621C(P)         |
|-------------------------------|----------------------|--------------------|--------------------|--------------------|--------------------|
| <b>Display</b>                |                      |                    |                    |                    |                    |
| Display Type                  | 15.6" TFT LCD        | 17" TFT LCD        | 18.5" TFT LCD      | 19" TFT LCD        | 21.5" TFT LCD      |
| Max. Resolution               | 1366 x 768           | 1280 x 1024        | 1366 x 768         | 1280 x 1024        | 1920 x 1080        |
| Max. Color                    | 16.7M                | 16.2M              | 16.7M              | 16.7M              | 16.7M              |
| Luminance(cd/m <sup>2</sup> ) | 300                  | 350                | 300                | 350                | 250                |
| Contrast Ratio                | 500 : 1              | 1000 : 1           | 1000 : 1           | 1000: 1            | 3000 : 1           |
| Viewing angle                 | 160 (H)/ 160 (V)     | 170 (H)/ 160 (V)   | 170 (H)/ 160 (V)   | 170 (H)/ 165 (V)   | 178 (H)/ 178 (V)   |
| Backlight Lifetime            | 50,000 hrs           | 30,000 hrs         | 50,000 hrs         | 50,000 hrs         | 30,000 hrs         |
| <b>Power Consumption</b>      |                      |                    |                    |                    |                    |
| Power Consumption             | MAX: 20W<br>(816P)   | MAX: 21W<br>(817P) | MAX: 29W<br>(818P) | MAX: 30W<br>(819P) | MAX: 27W<br>(821P) |
| <b>Mechanical</b>             |                      |                    |                    |                    |                    |
| Mounting                      | VESA Mount 100 x 100 |                    |                    |                    |                    |

|                |                    |                  |                      |                  |                  |
|----------------|--------------------|------------------|----------------------|------------------|------------------|
| Dimensions(mm) | 412 x 277.5 x 60.4 | 439 x 348 x 64.8 | 499.6 x 314.6 x 59.9 | 468 x 380 x 64.8 | 557.3x362.3x64.8 |
| Net Weight     | 4.8 Kg             | 5.1 Kg           | 6 Kg                 | 7.3 Kg           | 7.5 Kg           |


### 1.3 Dimensions

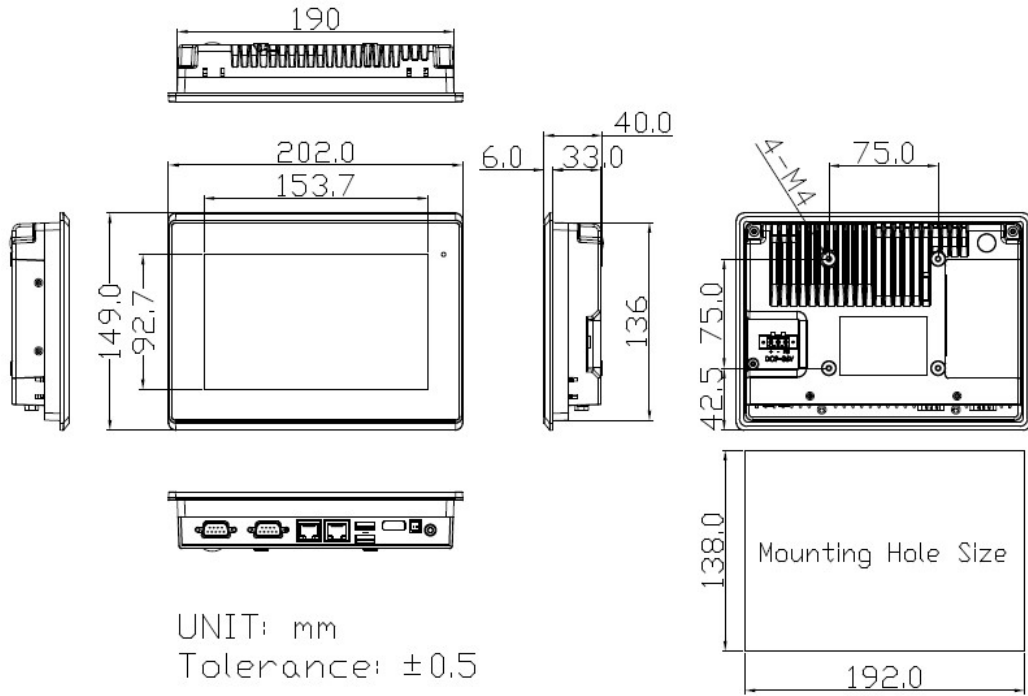


**Figure 1.1: Dimensions of NP-607C(P)**

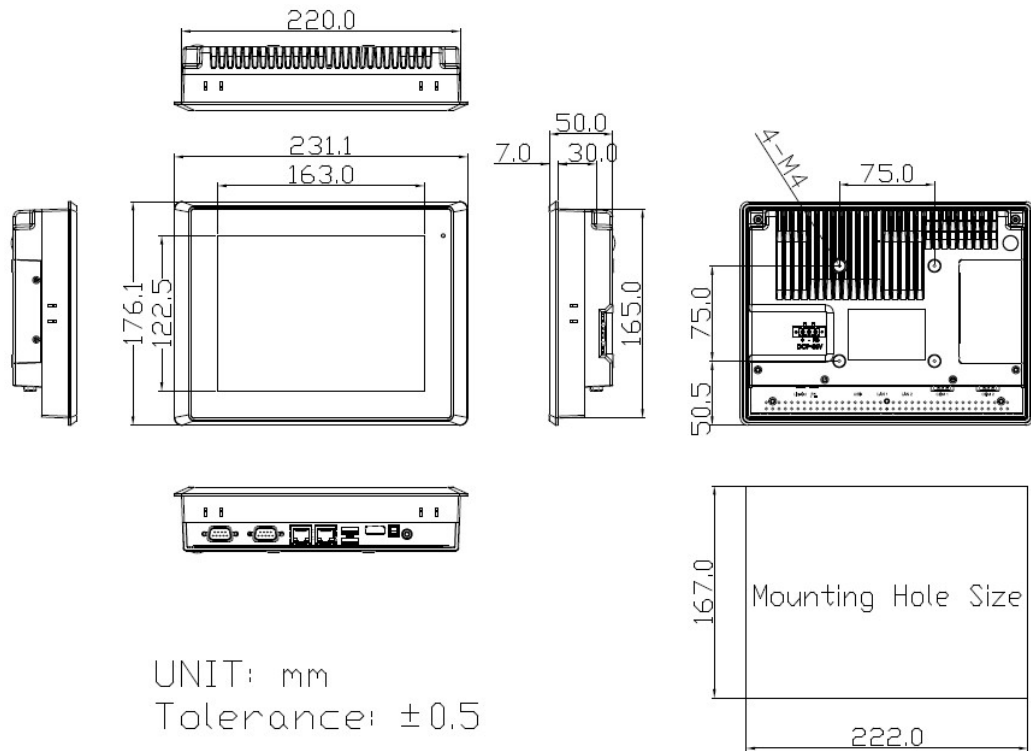


**Figure 1.2: Dimensions of NP-608C(P)**

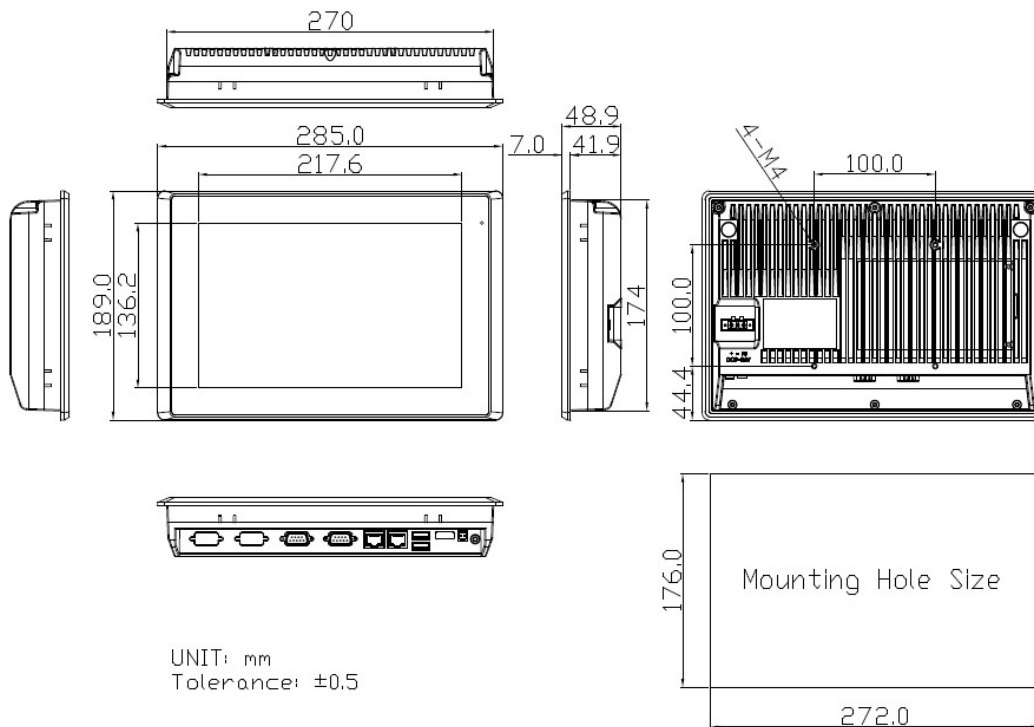


**Figure 1.3: Dimensions of NP-610C(P)**

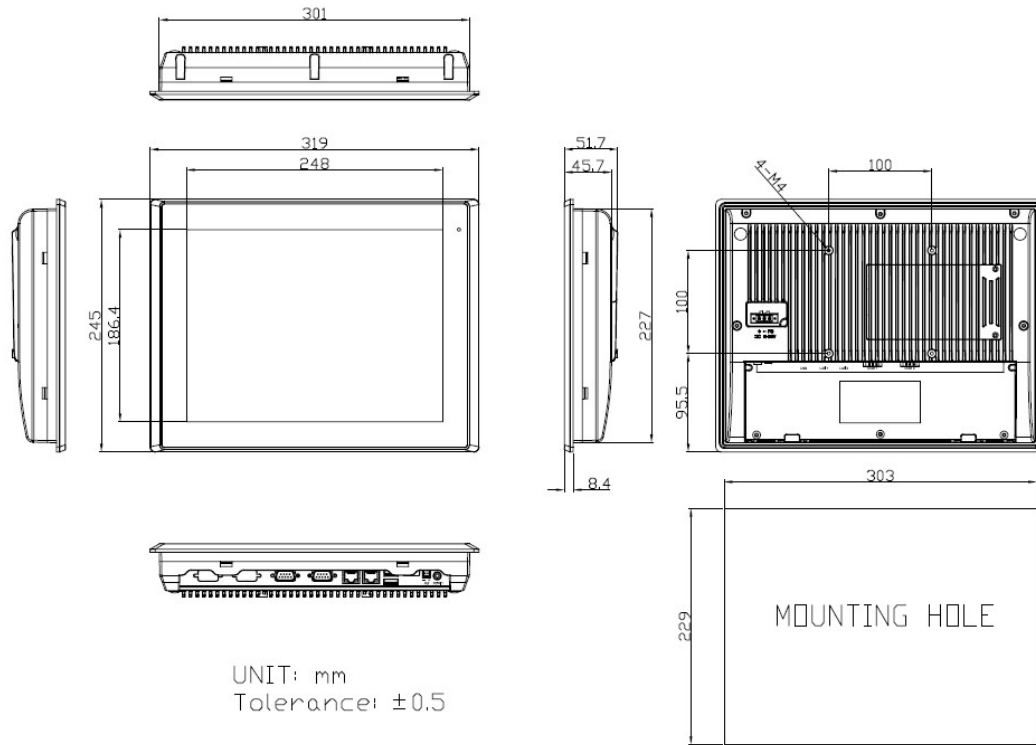


**Figure 1.4: Dimensions of NP-612C(P)**

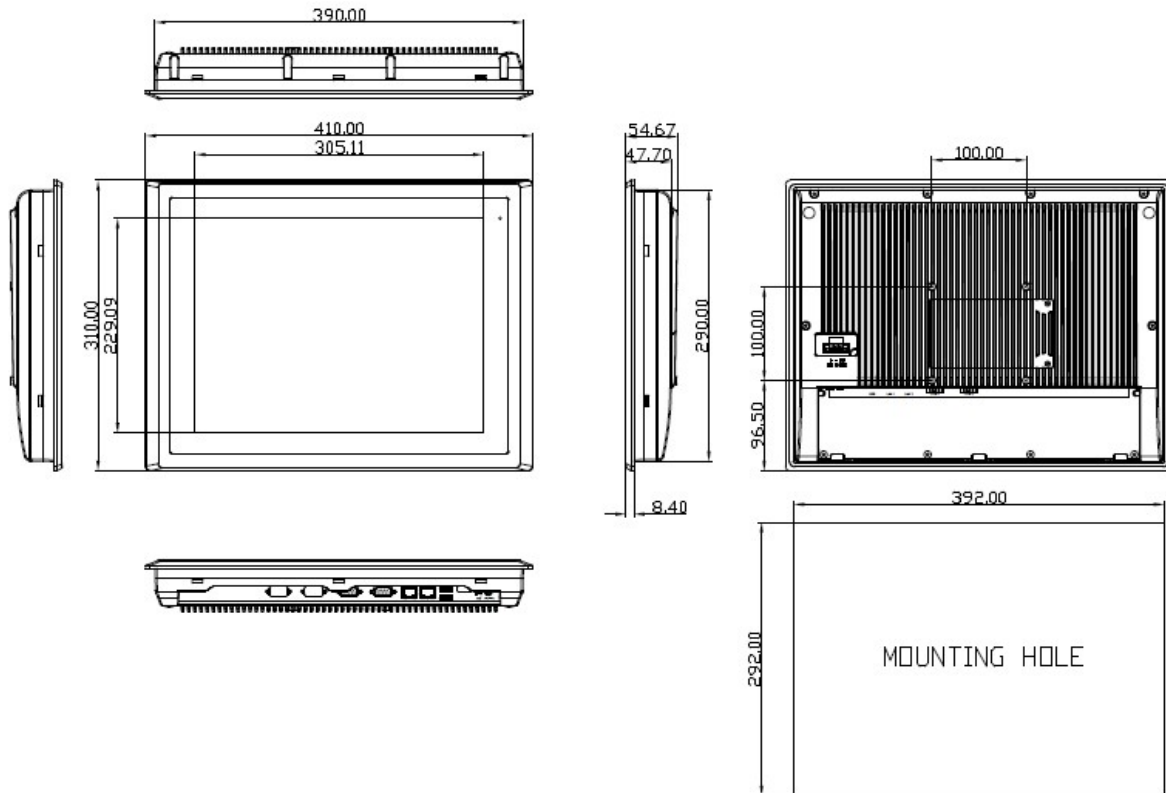


**Figure 1.5: Dimensions of NP-615C(P)**

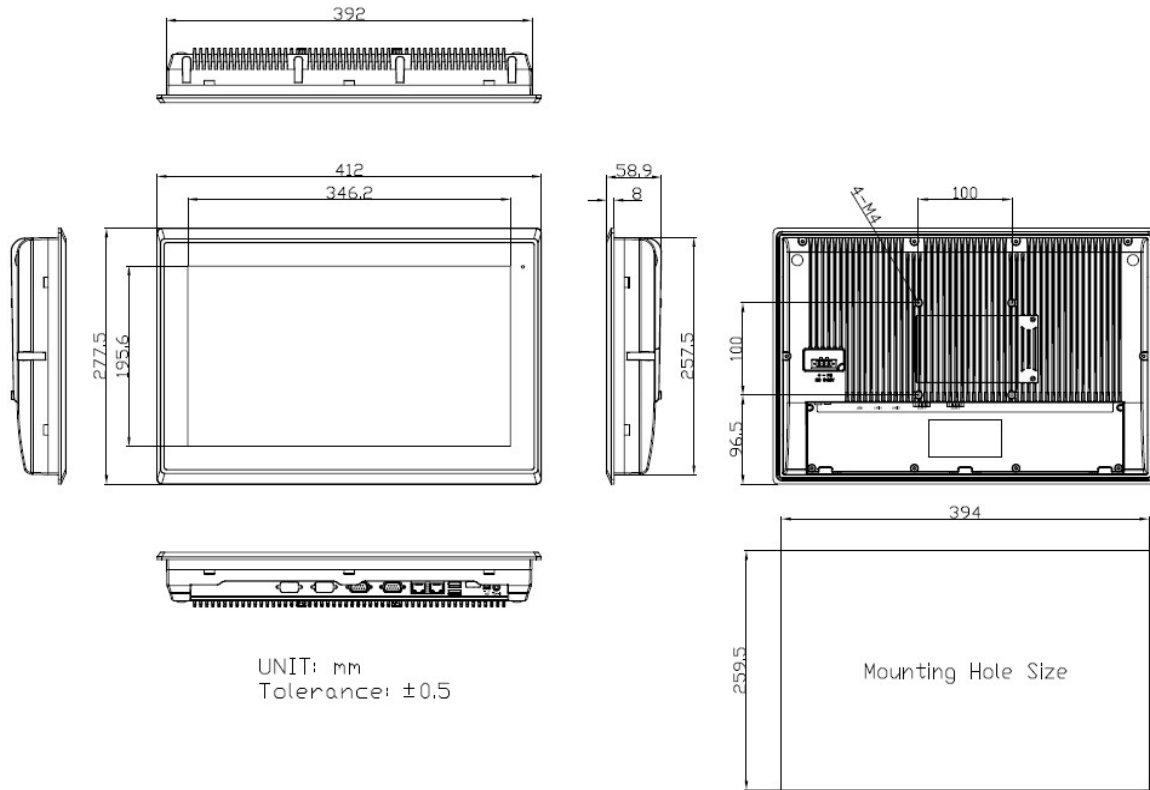


**Figure 1.6: Dimensions of NP-616C(P)**

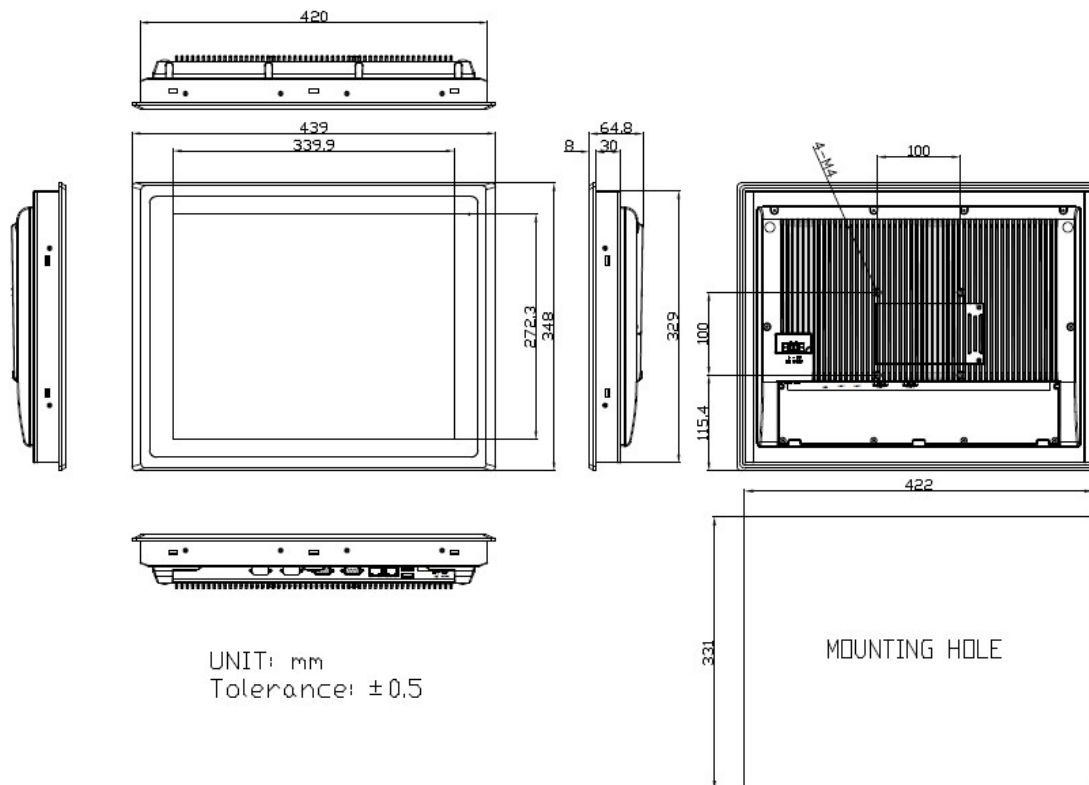

**Figure 1.7: Dimensions of NP-617C(P)**

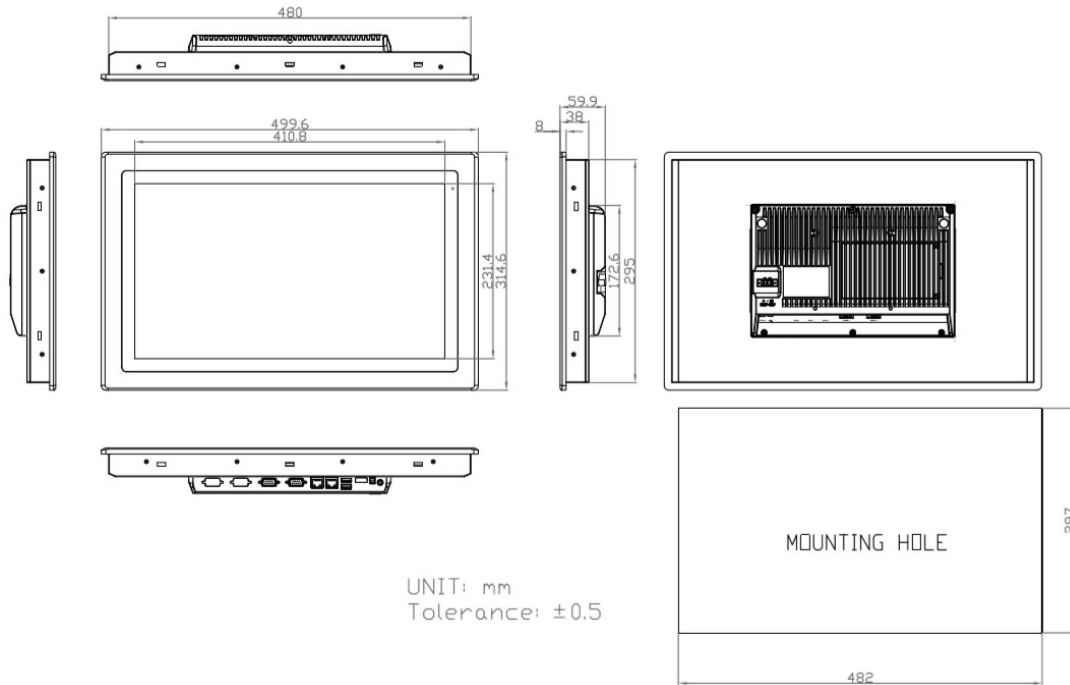


**Figure 1.8: Dimensions of NP-618C(P)**

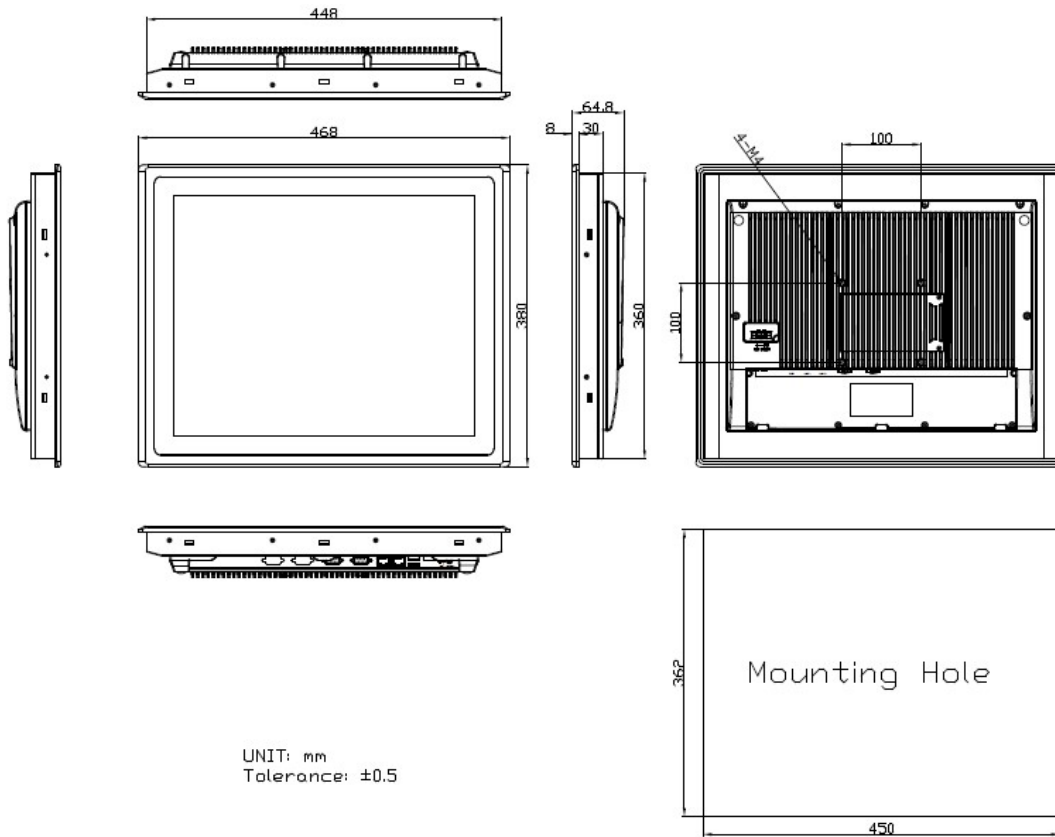


**Figure 1.9: Dimensions of NP-619C(P)**



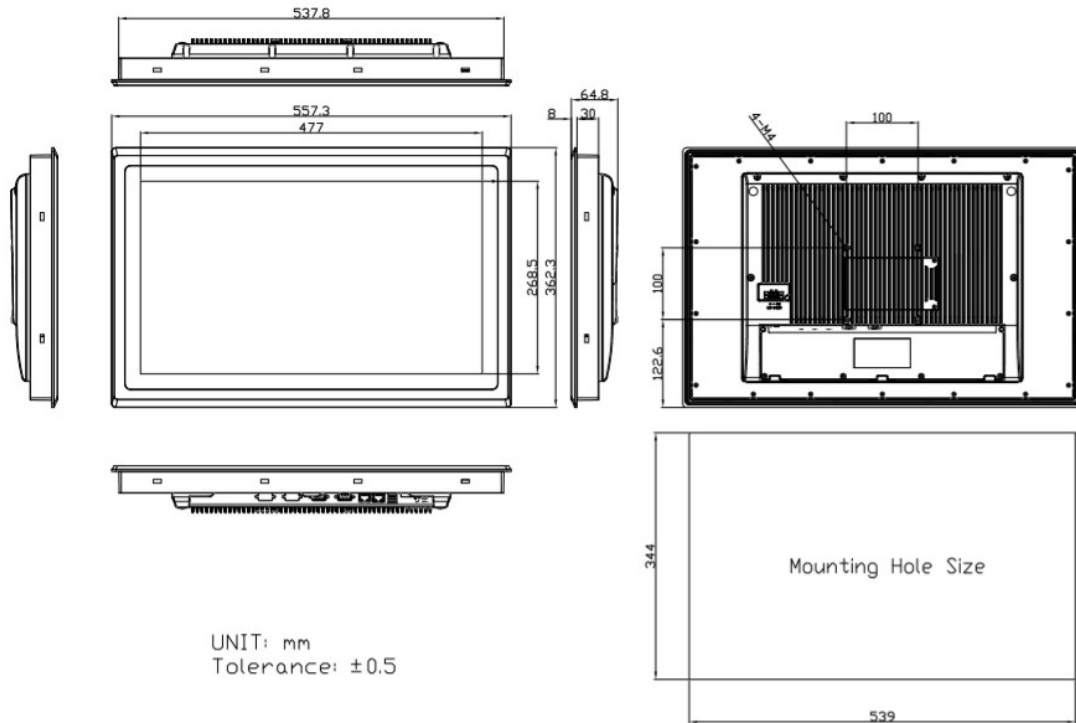

**Figure 1.10: Dimensions of NP-621C (Resistive Touch)**

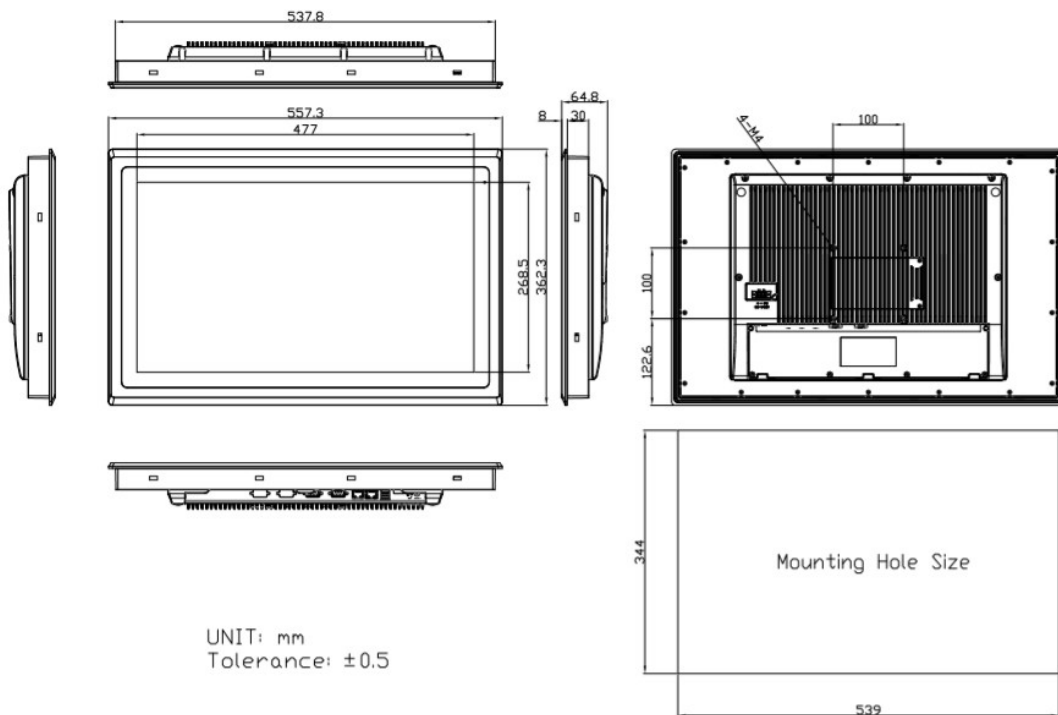

**Figure 1.11: Dimensions of NP-621CP (Projected Capacitive Touch)**

## **1.4 Brief Description of NP-6XXC**

There are 7", 8", 10.1", 12.1", 15", 15.6", 17", 18.5", 19" and 21.5" Industrial Compact Size Panel PC in NP-6XXC series, which comes with flat front panel touch screen and fanless design. It is powered by Intel Atom E3845(1.91GHz) or Celeron N2930(1.83GHz) CPU built-in, 4GB DDR3L 1333MHz (8GB is for option). NP-6XXC series is 9~36V DC wide-ranging power input and IP66 compliant front panel. Optional projected capacitive touch support 7H anti-scratch surface is ideal for use as PC-based controller for Industrial Automation & Factory Automation.



**Figure 1.12: Front View of NP-6XXC Series**



**Figure 1.13: Rear View of NP-607C/608C**



**Figure 1.14: Rear View of NP-610C**



**Figure 1.15: Rear View of NP-612C**



**Figure 1.16: Rear View of NP-615C**



**Figure 1.17: Rear View of NP-616C**



**Figure 1.18: Rear View of NP-617C**



**Figure 1.19: Rear View of NP-618C**



**Figure 1.20: Rear View of NP-619C**



**Figure 1.21: Rear View of NP-621C**

## 1.5 Installation of HDD – 7” and 8”

### Step 1

There are two screws to deal with when enclosing or removing the chassis.

Gently remove two screws.



### Step 2

There is a SSD card in the bracket. Gently remove the screw, then carefully pull SSD card.



### Step 3

Take out SSD Card bracket.






#### Step 4

You can replace SSD card by unscrewing four screws as shown in the picture.

Note: four screws are packed in the packing list.

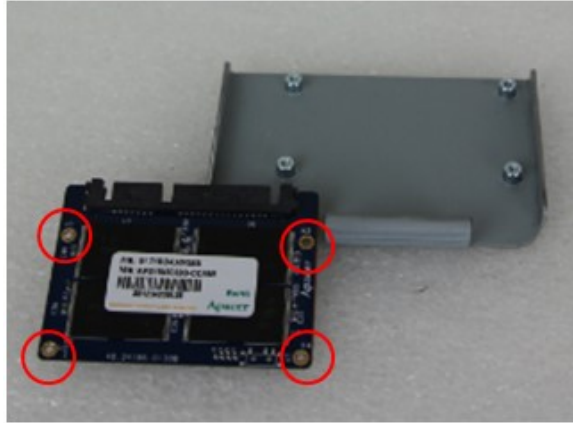

#### Step 5

There is a SD card hole in the side of the machine. You can replace SD card from there.



#### Step 6

Gently screw the screws.



## 1.6 Installation of HDD – 10.1”/18.5”

### Step 1

There are two screws to deal with when enclosing or removing the chassis.

Gently remove two screws.



### Step 2

Take the storage cover beside the HMI.



### Step 3

You can put or remove HDD into the machine by pulling the HDD bracket.



**Step 4**

There is a SD hole in the side of machine.  
You can replace SD card from there.

**1.7 Installation of HDD – 12.1”/15”/15.9”/17”/19”/21.5”****Step 1**

There are 2 screws to deal with when enclosing or removing the chassis.  
Gently remove 2 screws.

**Step 2**

You can put or remove HDD into the machine by pulling the HDD bracket.



### Step 3

You can remove HDD by unscrewing 4 screws in the HDD bracket.

Note: 4 screws are packed in the packing package.




### Step 4

There is a SD hole in the side of machine. You can replace SD card from there.



## 1.8 VESA Mounting


The NP-6XXC series is designed to be VESA mounted as shown in Picture. Just carefully place the unit through the hole and tighten the given screws from the rear to secure the mounting.

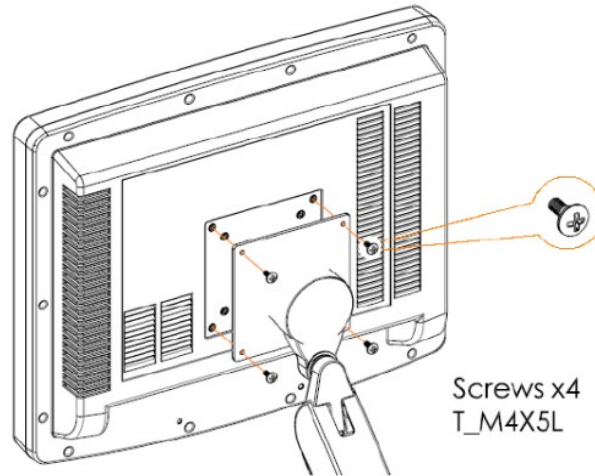

**Figure 1.22: NP-6XXC Series VESA Mounting**

## 1.9 Panel Mounting

There are four holes located along the four sides of the HMI. Insert the clamp from the four sides and tighten them with the nuts provided.

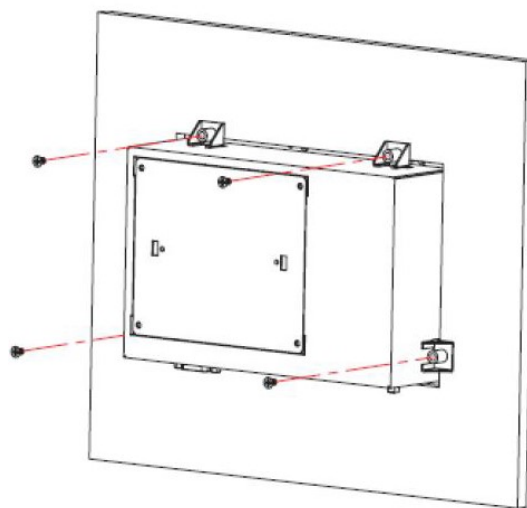

**Figure 1.23: NP-6XXC Series Panel Mounting**

## 2.1 Motherboard Introduction


SBC-7111 is a 4" industrial motherboard developed on the basis of Intel Bay trail-I/M Processors, which provides abundant peripheral interfaces to meet the needs of different customers. Also, it features dual GbE ports, 4-COM ports and one Mini PCIE configuration, one VGA port, one HDMI port, one LVDS interface. To satisfy the special needs of high-end customers, CN1 and CN2 and CN3 richer extension functions. The product is widely used in various sectors of industrial control.

## 2.2 Specifications

| Specifications            |   |
|---------------------------|---|
| <b>Board Size</b>         | 170mm x 113mm   |
| <b>CPU Support</b>        | Intel Atom E3845 / 1.91GHz (4cores, 10W, onboard)<br>Intel Celeron N2930 / 1.83 up to 2.16GHz (4cores, option)                      |
| <b>Chipset</b>            | SoC   |
| <b>Memory Support</b>     | Onboard 2GB DDR3L SDRAM (N2930, option)<br>Onboard 4GB DDR3L SDRAM (E3845/N2930, option)<br>Onboard 8GB DDR3L SDRAM (N2930, option) |
| <b>Graphics</b>           | Intel® HD Graphics 542/792MHz (E3845)<br>Intel® HD Graphics 313/854MHz (N2930)  |
| <b>Display Mode</b>       | 1 x HDMI Port<br>1 x LVDS (18/24-bit dual LVDS)<br>1 x CRT Port   |
| <b>Support Resolution</b> | Up to 1920 x 1200 for HDMI<br>Up to 1920 x 1200 for LVDS (PS8625)<br>Up to 1920 x 1200 for CRT                                      |
| <b>Dual Display</b>       | HDMI + LVDS<br>HDMI + CRT<br>LVDS + CRT   |
| <b>Super I/O</b>          | ITE IT8518E<br>Fintek F81216AD  |

|                         |   |
|-------------------------|---|
| <b>BIOS</b>             | AMI/UEFI  |
| <b>Storage</b>          | 1 x SATAII Connector (7P, option)<br>1 x SATAII Connector (7P + 15P)<br>1 x SD Slot(USB2 to SD, option)   |
| <b>Ethernet</b>         | 2 x PCIe Gbe LAN by Intel 82574L  |
| <b>USB</b>              | USB 3.0 Hub(USB5534B):<br>2 x USB 3.0/USB 2.0 (type A)stack ports (E2-USB5/E2-USB6)<br>1 x USB 2.0 Pin header for CN1 (E2-USB8)<br>1 x USB 2.0 for USB Touch (E2-USB7)<br>USB 2.0 Hub(USB2514)<br>1 x USB 2.0 Pin header for CN2 (E-USB9)<br>2 x USB 2.0 Pin header for CN3 (E-USB10/E-USB11)<br>1 x USB 2.0 for MPCIE1 (E-USB12) |
| <b>Touch Ctrl</b>       | 1 x Touch ctrl header for TCH1 (PM6000 for USB4 or COM6)  |
| <b>Serial</b>           | 1 x RS232/RS422/RS485 port, DB9 connector for external (COM1)<br>Pin 9 w/5V/12V/Ring select<br>1 x RS232 port, DB9 connector for external (COM2)<br>Pin 9 w/5V/12V/Ring select<br>2 x UART for CN3 (COM3,COM4)<br>2 x RS422/485 header for CN2 (IT8518E:COM5/COM6)  |
| <b>Digital I/O</b>      | 8-bit digital I/O by Pin header (CN2)<br>4-bit digital Input<br>4-bit digital Output<br>4-bit digital I/O by Pin header (CN3)<br>2-bit digital Input<br>2-bit digital Output  |
| <b>Battery</b>          | Support CR2477 Li battery by 2-pin header (BAT1/CMOS)   |
| <b>Audio</b>            | Support Audio via Realtek ALC662-VD HD audio codec<br>Support Line-in, Line-out, MIC by 2x6-pin header  |
| <b>Expansion Bus</b>    | 1 x mini-PCI-express slot<br>1 x PCI-express (CN3)  |
| <b>Power Management</b> | Wide Range DC9V~36V input<br>1 x 3-pin power input connector(DC_IN1/DC6~36V)<br>1 x 4-Pin power input connector (DC_IN2/DC12V)  |

|                                    |  |
|------------------------------------|--|
| <b>Switches and LED Indicators</b> | <ul style="list-style-type: none"> <li>1 x Power on/off switch (BT1/BT2/P_SW/CN2/CN3)</li> <li>1 x Reset (CN2)</li> <li>1 x Power LED status (CN1)</li> <li>1 x HDD LED status (CN2)</li> <li>1 x Buzzer</li> </ul>  |
| <b>External I/O port</b>           | <ul style="list-style-type: none"> <li>2 x COM Ports (COM1/COM2)</li> <li>1 x Power on/off switch (BT1)</li> <li>2 x USB 3.0/2.0 Ports (stack)</li> <li>2 x RJ45 GbE LAN Ports</li> <li>1 x HDMI Port</li> <li>1 x Stack audio Jack (Line out)</li> </ul>  |
| <b>Temperature</b>                 | <p>Operating: -20°C to 70°C</p> <p>Storage: -40°C to 85°C</p>  |
| <b>Humidity</b>                    | 10% - 90%, non-condensing, operating   |
| <b>Power Consumption</b>           | <ul style="list-style-type: none"> <li>12V /0.80A (Intel Atom E3845 processor with 4GB DDR3L DRAM)</li> <li>12V /0.60A (Intel Atom E3815 processor with 2GB DDR3L DRAM)</li> <li>12V /0.70A (Intel Celeron N2930 processor with 4GB DDR3L DRAM)</li> </ul> |
| <b>EMI/EMS</b>                     | Meet CE/FCC class A  |

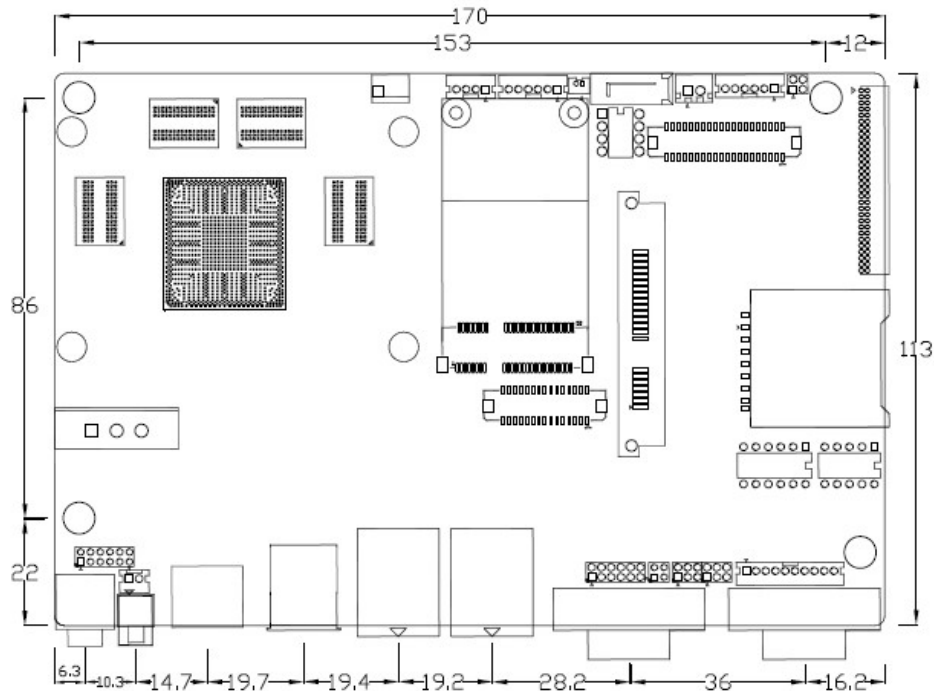



(units :mm)

Figure 2.1: Motherboard Dimensions

## 2.3 Jumpers and Connectors Location


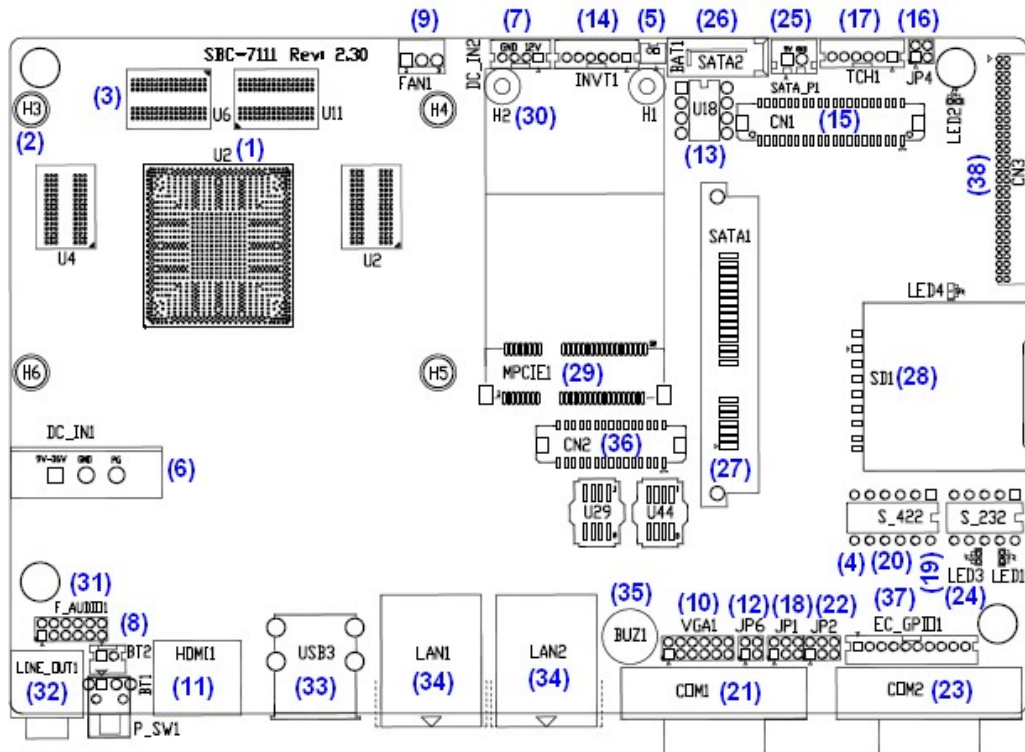


Figure 2.2: Jumpers and Connectors Location- Board Top

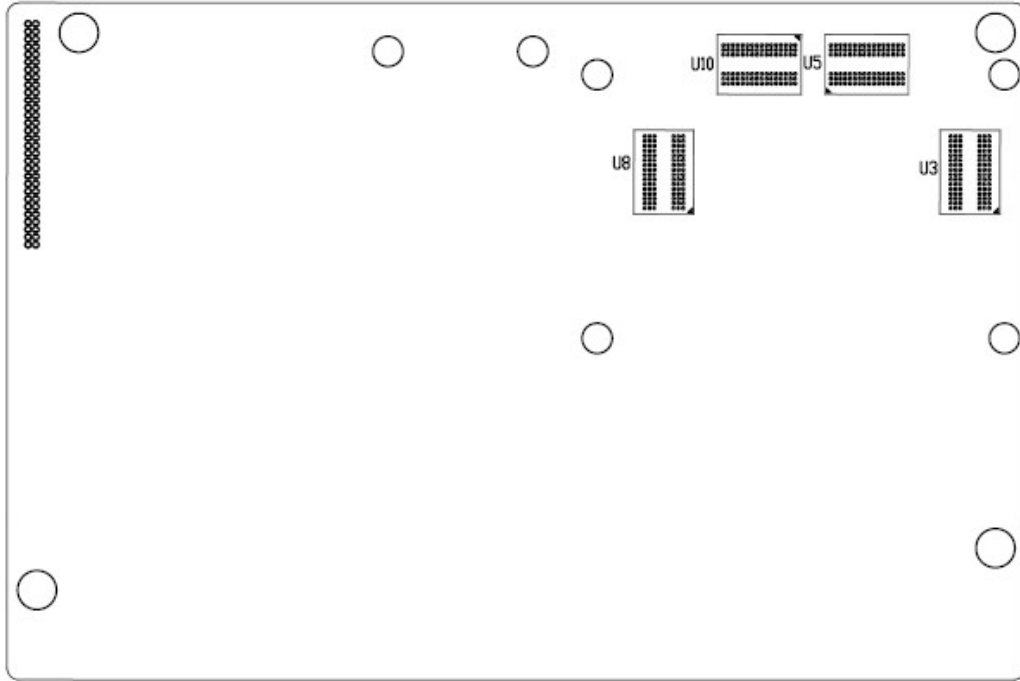

**Figure 2.3: Jumpers and Connectors Location- Board Bottom**

## 2.4 Jumpers Setting and Connectors

### 1. U2:

(FCBGA1170), onboard Intel Bay trail-I/M Processors.

| Model                   | Processor |                       |               |           |         |
|-------------------------|-----------|-----------------------|---------------|-----------|---------|
|                         | Number    | PBF                   | Cores/Threads | TDP       | Remarks |
| SBC-7111-N2930-4G       | N2930     | 1.83 up to<br>2.16GHz | 4 / 4         | 4.5 /7.5W |         |
| SBC-7111-N2930-4G-SW    |           |                       |               |           |         |
| SBC-7111-N2930P-4G      |           |                       |               |           |         |
| SBC-7111-N2930-2G       |           |                       |               |           |         |
| SBC-7111-N2930P-CN3V-2G |           |                       |               |           |         |
| SBC-7111-N2930-8G       |           |                       |               |           |         |
| SBC-7111-E3845-4G       | E3845     | 1.91GHz               | 4 / 4         | 10W       | option  |

### 2. H3/H4/H5/H6 (option):

U2 Heat Sink Screw holes, four screw holes for Intel Bay trail-I/M Processors Heat Sink assemble.

### 3. U3/U4/U5/U6/U8/U9/U10/U11:

(FBGA96), Onboard DDR3L Memory.

| Model | Memory |
|-------|--------|
|       |        |

|                         |              |
|-------------------------|--------------|
| SBC-7111-N29304G        | 4GB          |
| SBC-7111-N2930-4G-SW    | 4GB (option) |
| SBC-7111-N2930P-4G      | 4GB (option) |
| SBC-7111-E3845-4G       | 4GB (option) |
| SBC-7111-N2930-2G       | 2GB (option) |
| SBC-7111-N2930P-CN3V-2G | 2GB (option) |
| SBC-7111-N2930-8G       | 8GB (option) |

**4. S-422 (PIN6):**

(Switch), ATX Power and Auto Power on jumper setting.

|   |                                |
|---|--------------------------------|
| S-422(Switch)   | Mode                           |
| Pin6 (Off)  | ATX Power                      |
| Pin6 (On)   | <b>Auto Power on (Default)</b> |
| Note: ATX Power mode needs to change BIOS data, please contact technical support. |                                |

**5. BAT1:**

(1.25mm Pitch 1x2 Wafer Pin Header) 3.0V Li battery is embedded to provide power for CMOS.

| Pin# | Signal Name |
|------|-------------|
| 1    | VBAT        |
| 2    | Ground      |

**6. DC\_IN1:**

(5.08mm Pitch 1x3 Pin Connector), DC9~36V System power input connector.

| Pin# | Power Input |
|------|-------------|
| 1    | DC+6V~36V   |
| 2    | Ground      |
| 3    | FG          |

| Model                | DC_IN1        |
|----------------------|---------------|
| SBC-7111-N2930-4G    | 180°Connector |
| SBC-7111-N2930-4G-SW | 180°Connector |
| SBC-7111-N2930-2G    | 180°Connector |
| SBC-7111-N2930-8G    | 180°Connector |
| SBC-7111-E3845-4G    | 180°Connector |
| SBC-7111-N2930P-4G   | 45°Connector  |

|                         |              |
|-------------------------|--------------|
| SBC-7111-N2930P-CN3V-2G | 45°Connector |
|-------------------------|--------------|

**7. DC\_IN2 (option):**

(2.0mm Pitch 1x8 wafer Pin Header) DC12V System power input connector.

| Pin# | Signal Name            |
|------|------------------------|
| 1    | VCC_BAT (DC+12V input) |
| 2    | VCC_BAT (DC+12V input) |
| 3    | Ground                 |
| 4    | Ground                 |

**8. BT1/BT2/P\_SW (option):**

**Power on/off button**, use to connect power switch button. The two pins are disconnected under normal condition. You may short them temporarily to realize system startup & shutdown or awaken the system from sleep state.

| Model                   | BT1 | BT2 | P_SW1 |
|-------------------------|-----|-----|-------|
| SBC-7111-N2930-4G       | ●   | ●   | ○     |
| SBC-7111-N2930P-4G      | ●   | ●   | ○     |
| SBC-7111-N2930-2G       | ●   | ●   | ○     |
| SBC-7111-N2930-8G       | ●   | ●   | ○     |
| SBC-7111-E3845-4G       | ●   | ●   | ○     |
| SBC-7111-N2930P-CN3V-2G | ○   | ●   | ○     |
| SBC-7111-N2930-4G-SW    | ○   | ●   | ●     |

**9. FAN1 (option):**

(2.54mm Pitch 1x3 Pin Header), Fan connector, cooling fans can be connected directly for use. You may set the rotation condition of cooling fan in menu of BIOS CMOS Setup.



| Pin# | Signal Name        |
|------|--------------------|
| 1    | Ground             |
| 2    | VCC                |
| 3    | Rotation detection |



Note:

Output power of cooling fan must be limited under 5W.

| Model                   | FAN1 |
|-------------------------|------|
| SBC-7111-N2930-4G       | ○    |
| SBC-7111-N2930-4G-SW    | ○    |
| SBC-7111-N2930P-4G      | ○    |
| SBC-7111-N2930P-CN3V-2G | ○    |
| SBC-7111-E3845-4G       | ○    |
| SBC-7111-N2930-2G       | ○    |
| SBC-7111-N2930-8G       | ○    |

**10. VGA1:**


(CRT 2.0mm Pitch 2x6 Pin Header), Video Graphic Array Port, Provide 2x6Pin cable to VGA Port.

| Signal Name | Pin# | Pin# | Signal Name  |
|-------------|------|------|--------------|
| CRT_RED     | 1    | 2    | Ground       |
| CRT_GREEN   | 3    | 4    | Ground       |
| CRT_BLUE    | 5    | 6    | VGA_EN       |
| CRT_H_SYNC  | 7    | 8    | CRT_DDCCDATA |
| CRT_V_SYNC  | 9    | 10   | CRT_DDCCCLK  |
| Ground      | 11   | 12   | Ground       |

| VGA hot plug setting:                           |                         |
|---|-------------------------|
| VGA1 (Pin Header)                               | Function                |
| Pin4-Pin6 (Close)                               | VGA Simulation Disabled |
| Pin4-Pin6 (Open)                                | VGA Simulation Enabled  |
| Use the 2.0mm jumper cap to close pin4 and pin6 |                         |


**11. HDMI1:**

(HDMI 19P Connector), High Definition Multimedia Interface connector.



**12. JP6:**

(2.0mm Pitch 2x2 Pin Header), LVDS jumper setting.



| JP6 | Function (CN1) |
|-----|----------------|
|-----|----------------|

|                          |                                    |
|--------------------------|------------------------------------|
| Pin1-Pin2 (Close)        | Single channel LVDS                |
| <b>Pin1-Pin2 (Open)</b>  | <b>Dual channel LVDS (Default)</b> |
| <b>Pin3-Pin4 (Close)</b> | <b>8/24 bit (Default)</b>          |
| Pin3-Pin4 (Open)         | 6/18 bit                           |


**13. U18:**

AT24C02-DIP8, The EEPROM IC ( U18 ) is the set of LVDS resolution. If you need other resolution settings, please upgrade U18 data.

| Model                   | LVDS resolution     |
|-------------------------|---------------------|
| SBC-7111-N2930-4G       | 1280*1024 (Default) |
| SBC-7111-N2930-4G-SW    | 800*480 (option)    |
| SBC-7111-N2930P-4G      | 800*600 (option)    |
| SBC-7111-N2930P-CN3V-2G | 1024*768 (option)   |
| SBC-7111-N2930-2G       | 1920*1080 (option)  |
| SBC-7111-N2930-8G       | .....               |
| SBC-7111-E3845-4G       |                     |

**14. INVT1:**

(2.0mm Pitch 1x6 wafer Pin Header), Backlight control connector for LVDS.



| Pin# | Signal Name |
|------|-------------|
| 1    | +DC12V      |
| 2    | +DC12V      |
| 3    | Ground      |
| 4    | Ground      |
| 5    | BKLT_EN_OUT |
| 6    | BKLT_CTRL   |

**15. CN1:**

(1.25mm Pitch 2x20 Connector, DF13-40P), for 18/24-bit LVDS output connector, fully supported by Parad PS8625(DP to LVDS), the interface features dual channel 24-bit output. Low Voltage Differential Signaling, A high speed, low power data transmission standard used for display connections to LCD panels.


| Function | Signal Name | Pin# | Pin# | Signal Name | Function |
|----------|-------------|------|------|-------------|----------|
|----------|-------------|------|------|-------------|----------|

|           |             |    |         |           |           |
|-----------|-------------|----|---------|-----------|-----------|
| LVDS      | 12V_S0      | 2  | 1       | 12V_S0    | LVDS      |
|           | BKLT_EN_OUT | 4  | 3       | BKLT_CTRL |           |
|           | Ground      | 6  | 5       | Ground    |           |
|           | LVDS_VDD5   | 8  | 7       | LVDS_VDD5 |           |
|           | LVDS_VDD3   | 10 | 9       | LVDS_VDD3 |           |
|           | Ground      | 12 | 11      | Ground    |           |
|           | LA_D0_P     | 14 | 13      | LA_D0_N   |           |
|           | LA_D1_P     | 16 | 15      | LA_D1_N   |           |
|           | LA_D2_P     | 18 | 17      | LA_D2_N   |           |
|           | LA_D3_P     | 20 | 19      | LA_D3_N   |           |
|           | LA_CLKP     | 22 | 21      | LA_CLKN   |           |
|           | LB_D0_P     | 24 | 23      | LB_D0_N   |           |
|           | LB_D1_P     | 26 | 25      | LB_D1_N   |           |
|           | LB_D2_P     | 28 | 27      | LB_D2_N   |           |
|           | LB_D3_P     | 30 | 29      | LB_D3_N   |           |
| LB_CLKP   | 32          | 31 | LB_CLKN |           |           |
|           | Ground      | 34 | 33      | Ground    | E2_USB8   |
| E2-USB8   | E2_USB8_P   | 36 | 35      | E2_USB8_N |           |
|           | 5V_S5_USB   | 38 | 37      | 5V_S5_USB |           |
| Power LED | PWR_LED+    | 40 | 39      | Ground    | Power LED |

#### 16. JP4 (Reserve):

(2.0mm Pitch 2x2 wafer Pin Header).

| JP4                | Function         |
|--------------------|------------------|
| Open 3-4 (default) | -                |
| Open 1-2 (default) | -                |
| Close 3-4 (option) | Hardware Enabled |

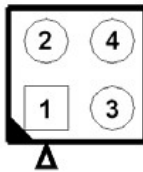

#### 17. TCH1:

(2.0mm Pitch 1x6 wafer Pin Header), internal Touch controller connector.

| Pin# | Signal Name |
|------|-------------|
| 1    | SENSE       |
| 2    | X+          |

|   |           |
|---|-----------|
| 3 | X-        |
| 4 | Y+        |
| 5 | Y-        |
| 6 | GND_EARCH |

|                         |              |
|-------------------------|--------------|
| Touch interface setting | EC(U44) Data |
| <b>TCH1(PM6000)</b>     | option A     |
| CN1(E2-USB8)            | option B     |

**18. JP1:**

(2.0mm Pitch 2x3 Pin Header), COM1 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM1 port.

| JP1 Pin#         | Function                                  |
|------------------|---|
| <b>Close 1-2</b> | <b>COM1 RI (Ring Indicator) (default)</b> |
| Close 3-4        | COM1 Pin9: DC+5V (option)                 |
| Close 5-6        | COM1 Pin9: DC+12V (option)                |

**19. S\_232:**

(Switch), COM1 jumper setting, it provides selectable RS232 or RS422 or RS485 serial signal output.

| Function               | S_232 Pin# (switch)                     |
|------------------------|---|
| <b>RS232 (Default)</b> | <b>ON: Pin1, Pin2, Pin3, Pin4, Pin5</b> |
| RS422 (option)         | OFF: Pin1, Pin2, Pin3, Pin4, Pin5       |
| RS485 (option)         | OFF: Pin1, Pin2, Pin3, Pin4, Pin5       |

**20. S\_422:**

(Switch), COM1 setting, it provides selectable RS232 or RS422 or RS485 serial signal output.


| Function               | S_422 Pin# (switch)                      |
|------------------------|--|
| <b>RS232 (Default)</b> | <b>OFF: Pin1, Pin2, Pin3, Pin4, Pin5</b> |
| RS422 (option)         | ON: Pin1, Pin2, Pin3, Pin4, Pin5         |
| RS485 (option)         | ON: Pin1, Pin2, Pin3, Pin4, Pin5         |

| S-422 (switch) | Mode                           |
|----------------|--------------------------------|
| Pin6 (Off)     | ATX Power                      |
| Pin6 (On)      | <b>Auto Power on (Default)</b> |

**21. COM1:**



**(Type DB9M)**, Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices. COM1 port is controlled by pins No.1~6 of JP1, select output Signal RI or 5V or 12V, for details, please refer to description of JP1 and S\_232 and S\_422 setting.



| <b>RS232 (Default)</b>   |                                       |
|--|---------------------------------------|
| Pin#   | Signal Name                           |
| 1  | DCD# (Data Carrier Detect)            |
| 2  | RXD (Received Data)                   |
| 3  | TXD (Transmit Data)                   |
| 4  | DTR (Data Terminal Ready)             |
| 5  | Ground                                |
| 6  | DSR (Data Set Ready)                  |
| 7  | RTS (Request To Send)                 |
| 8  | CTS (Clear To Send)                   |
| 9  | <b>JP1 select Setting (RI/5V/12V)</b> |
| BIOS Setup:<br>Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration <b>【RS-232】</b> |                                       |

| <b>RS422 (option)</b>  |             |
|--|-------------|
| Pin#   | Signal Name |
| 1  | 422_RX+     |
| 2  | 422_RX-     |
| 3  | 422_TX-     |
| 4  | 422_TX+     |
| 5  | Ground      |
| 6  | NC          |
| 7  | NC          |
| 8  | NC          |
| 9  | NC          |
| BIOS Setup:<br>Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration <b>【RS-422】</b> |             |

| <b>RS485 (option)</b> |             |
|-----------------------|-------------|
| Pin#                  | Signal Name |

|   |        |
|---|--------|
| 1   | NC     |
| 2   | NC     |
| 3   | 485-   |
| 4   | 485+   |
| 5   | Ground |
| 6   | NC     |
| 7   | NC     |
| 8   | NC     |
| 9   | NC     |
| BIOS Setup:<br>Advanced/F81216SEC Super IO Configuration/Serial Port 1 Configuration 【RS-485】 |        |


**22. JP2:**

(2.0mm Pitch 2x3 Pin Header), COM2 jumper setting, pin 1~6 are used to select signal out of pin 9 of COM2 port.

| JP2 Pin#         | Function                                  |
|------------------|---|
| <b>Close 1-2</b> | <b>COM2 RI (Ring Indicator) (default)</b> |
| Close 3-4        | COM2 Pin9: DC+5V (option)                 |
| Close 5-6        | COM2 Pin9: DC+12V (option)                |

**23. COM2:**

**(Type DB9M)**,Rear serial port, standard DB9 Male serial port is provided to make a direct connection to serial devices.



| Pin# | Signal Name                           |
|------|---------------------------------------|
| 1    | DCD# (Data Carrier Detect)            |
| 2    | RXD (Received Data)                   |
| 3    | TXD (Transmit Data)                   |
| 4    | DTR (Data Terminal Ready)             |
| 5    | Ground                                |
| 6    | DSR (Data Set Ready)                  |
| 7    | RTS (Request To Send)                 |
| 8    | CTS (Clear To Send)                   |
| 9    | <b>JP2 select Setting (RI/5V/12V)</b> |

**24. LED1, LED2, LED3, LED4 (option) :**

LED1: LED STATUS. Green LED for Motherboard Power Good status.

LED2: LED STATUS. Green LED for Touch Power Status.

LED3: LED STATUS. Green LED for EC Power status.

LED4: LED STATUS. Green LED for Motherboard Power Good status.

**25. SATA\_P (option):**

(2.5mm Pitch 1x2 box Pin Header), One onboard 5V output connector are reserved to provide power for SATA devices.

| Pin# | Signal Name |
|------|-------------|
| 1    | +DC5V       |
| 2    | Ground      |



**Note:**

**Output current of the connector must not be above 1A.**

| Model                   | SATA_P (Wafer) |
|-------------------------|----------------|
| SBC-7111-N2930-4G       | ○              |
| SBC-7111-N2930-4G-SW    | ○              |
| SBC-7111-N2930P-4G      | ○              |
| SBC-7111-N2930P-CN3V-2G | ○              |
| SBC-7111-E3845-4G       | ○              |
| SBC-7111-N2930-2G       | ○              |
| SBC-7111-N2930-8G       | ○              |

**26. SATA2(option):**

(SATA 7Pin), SATA Connectors, one SATA connector is provided with transfer speed up to 3.0Gb/s.

| Model                   | SATA2 (Connectors) |
|-------------------------|--------------------|
| SBC-7111-N2930-4G       | ○                  |
| SBC-7111-N2930-4G-SW    | ○                  |
| SBC-7111-N2930P-4G      | ○                  |
| SBC-7111-N2930P-CN3V-2G | ○                  |
| SBC-7111-E3845-4G       | ○                  |
| SBC-7111-N2930-2G       | ○                  |
| SBC-7111-N2930-8G       | ○                  |

**27. SATA1:**

(SATA 7Pin+15Pin), SATA Connectors, one SATA connector is provided with transfer speed up to 3.0Gb/s.

**28. SD1:**

(SD card slot), Secure Digital Memory Card socket.

**29. MPCIE1:**

(Socket 52Pin), mini PCIe socket, it is located at the top, it supports mini PCIe devices with USB2.0 and LPC and SMBUS and PCIe signal. MPCIE card size is 30x50.95mm.

**30. H1/H2:**

MPCIE1 SCREW HOLES, H1and H2 for mini PCIE card (30mmx50.95mm) assemble.


**31. F\_AUDIO1:**

(2.0mm Pitch 2X6 Pin Header), Front Audio, An onboard Realtek ALC662-VD codec is used to provide high-quality audio I/O ports. Line Out can be connected to a headphone or amplifier. Line In is used for the connection of external audio source via a Line in cable. MIC is the port for microphone input audio.

| Signal Name | Pin# | Pin# | Signal Name |
|-------------|------|------|-------------|
| +5V         | 1    | 2    | GND_AUD     |
| LINE-OUT-L  | 3    | 4    | LINE-OUT-R  |
| FRONT_JD    | 5    | 6    | LINE1_JD    |
| LINE_IN-L   | 7    | 8    | LINE-IN-R   |
| MIC-IN-L    | 9    | 10   | MIC-IN-R    |
| GND_AUD     | 11   | 12   | MIC1_JD     |

**32. LINE\_OUT1:**

(Diameter 3.5mm Jack), HD Audio port, an onboard Realtek ALC662-VD codec is used to provide high quality audio I/O ports. Line Out can be connected to a headphone or amplifier.




Line out

|       |           |
|-------|-----------|
| Model | LINE_OUT1 |
|-------|-----------|

|                         |   |
|-------------------------|---|
| SBC-7111-N2930-4G       | ● |
| SBC-7111-N2930P-4G      | ● |
| SBC-7111-N2930-2G       | ● |
| SBC-7111-N2930-8G       | ● |
| SBC-7111-E3845-4G       | ● |
| SBC-7111-N2930P-CN3V-2G | ○ |
| SBC-7111-N2930-4G-SW    | ● |

### 33. USB3:

**USB0/USB3:** (Double stack USB type A), Rear USB connector, it provides up to two USB3.0 ports, one USB2.0 port, support USB full-speed and low-speed signaling.

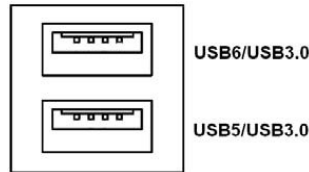


**Each USB Type A Receptacle (2 Ports) Current limited value is 2.0A.**

**If the external USB device current exceeds 2.0A, please separate connectors into different Receptacle.**

### 34. LAN1/LAN2:

**LAN1/LAN2:** (RJ45 Connector), Rear LAN port, Two standard 10/100/1000M RJ-45 Ethernet ports are provided. Use Intel 82574L chipset, LINK LED (green) and ACTIVE LED (yellow) respectively located at the left-hand and right-hand side of the Ethernet port indicate the activity and transmission state of LAN.



| Model                   | RJ45(LAN1) | RJ45(LAN2) |
|-------------------------|------------|------------|
| SBC-7111-N2930-4G       | ●          | ●          |
| SBC-7111-N2930P-4G      | ●          | ●          |
| SBC-7111-N2930-2G       | ●          | ●          |
| SBC-7111-N2930-8G       | ●          | ●          |
| SBC-7111-E3845-4G       | ●          | ●          |
| SBC-7111-N2930P-CN3V-2G | ●          | ○          |
| SBC-7111-N2930-4G-SW    | ●          | ●          |

**35. BUZ1:**

Onboard buzzer

**36. CN2:**

(DF13-30P Connector) For expand output connector, It provides eight GPIO, one RS422 or RS485, one USB2.0, one Power on/off, one Reset.

| Function      | Signal Name  | Pin# | Pin# | Signal Name  | Function     |
|---------------|--------------|------|------|--------------|--------------|
| 5V            | 5V_S5        | 2    | 1    | 5V_S5        | 5V           |
| SOC_GPIO10    | GPIO_IN2     | 4    | 3    | GPIO_IN1     | SOC_SPIO09   |
| SOC_GPIO26    | GPIO_IN4     | 6    | 5    | GPIO_IN3     | SOC_GPIO17   |
| SOC_GPIO05    | GPIO_OUT2    | 8    | 7    | GPIO_OUT1    | SOC_GPIO04   |
| SOC_GPIO08    | GPIO_OUT4    | 10   | 9    | GPIO_OUT3    | SOC_GPIO06   |
|               | Ground       | 12   | 11   | Ground       |              |
| 485 or 422    | 485+_422TX5+ | 14   | 13   | 485-_422TX5- | 485 or 422   |
| RS422 (COM5)  | 422_RX+      | 16   | 15   | 422_RX5-     | RS422 (COM5) |
| 485 or 422    | 485+_422TX6+ | 18   | 17   | 485-_422TX6- | 485 or 422   |
| RS422 (COM6)  | 422_RX6+     | 20   | 19   | 422_RX6-     | RS422 (COM6) |
| 5V            | 5V_S0        | 22   | 21   | HDD_LED+     | HDD LED      |
| USB2.0        | 5V_USB09     | 24   | 23   | 5V_USB09     | USB2.0       |
|               | E_USB9_P     | 26   | 25   | E_USB9_N     |              |
|               | Ground       | 28   | 27   | FP_RST-      | RESET        |
| Power auto on | PWRBTN_ON    | 30   | 29   | Ground       |              |

COM5/COM6 BIOS Setup:  
 Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration **【RS-485】**  
 Advanced/IT8518Super IO Configuration/Serial Port 1 Configuration **【RS-422】**  
 Advanced/IT8518Super IO Configuration/Serial Port 2 Configuration **【RS-485】**  
 Advanced/IT8518Super IO Configuration/Serial Port 2 Configuration **【RS-422】**

**37. EC\_GPIO1 (option):**

(2.0mm Pitch 1X10 Pin Header)For expand connector, it provides eight GPIO.

| Pin# | Signal Name |
|------|-------------|
| 1    | Ground      |
| 2    | GPA0_ONOFF  |
| 3    | GPA1_SPK-   |
| 4    | GPE6_BKLT-  |
| 5    | GPE0_BKLT+  |
| 6    | GPC3_SPK+   |

|    |                |
|----|----------------|
| 7  | BKLT_CTRL_PWR  |
| 8  | ADC6_BKLT_CTRL |
| 9  | ADC7_L_SENSE   |
| 10 | 3.3V           |

| Function                    | EC_GPIO1 |
|-----------------------------|----------|
| Backlight Automatic dimming | ○        |
| Backlight manual dimming    | ○        |

### 38. CN3:

(1.27mm Pitch 2X30 Female Header), for expand output connector, it provides four GPIO, two USB 2.0, one PS/2 mouse, one PS/2 keyboard, two uart, one PCIe1, one SMBus. connected to the TB-528 riser Card.

| Function       | Signal Name | Pin# | Pin# | Signal Name  | Function       |
|----------------|-------------|------|------|--------------|----------------|
|                | 5V_S5_USB   | 1    | 2    | 5V_S5_USB    |                |
|                | 5V_S5_USB   | 3    | 4    | 5V_S5_USB    |                |
|                | USB1011_OC  | 5    | 6    | PSON_ATX-    |                |
| Exp-USB10      | E-USB10_N   | 7    | 8    | E-USB10_P    | Exp-USB10      |
| Exp-USB11      | E-USB11_N   | 9    | 10   | E-USB11_P    | Exp-USB11      |
|                | Ground      | 11   | 12   | Ground       |                |
| Not Support    | PS2_MSCLK   | 13   | 14   | PS2_MSDATA   | Not Support    |
|                | PS2_KBCLK   | 15   | 16   | PS2_KBDATA   |                |
| COM4<br>(UART) | COM4_RI     | 17   | 18   | COM4_DCD-    | COM4<br>(UART) |
|                | COM4_TXD    | 19   | 20   | COM4_RXD     |                |
|                | COM4_DTR    | 21   | 22   | RICOM4_RTS-  |                |
|                | COM4_DSR    | 23   | 24   | COM_CTS-     |                |
|                | Ground      | 25   | 26   | Ground       |                |
| COM3<br>(UART) | COM3_RI     | 27   | 28   | COM3_DCD-    | COM3<br>(UART) |
|                | COM3_TXD    | 29   | 30   | COM3_RXD     |                |
|                | COM3_DTR    | 31   | 32   | DSRCOM3_RTS- |                |
|                | COM3_DSR    | 33   | 34   | DTRCOM3_CTS- |                |
| GPIO23         | SOC_GPIO23  | 35   | 36   | ICH_GPIO22   | GPIO22         |
| GPIO25         | SOC_GPIO25  | 37   | 38   | ICH_GPIO24   | GPIO24         |
|                | Ground      | 39   | 40   | Ground       |                |
| PCIe 1X        | PCIe_TX0_DN | 41   | 42   | PCIe_TX0_DP  | PCIe 1X        |
|                | PCIe_RX0_DN | 43   | 44   | PCIe_RX0_DP  |                |
|                | Ground      | 45   | 46   | Ground       |                |

|       |                 |    |    |                 |               |
|-------|-----------------|----|----|-----------------|---------------|
|       | PCIE_REFCLKO_DN | 47 | 48 | PCIE_REFCLKO_DP |               |
|       | PCIE0_WAKE_N    | 49 | 50 | PLTRST_OUT-     |               |
| SMBUS | SMB_CLK_S0      | 51 | 52 | SMB_DATA_S0     | SMBUS         |
| PCIE  | PCIE_CLKREQ0_N  | 53 | 54 | Ground          |               |
|       | 3P3V_S5         | 55 | 56 | PWRBTN_ON-      | Power Auto on |
|       | 3P3V_S5         | 57 | 58 | 3P3V_S5         |               |
| 12V   | 12V_S0          | 59 | 60 | 12V_S0          | 12V           |

| Model                   | CN3(connector) |
|-------------------------|----------------|
| SBC-7111-N2930-4G       | 90°Connector   |
| SBC-7111-N2930-4G-SW    | 90°Connector   |
| SBC-7111-N2930-2G       | 90°Connector   |
| SBC-7111-N2930-8G       | 90°Connector   |
| SBC-7111-E3845-4G       | 90°Connector   |
| SBC-7111-N2930P-4G      | 90°Connector   |
| SBC-7111-N2930P-CN3V-2G | 180°Connector  |

## Chapter 3 BIOS Setup

### 3.1 Operations after POST Screen

After CMOS discharge or BIOS flashing operation, press [Delete] key to enter CMOS Setup.





After optimizing and exiting CMOS Setup, the POST screen displayed for the first time is as follows and includes basic information on BIOS, CPU, memory, and storage devices.

## 3.2 BIOS Setup Utility

Press [Delete] key to enter BIOS Setup utility during POST, and then a main menu containing system summary information will appear.

## 3.3 Main Settings

| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc. |                     |         |          |          |                           |
|--|---------------------|---------|----------|----------|---------------------------|
| Main   | Advanced            | Chipset | Security | Boot     | Save & Exit               |
| BIOS Information   |                     |         |          |          | Choose the system default |
| BIOS Vendor  | American Megatrends |         |          | Language |                           |
| Core Version   | 5.010               |         |          |          |                           |
| Compliancy   | UEFI 2.4; PI 1.3    |         |          |          |                           |
| Project Version  | 7111I 4.07 x64      |         |          |          |                           |
| Build Date and Time  | 03/03/2016 15:18:10 |         |          |          |                           |
| CPU Configuration  |                     |         |          |          |                           |
| Microcode Patch  | 901                 |         |          |          |                           |
| BayTrail SoC   | DO Stepping         |         |          |          |                           |
| KSC Information  |                     |         |          |          |                           |
| KSC Version  | N/A                 |         |          |          |                           |
| Memory Information   |                     |         |          |          |                           |
| Total Memory   | 4096 MB (DDR3L)     |         |          |          |                           |
| GOP Information  |                     |         |          |          |                           |
| Intel (R) GOP Driver   | [N/A]               |         |          |          |                           |

|  |                  |                       |
|--|------------------|-----------------------|
| TXE Information  |                  | →←: Select Screen     |
| Sec RC Version   | 00.05.00.00      | ↑↓ : Select Item      |
| TXE FW Version   | 01.01.00.1089    | Enter: Select         |
| System Language  | [English]        | +/- : Charge Opt.     |
| System Date  | [Sun 01/01/2012] | F1 : General Help     |
| System Time  | [00:00:10]       | F2: Previous Values   |
|  |                  | F3:Optimized Defaults |
|  |                  | F4:Save and Exit      |
|  |                  | ESC Exit              |
| Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc. |                  |                       |

### System Time:

Set the system time, the time format is:

Hour : 0 to 23

Minute : 0 to 59

Second : 0 to 59

### System Date:

Set the system date, the date format is:

**Day:** Note that the 'Day' automatically changes when you set the date.

**Month:** 01 to 12

**Date:** 01 to 31

**Year:** 1998 to 2099

## 3.4 Advanced Settings

|  |          |         |          |      |             |  |
|--|----------|---------|----------|------|-------------|--|
| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc. |          |         |          |      |             |  |
| Main   | Advanced | Chipset | Security | Boot | Save & Exit |  |

|   |   |
|---|---|
| <ul style="list-style-type: none"> <li>▶ ACPI Settings</li> <li>▶ F81216SEC Super IO Configuration</li> <li>▶ IT8518 Super IO Configuration</li> <li>▶ Intel ( R ) Smart Connect Technology</li> <li>▶ CPU Configuration</li> <li>▶ PPM Configuration</li> <li>▶ Thermal Configuration</li> <li>▶ IDE Configuration</li> <li>▶ Miscellaneous Configuration</li> <li>▶ LPSS &amp; SCC Configuration</li> <li>▶ System Component</li> <li>▶ Network Stack Configuration</li> <li>▶ CSM Configuration</li> <li>▶ SDIO Configuration</li> <li>▶ USB Configuration</li> <li>▶ Platform Trust Technology</li> <li>▶ Security Configuration</li> </ul> | <p>System ACPI Parameters.</p>  |
|   | <p>→←: Select Screen<br/> ↑↓ : Select Item<br/> Enter: Select<br/> +/- : Charge Opt.<br/> F1 : General Help<br/> F2: Previous Values<br/> F3:Optimized Defaults<br/> F4:Save and Exit<br/> ESC Exit</p> |
| <p>Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc.</p>   |   |

### 3.4.1 ACPI Settings

**Enable ACPI Auto Conf:**

**[Disabled]**

[Enabled]

**Enable Hibernation:**

**[Enabled]**

[Disabled]

**ACPI Sleep State:**

**[S3 (Suspend to RAM) ]**

[Suspend Disabled]

**Lock Legacy Resources:**

**[Disabled]**

[Enabled]

### 3.4.2 F81216SEC Super IO Configuration

Super IO chip F81216SEC

### Serial Port 1 Configuration

UART1 Mode Selection:

[RS-232]

[RS-485]

[RS-422]

### Serial Port 2 Configuration

Change Settings [Auto]

### Serial Port 3 Configuration

Change Settings [Auto]

### Serial Port 4 Configuration

Change Settings [Auto]

## 3.4.3 IT8518 Super IO Configuration

Super IO chip IT8518/IT8519

### Serial Port 1 Configuration

Backlight PWM Controller (COM5) :

[RS-485]

[RS-422]

### Serial Port 2 Configuration (COM6)

Change Settings [Auto]

[RS-485]

[RS-422]

## 3.4.4 Intel® Smart Connect Technology

ISCT Support

[Disabled]

[Enabled]

## 3.4.5 CPU Configuration

### Socket 0 CPU Information

Intel® Atom™ CPU E3845 @ 1.91GHz

|                     |               |
|---------------------|---------------|
| CPU Signature       | 30679         |
| Microcode Patch     | 901           |
| Max CPU Speed       | 1910 MHz      |
| Mix CPU Speed       | 500 MHz       |
| Processor Cores     | 4             |
| Intel HT Technology | Not Supported |

|                       |             |
|-----------------------|-------------|
| Intel HT-X Technology | Supported   |
| L1 Data Cache         | 24KB x 4    |
| L1 Code Cache         | 32KB x 4    |
| L2 Cache              | 1024KB x 2  |
| L2 Cache              | Not Present |

#### CPU Thermal configuration

|                  |                                |
|------------------|--------------------------------|
| CPU Speed        | 1918 MHz                       |
| 64-bit           | Supported                      |
| Hyper-Threading: | <b>[Enabled]</b><br>[Disabled] |

|                      |                                |
|----------------------|--------------------------------|
| Limit CPUID Maximum: | <b>[Disabled]</b><br>[Enabled] |
|----------------------|--------------------------------|

|                      |                                |
|----------------------|--------------------------------|
| Execute Disable Bit: | <b>[Enabled]</b><br>[Disabled] |
|----------------------|--------------------------------|

|                                  |                                |
|----------------------------------|--------------------------------|
| Intel Virtualization Technology: | <b>[Enabled]</b><br>[Disabled] |
|----------------------------------|--------------------------------|

|                  |   |
|------------------|---|
| Power Technology | <b>[Energy Efficient]</b><br>[Disabled]<br>[Custom] |
|------------------|---|

### 3.4.6 PPM Configuration

|                    |                                |
|--------------------|--------------------------------|
| CPU C State Report | <b>[Enabled]</b><br>[Disabled] |
|--------------------|--------------------------------|

|                 |                             |
|-----------------|-----------------------------|
| Max CPU C-state | <b>[C7]</b><br>[C6]<br>[C1] |
|-----------------|-----------------------------|

|      |                                |
|------|--------------------------------|
| SOix | <b>[Disabled]</b><br>[Enabled] |
|------|--------------------------------|

### 3.4.7 Thermal Configuration Parameters

### 3.4.8 IDE Configuration

|                    |  |
|--------------------|--|
| Serial-ATA(SATA)   | [Enabled]<br>[Disabled]                              |
| SATA Test Mode     | [Disabled]<br>[Enabled]                              |
| SATA Speed Support | [Gen2]<br>[Gen1]                                     |
| SATA ODD Port      | [No ODD]<br>[Port0 ODD]<br>[Port1 ODD]<br>[Disabled] |
| <b>SATA Mode</b>   | [AHCI Mode]<br>[IDE Mode]                            |
| Serial-ATA Port 0  | [Enabled]<br>[Disabled]                              |
| SATA Port0 Hotplug | [Disabled]<br>[Enabled]                              |
| Serial-ATA Port 1  | [Enabled]<br>[Disabled]                              |
| SATA Port1 Hotplug | [Disabled]<br>[Enabled]                              |
| SATA Port0         | Not Present  |
| SATA Port1         | Not Present  |

### 3.4.9 Miscellaneous Configuration

#### 3.4.10 LPSS & SCC Configuration

|                            |                  |
|----------------------------|------------------|
| LPSS & SCC Configuration   | [ACPI Mode]      |
| SCC Configuration          |                  |
| SCC eMMC Support           | [eMMC AUTO MODE] |
| SCC eMMC 4.5 DDR50 Support | [Enabled]        |
| SCC eMMC 4.5 HS200 Support | [Disabled]       |
| eMMC Secure Erase          | [Disabled]       |
| SCC SDIO Support           | [Enabled]        |
| SCC SD Card Support        | [Enabled]        |
| SDR25 Support for SDCard   | [Disabled]       |
| SDR50 Support for SDCard   | [Enabled]        |
| MIPI HSI Support           | [Disabled]       |
| LPSS Configuration         |                  |
| LPSS DMA #1 Support        | [Enabled]        |
| LPSS DMA #2 Support        | [Enabled]        |
| LPSS I2C #1 Support        | [Enabled]        |
| LPSS I2C #2 Support        | [Enabled]        |
| LPSS I2C #3 Support        | [Enabled]        |
| LPSS I2C #4 Support        | [Enabled]        |
| LPSS I2C #5 Support        | [Enabled]        |
| LPSS I2C #6 Support        | [Enabled]        |
| LPSS I2C #7 Support        | [Enabled]        |
| NFC                        | [Disabled]       |
| Touch Pad                  | [Disabled]       |
| I2C touch Device Address   |                  |
| LPSS HSUART #1 Support     | [Disabled]       |
| LPSS HSUART #2 Support     | [Disabled]       |
| LPSS PWM #1 Support        | [Enabled]        |
| LPSS PWM #2 Support        | [Enabled]        |
| LPSS SPI Support           | [Enabled]        |

#### 3.4.11 System Component

#### 3.4.12 Network Stack Configuration

Network Stack [Disabled]

### 3.4.13 CSM Configuration

CSM Support [Enabled]  
CSM16 Module Version 07.76  
GateA20 Active [Upon Request]  
[Always]  
Option ROM Messages [Force BIOS]  
[Keep Current]  
Boot option filter [UEFI and Legacy]  
[Legacy only]  
[UEFI only]  
Network  
[UEFI]  
[Do not launch]  
[Legacy]  
Storage  
[UEFI]  
[Do not launch]  
[Legacy]  
Video  
[Legacy]  
[UEFI]  
[Do not launch]  
Other PCI devices  
[UEFI]  
[Do not launch]  
[Legacy]

### 3.4.14 SDIO Configuration

### 3.4.15 USB Configuration

USB Configuration  
USB Module Version 8.11.02  
USB Devices:  
1 keyboard, 1 Mouse, 2 Hubs  
Legacy USB Support:  
[Enabled]  
[Disabled]  
XHCI Hand-off:



|                                    |            |
|------------------------------------|------------|
|                                    | [Enabled]  |
|                                    | [Disabled] |
| EHCI Hand-off:                     | [Disabled] |
|                                    | [Enabled]  |
| USB Mass Storage Driver Support    | [Enabled]  |
|                                    | [Disabled] |
| USB hardware delays and time-outs: |            |
| USB transfer time-out:             | [20 sec]   |
|                                    | [10 sec]   |
|                                    | [5 sec]    |
|                                    | [1 sec]    |
| Device reset time-out:             | [20 sec]   |
|                                    | [10 sec]   |
|                                    | [30 sec]   |
|                                    | [40 sec]   |
| Device power-up delay              | [Auto]     |
|                                    | [Manual]   |

### 3.4.16 Platform Trust Technology


**Ftpm**

[Disabled]  
[Enabled]

### 3.4.17 Security Configuration

## 3.5 Chipset Settings



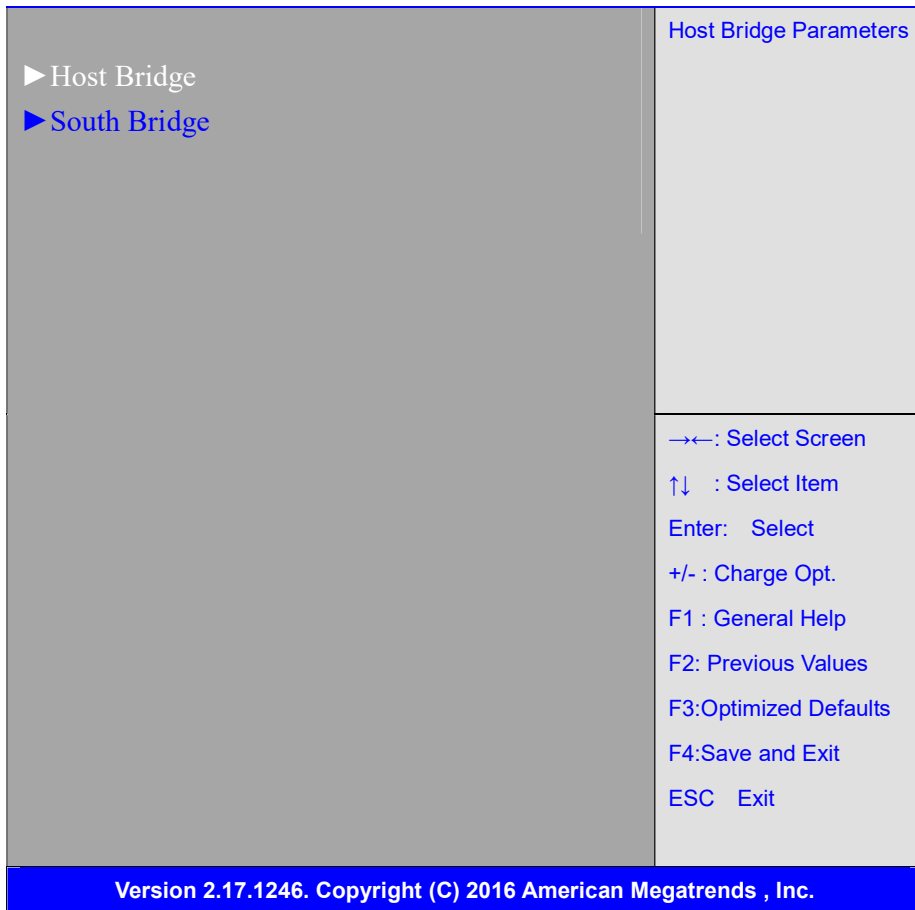

### 3.5.1 Host Bridge

#### ▶ Intel IGD Configuration

#### ▶ IGD – LCD Control

|                  |               |
|------------------|---------------|
| Force Lid Status | [On]<br>[Off] |
| BIA              | [Auto]        |
| ALS Support      | [Disabled]    |
| IGD Flat Panel   | [Auto]        |
| Pannel Scaling   | [Auto]        |

#### ▶ Memory Frequency and Timing

#### ▶ Graphics Power Management Control

|                    |                |
|--------------------|----------------|
| Memory Information |                |
| Total Memory       | 4096 MB(DDR3L) |
| Memory Slot0       | 4096 MB(DDR3L) |
| DIMM#1             | Not Present    |
| Max TOLUD          |                |

**[Dynamic]**

[2GB]

[2.25GB]

[2.5GB]

[2.75GB]

[3GB]

Backlight PWM or DC Control

[PWM]

[DC]

Backlight PWM Control

[PWM Normal by BIOS]

BIOS Control Backlight Level

[Level 7]

[Level 0]

[Level 1]

[Level 2]

[Level 3]

[Level 4]

[Level 5]

[Level 6]

[Level 8]

[Level 9]

[Level 10]

[Level 11]

[Level 12]

[Level 13]

[Level 14]

[Level 15]

LCD Minimum brightness By Knob

[0%]

[1%]

[20%]

### 3.5.2 South Bridge

▶ Azalia HD Audio

▶ USB Configuration

USB OTG Support [Disabled]

USB VBUS [On]

XHCI Mode [Smart Auto]

|                            |            |
|----------------------------|------------|
| USB2 Link Power Management | [Enabled]  |
| USB 2.0(EHCI) Support      | [Enabled]  |
| USB EHCI debug             | [Disabled] |
| USB Per Port Control       | [Enabled]  |
| USB Port 0                 | [Enabled]  |
| USB Port 1                 | [Enabled]  |
| USB Port 2                 | [Enabled]  |
| USB Port 3                 | [Enabled]  |

### 3.6 Security Settings

| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc.   |          |         |          |  |             |
|--|----------|---------|----------|--|-------------|
| Main   | Advanced | Chipset | Security | Boot                                       | Save & Exit |
| Password Description<br><br>If ONLY the Administrator’s password is set,<br>Then this only limits access to Setup and is<br>Only asked for when entering Setup.<br>If ONLY the User’s password is set, then this<br>Is a power on password and must be entered to<br>Is a power on password and must be entered to |          |         |          | <a href="#">Set Administrator Password</a> |             |

|  |   |
|--|---|
| <p>Boot or enter Setup. In Setup the User will Have Administrator rights.</p> <p>The password length must be In the following range:</p> <p>Minimum length        3</p> <p>Maximum length        20</p> <p>Administrator Password</p> <p>User Password</p> <p>▶ Secure Boot menu</p> | <p>→←: Select Screen</p> <p>↑↓ : Select Item</p> <p>Enter: Select</p> <p>+/- : Change Opt.</p> <p>F1 : General Help</p> <p>F2: Previous Values</p> <p>F3:Optimized Defaults</p> <p>F4:Save and Exit</p> <p>ESC Exit</p> |
| <p>Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc.</p>  |   |

### 3.6.1 Administrator Password



### 3.6.2 User Password



Type the password with up to 20 characters and then press **<Enter>** key. This will clear all previously typed CMOS passwords. You will be requested to confirm the password. Type the password again and press **<Enter>** key. You may press **<Esc>** key to abandon password entry operation.

To clear the password, just press **<Enter>** key when password input window pops up. A confirmation message will be shown on the screen as to whether the password will be disabled. You will have direct access to BIOS setup without typing any password after system reboot once the password is disabled.

Once the password feature is used, you will be requested to type the password each time you enter BIOS setup. This will prevent unauthorized persons from changing your system configurations.

Also, the feature is capable of requesting users to enter the password prior to system boot to control unauthorized access to your computer. Users may enable the feature in Security Option of Advanced BIOS Features. If Security Option is set to System, you will be requested to enter the password before system boot and when entering BIOS setup; if Security Option is set to Setup, you will be requested for password for entering BIOS setup.


### 3.7 Boot Settings

| Aptio Setup Utility – Copyright (C) 2016 American Megatrends, Inc. |          |            |          |  |   |
|--|----------|------------|----------|--|---|
| Main   | Advanced | Chipset    | Security | Boot                                   | Save & Exit   |
| Boot Configuration   |          |            |          |  | Number of seconds to Wait for Setup Activation key. |
| Setup Prompt Timeout   |          | 1          |          | 65535(0xFFFF)means Indefinite waiting. |   |
| Bootup Numlock State   |          | [On]       |          |  |   |
| Quiet Boot   |          | [Disabled] |          |  |   |
| Fast Boot  |          | [Enabled]  |          |  |   |
| Boot Option Priorities   |          |            |          |  | →←: Select Screen                                   |
| Boot   |          | Option     |          | #1                                     | ↑↓ : Select Item                                    |
| [UEFI:Built-in EFI...]   |          |            |          |  | Enter: Select                                       |
|  |          |            |          |  | +/- : Change Opt.                                   |
|  |          |            |          |  | F1 : General Help                                   |
|  |          |            |          |  | F2: Previous Values                                 |
|  |          |            |          |  | F3:Optimized Defaults                               |
|  |          |            |          |  | F4:Save and Exit                                    |
|  |          |            |          |  | ESC Exit  |
| Version 2.17.1246. Copyright (C) 2016 American Megatrends , Inc.   |          |            |          |  |   |

|                        |            |
|------------------------|------------|
| Setup Prompt Timeout   | [1]        |
| Bootup Numlock State   | [On]       |
|                        | [off]      |
| Quiet Boot             | [Disabled] |
|                        | [Enabled]  |
| Fast Boot              | [Disabled] |
|                        | [Enabled]  |
| Boot Option Priorities |            |
| Boot Option #1         |            |

Hard Drive BBS Priorities [SATA PM:\*\*\* ... ]  
 Boot Option #1  
 SATA PM:\*\*\* ...  
 \*\*\*\*\*  
 Disabled

### 3.8 Save & Exit Settings

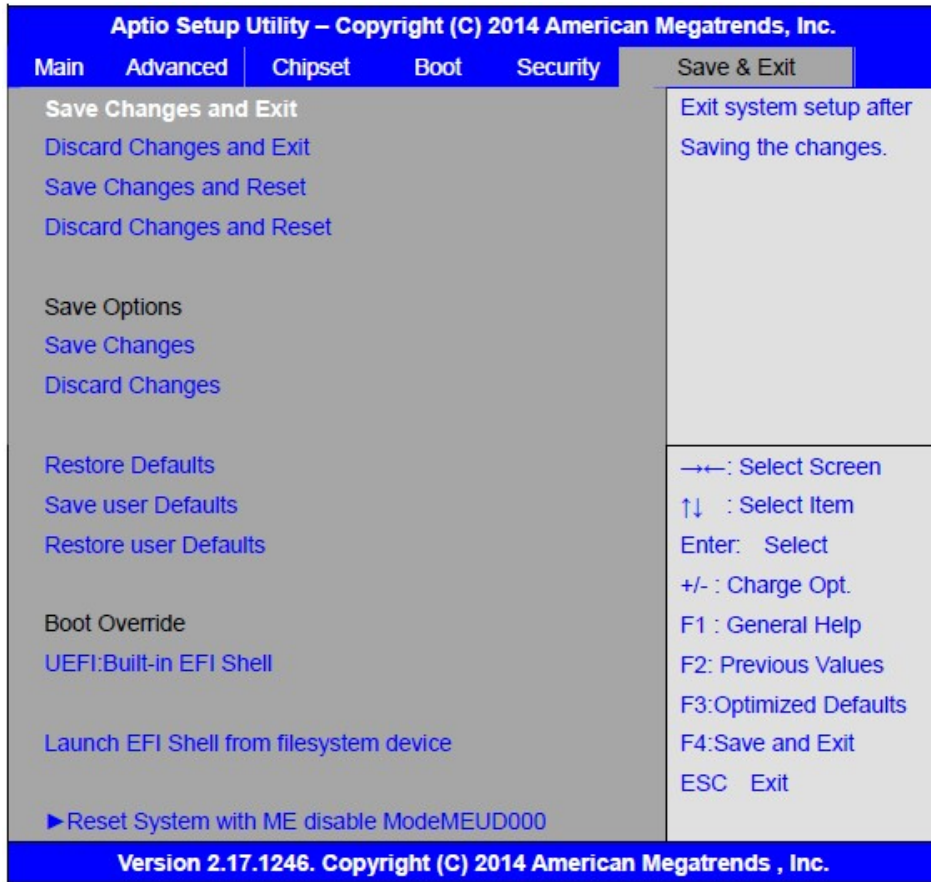

Save Changes and Exit  
 Save & Exit Setup save Configuration and exit ?  
 [Yes]  
 [No]

Discard Changes and Ext  
 Exit Without Saving Quit without saving?  
 [Yes]  
 [No]

Save Changes and Reset  
 Save & reset Save Configuration and reset?

|   |       |
|---|-------|
|   | [Yes] |
|   | [No]  |
| Discard Changes and Reset   |       |
| Reset Without Saving Reset without saving?                          |       |
|   | [Yes] |
|   | [No]  |
| Save Changes  |       |
| Save Setup Values Save configuration?                               |       |
|   | [Yes] |
|   | [No]  |
| Discard Changes   |       |
| Load Previous Values Load Previous Values?                          |       |
|   | [Yes] |
|   | [No]  |
| Restore Defaults  |       |
| Load Optimized Defaults Load optimized Defaults?                    |       |
|   | [Yes] |
|   | [No]  |
| Save user Defaults  |       |
| Save Values as User Defaults Save configuration?                    |       |
|   | [Yes] |
|   | [No]  |
| Restore user Defaults   |       |
| Restore User Defaults Restore User Defaults?                        |       |
|   | [Yes] |
|   | [No]  |
| Launch EFI Shell from filesystem device                             |       |
| WARNING Not Found   |       |
|   | [ok]  |
| Reset System with ME disable ModeMEUD000                            |       |
| ME will runs into the temporary disable mode, Ignore if ME Ignition |       |
| FWMEUD001.  |       |



# Chapter 4 Installation of Drivers

This chapter describes the installation procedures for software and drivers under the windows 7. The software and drivers are included with the motherboard. The contents include **Intel chipset driver, VGA driver, LAN drivers, Audio driver, USB 3.0 Driver, and Com Driver Installation instructions are given below.**

**Important Note:**

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the installation of drivers.



## 4.1 Intel® Atom™ SoC Chipset

To install the Intel chipset driver, please follow the steps below.

**Step 1.** Select **Intel® Atom™ SoC Chipset** from the list




**Step 2.** Click **Next** to setup program.




**Step 3.** Read the license agreement. Click **Yes** to accept all of the terms of the license agreement.



**Step 4.** Click **Next** to continue.

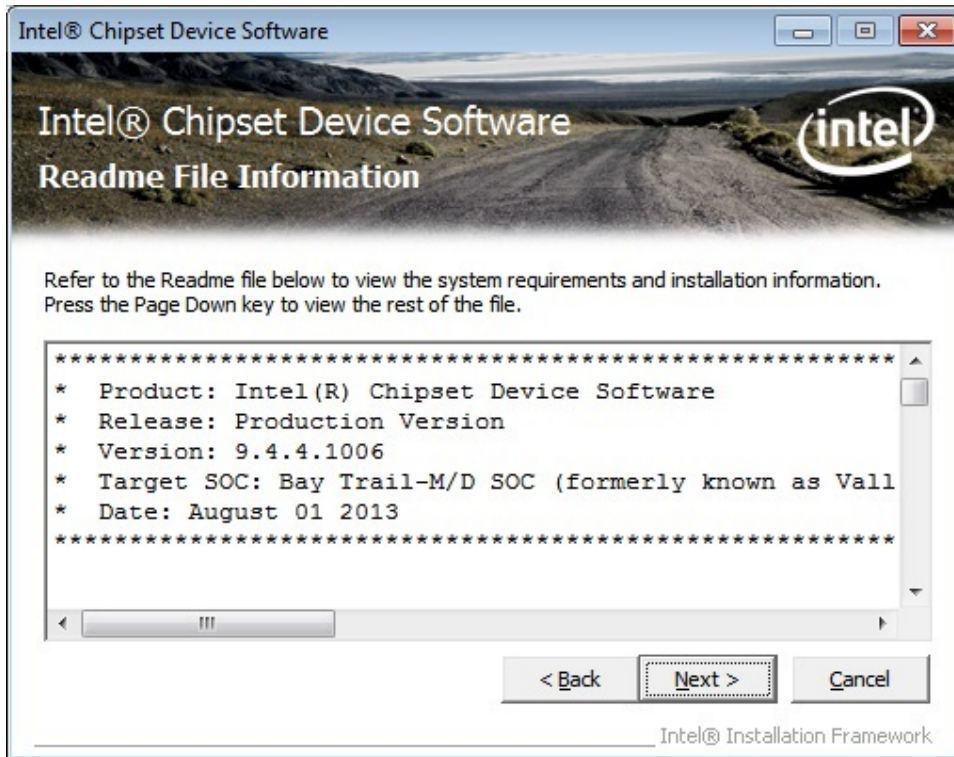

**Step 5. Click Next.**

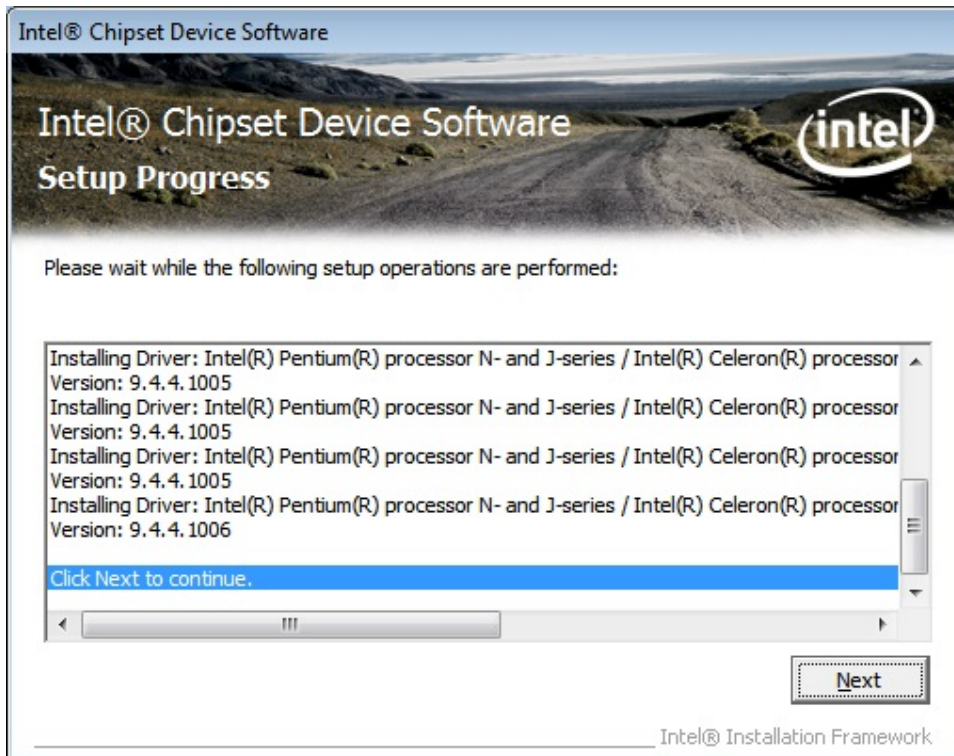

**Step 6. Select Yes, I want to restart this computer now.** Click **Finish**, then remove any installation media from the drives.



## 4.2 Intel® VGA Chipset


To install the VGA drivers, follow the steps below to proceed with the installation.

### Step 1. Select Intel® VGA Chipset




### Step 2. Click **Automatically run WinSAT** and enable the Windows Aero desktop


theme(if supported). Click **Next**.

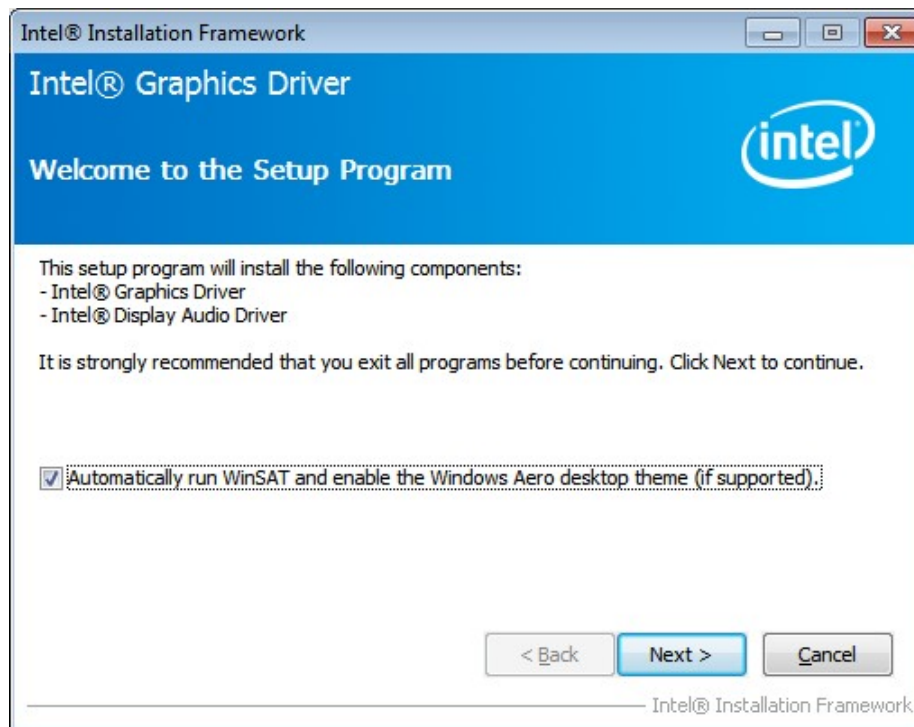


**Step 3.** Read license agreement. Click **Yes**.

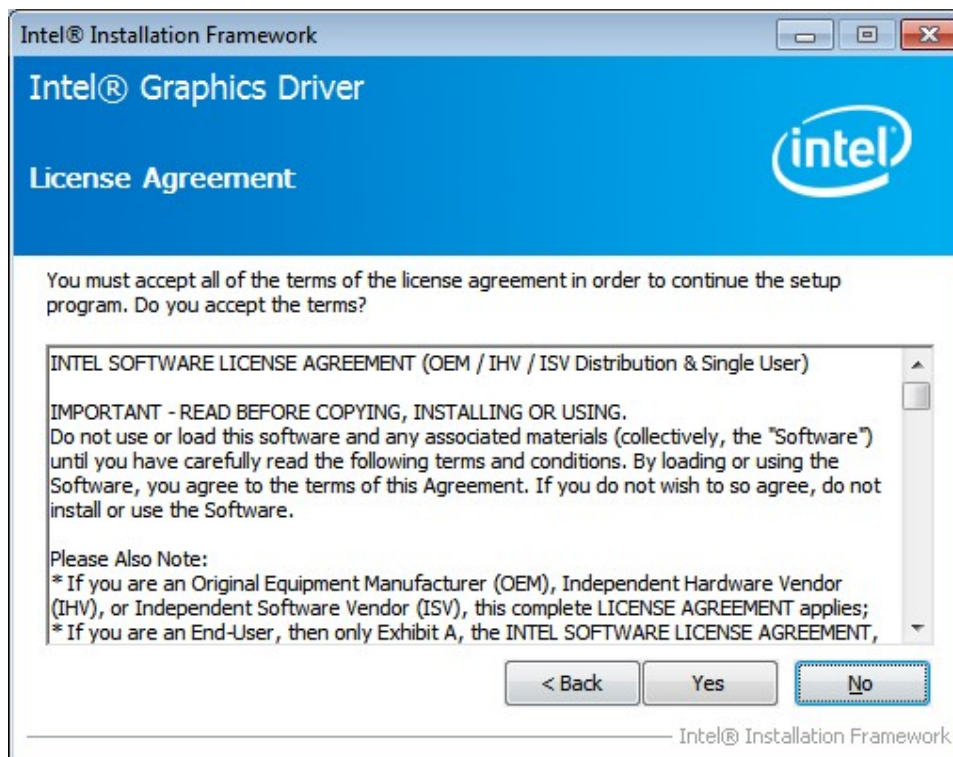


**Step 4.** Click **Next**.

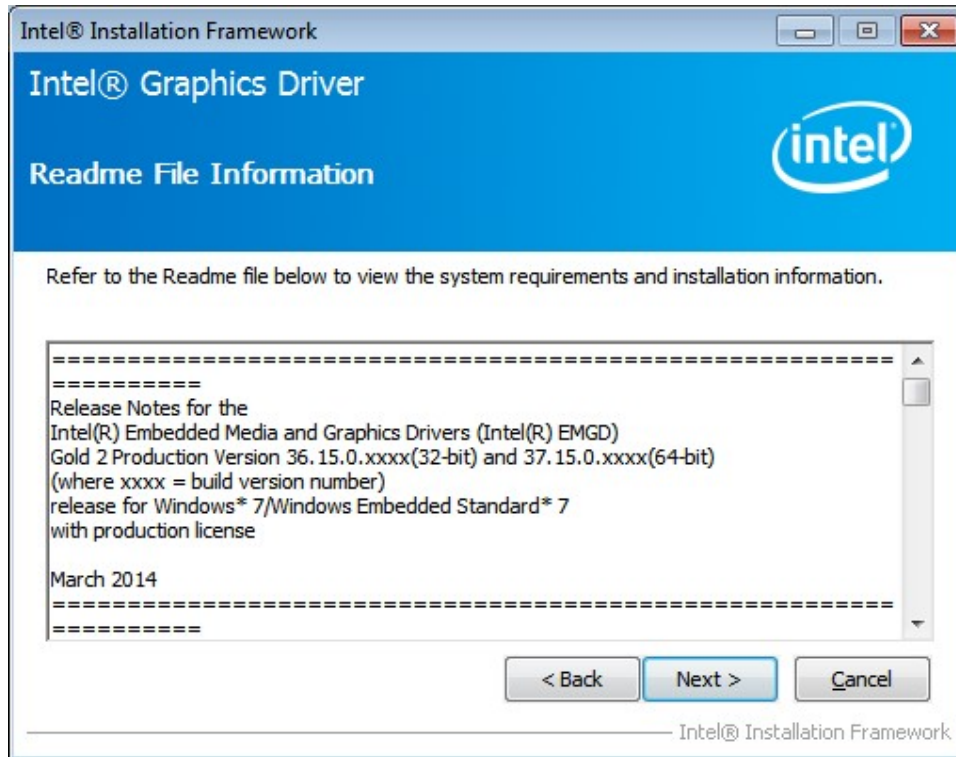

**Step 5. Click Install.**

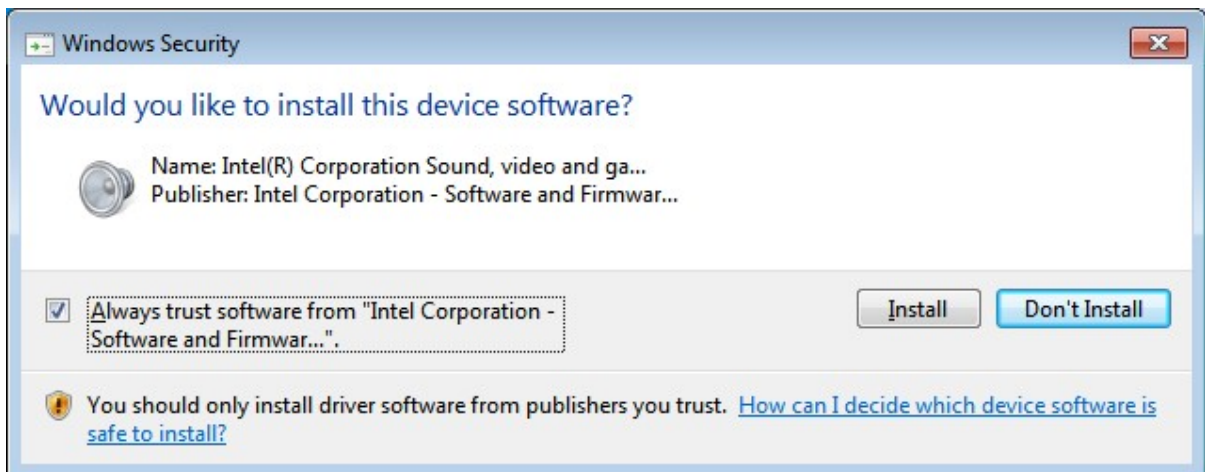


**Step 6. Click Install.**

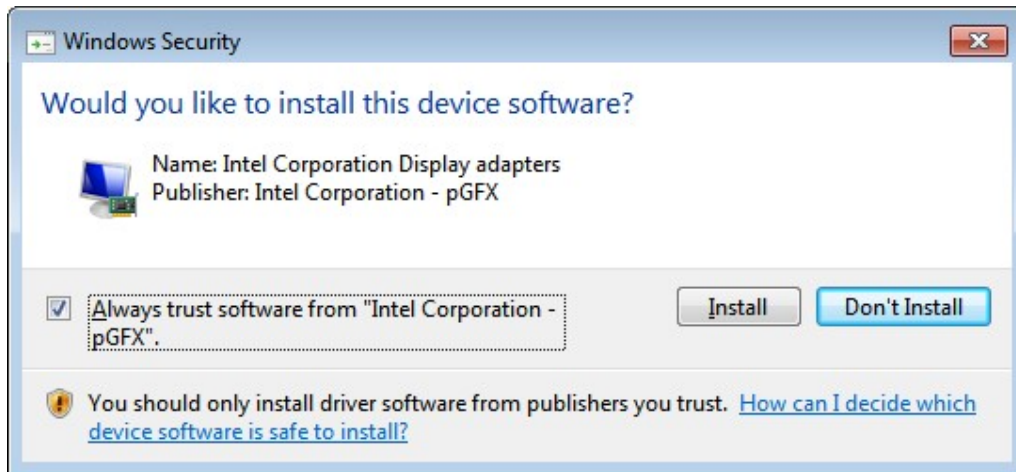


**Step 7. Click Next.**



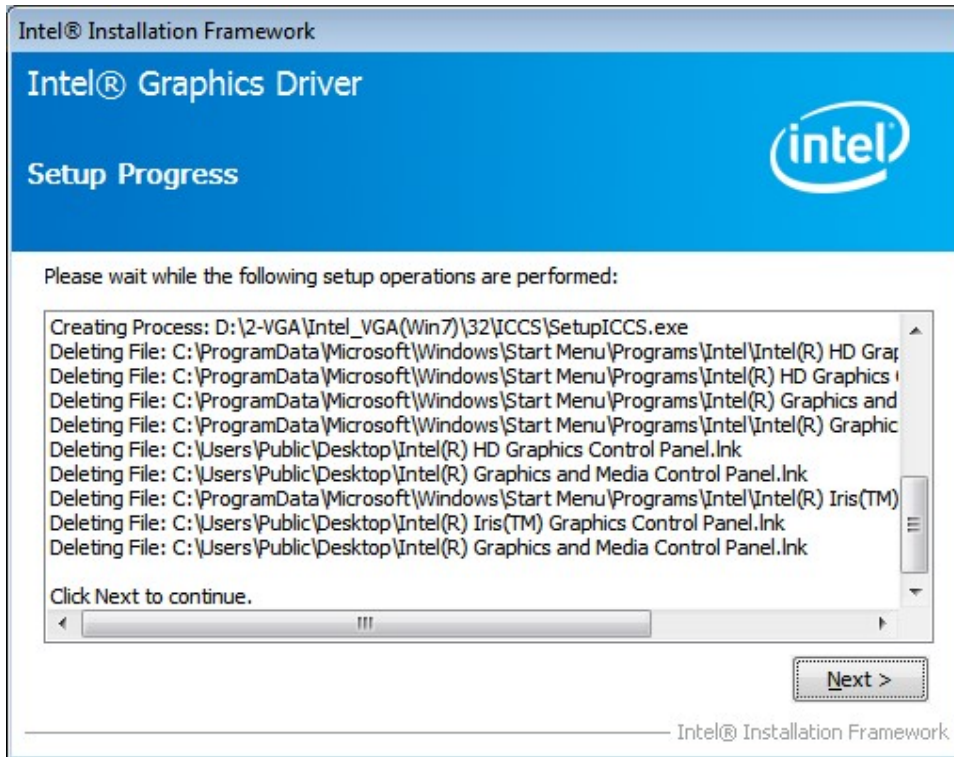

**Step 8. Click Yes, I want to restart this computer now. Then click Finish.**

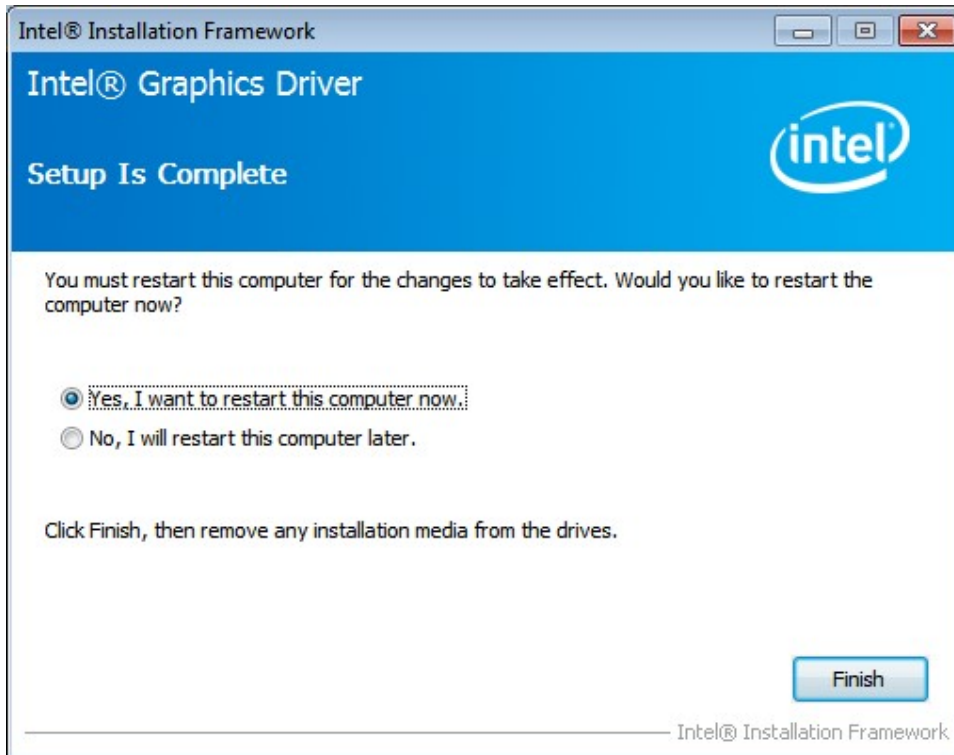


### 4.3 Intel® LAN Driver

To install the Intel® LAN driver, please follow the steps below.

**Step 1.** Select Intel®82574L LAN Driver from the list.



**Step 2.** . Click Next.

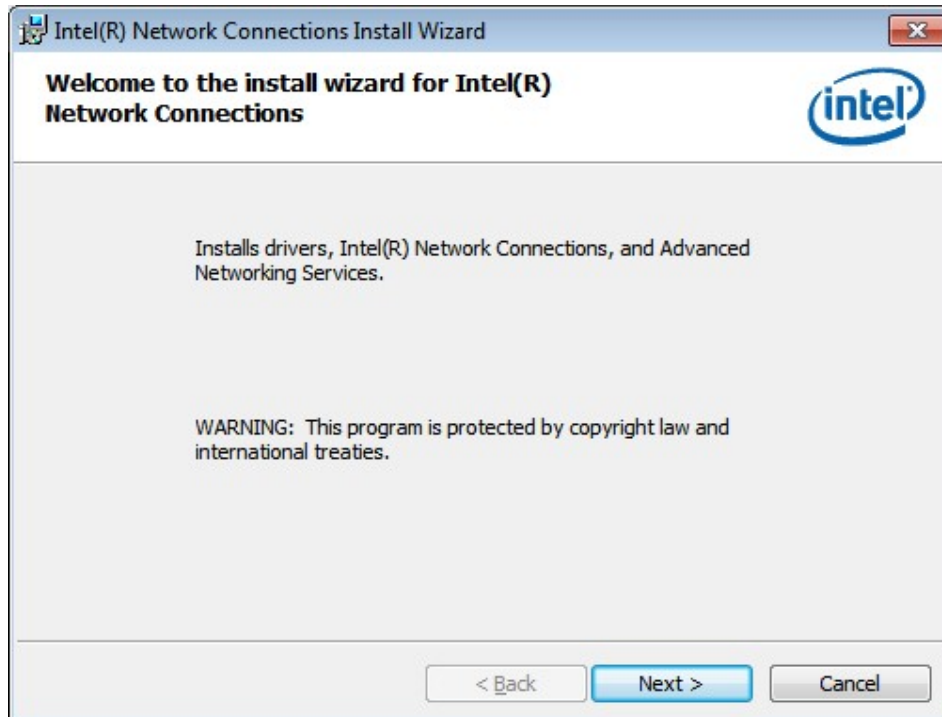


**Step 3.** Read license agreement. Click **I accept the terms in the license agreement**.


Click **Next**.




**Step 4.** Click **Next** to continue.

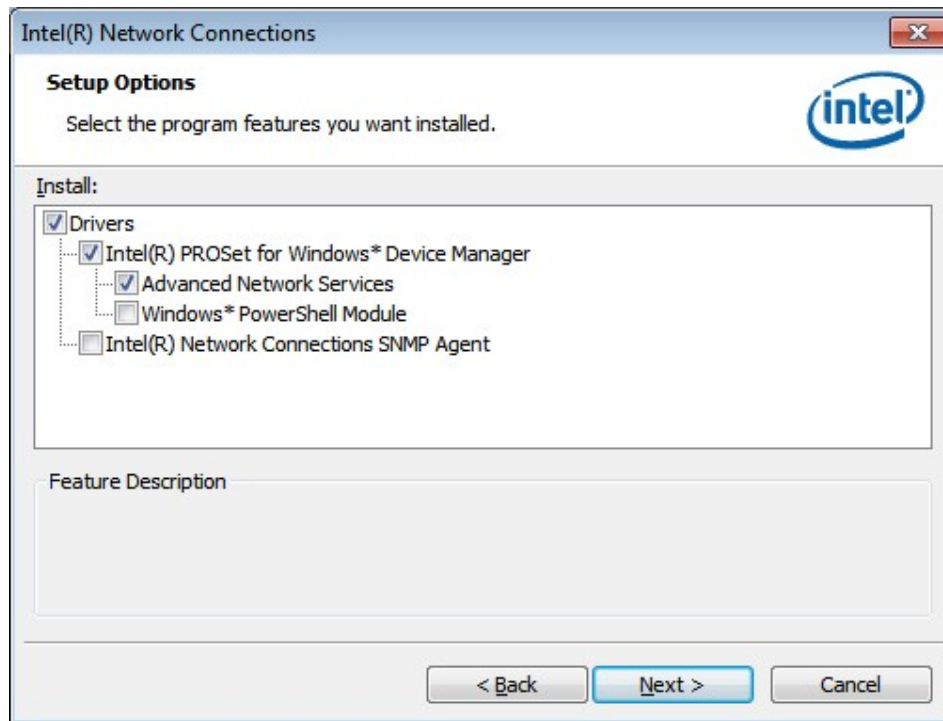

**Step 5.** Click **Install** to begin the installation.

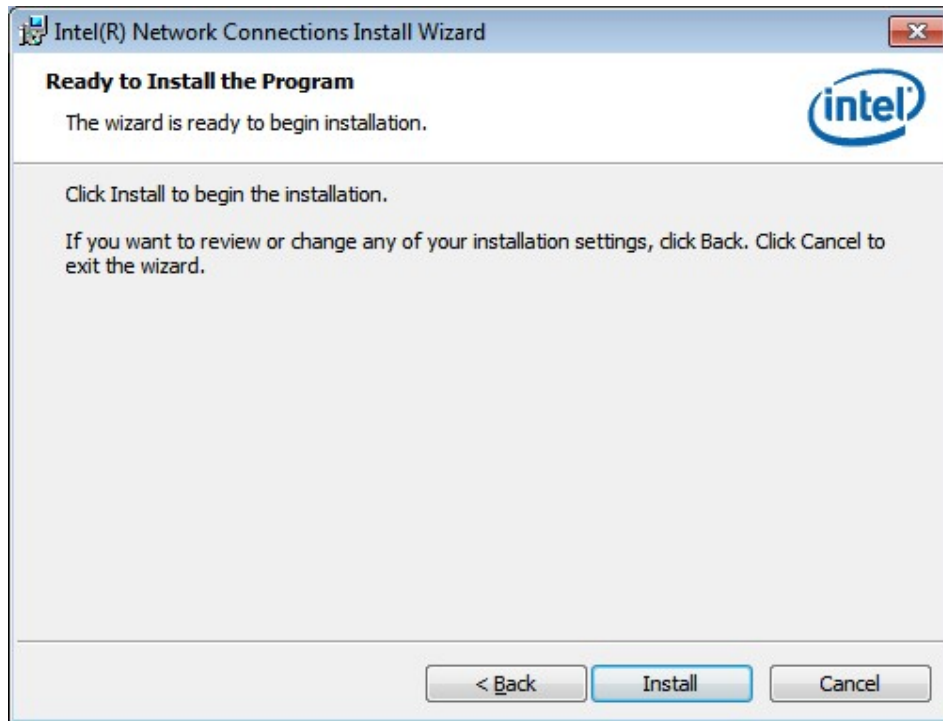

**Step 6.** Click **Finish** to exit the wizard.

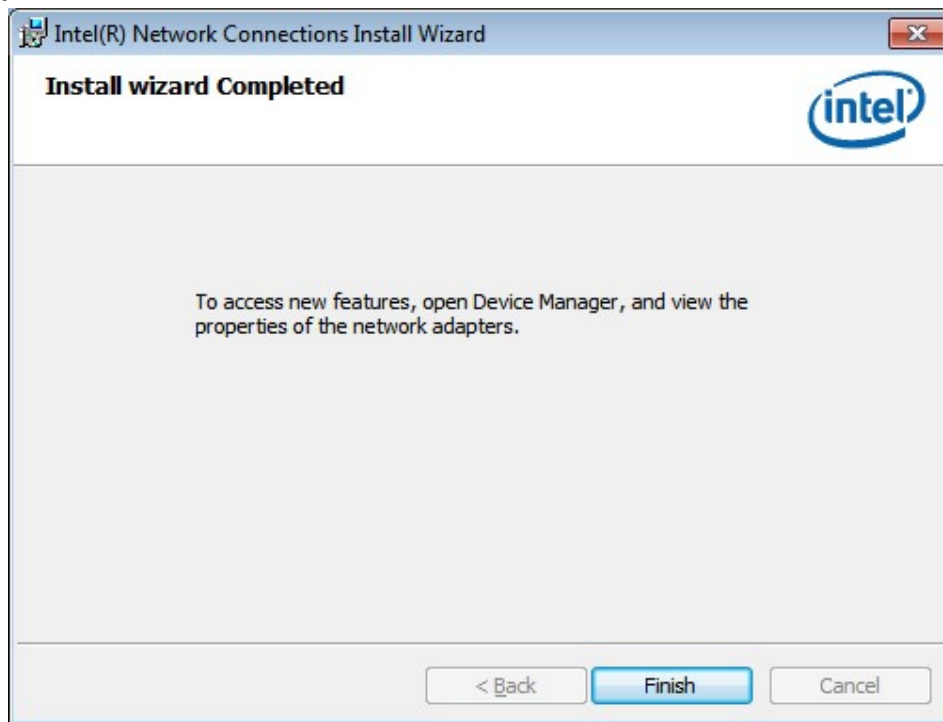


## 4.4 Realtek ALC662 HD Audio Driver Installation

To install the Realtek ALC662 HD Audio Driver, please follow the steps below.


**Step 1.** Select **Realtek AL662 HD Audio Driver** from the list



**Step 2.** Click **Next** to continue.

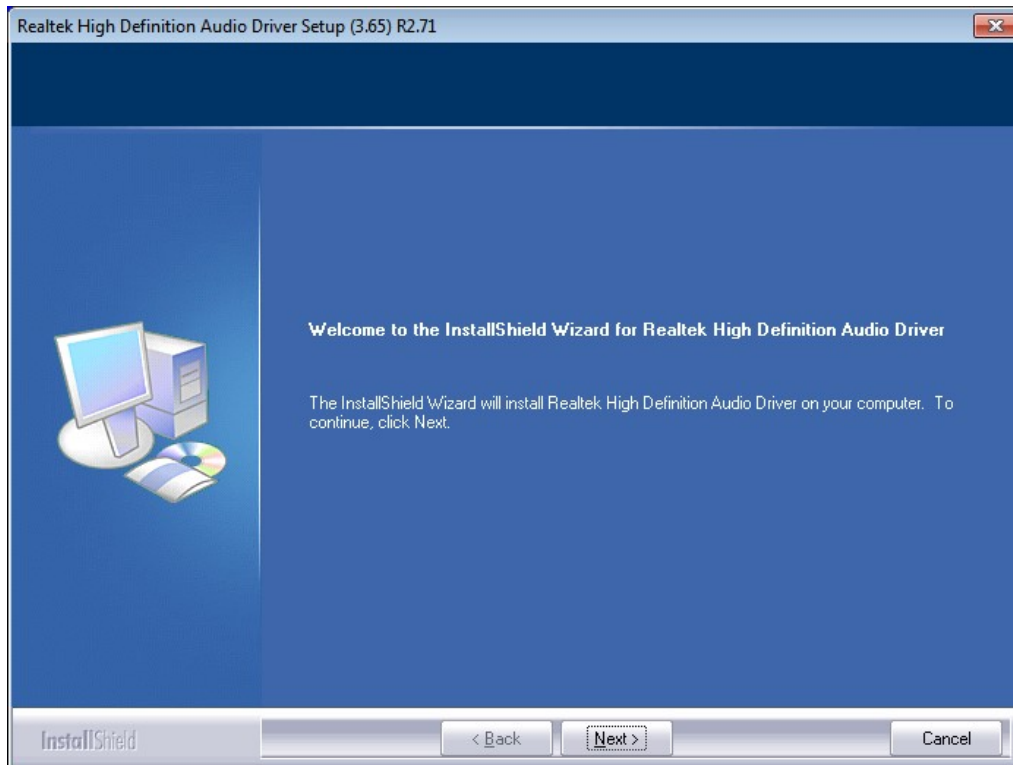

**Step 3.** Click **Yes, I want to restart my computer now.** Click **Finish** to complete the installation.

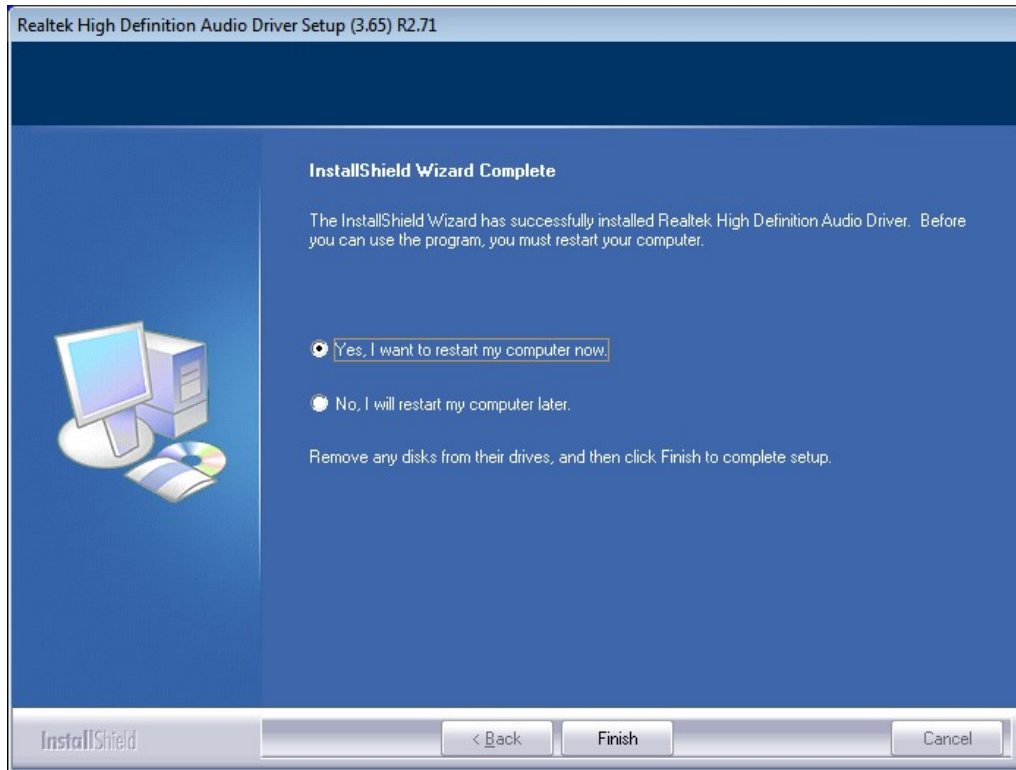

## 4.5 USB 3.0 Driver

To install the USB 3.0 Driver, please follow the steps below.


**Step 1.** Select **USB 3.0 Driver** from the list




**Step 2.** Click **Next** to continue.




**Step 3.** Read the license agreement. Then click **Yes** to continue.

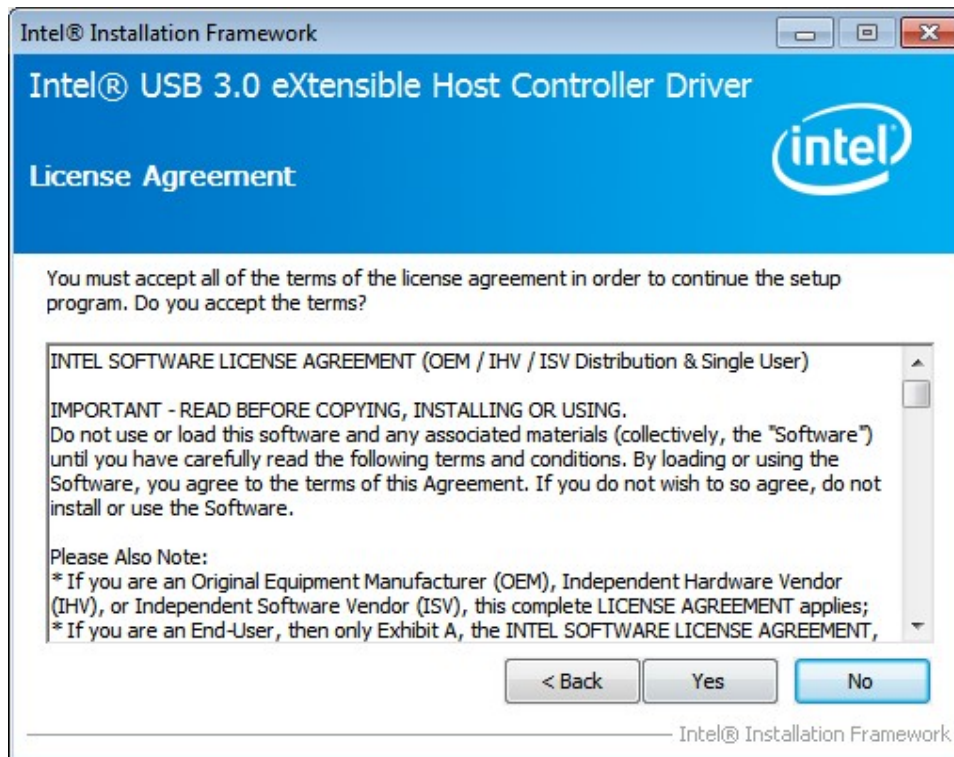

**Step 4.** Click **Next** to continue.

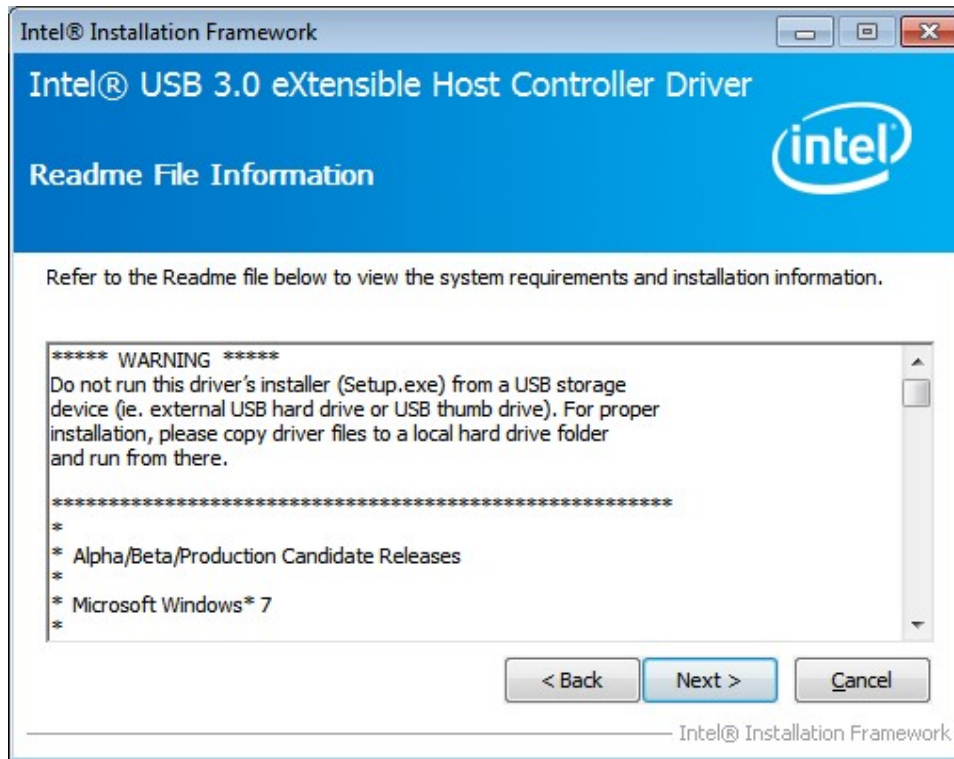

**Step 5.** Click **Next** to continue.

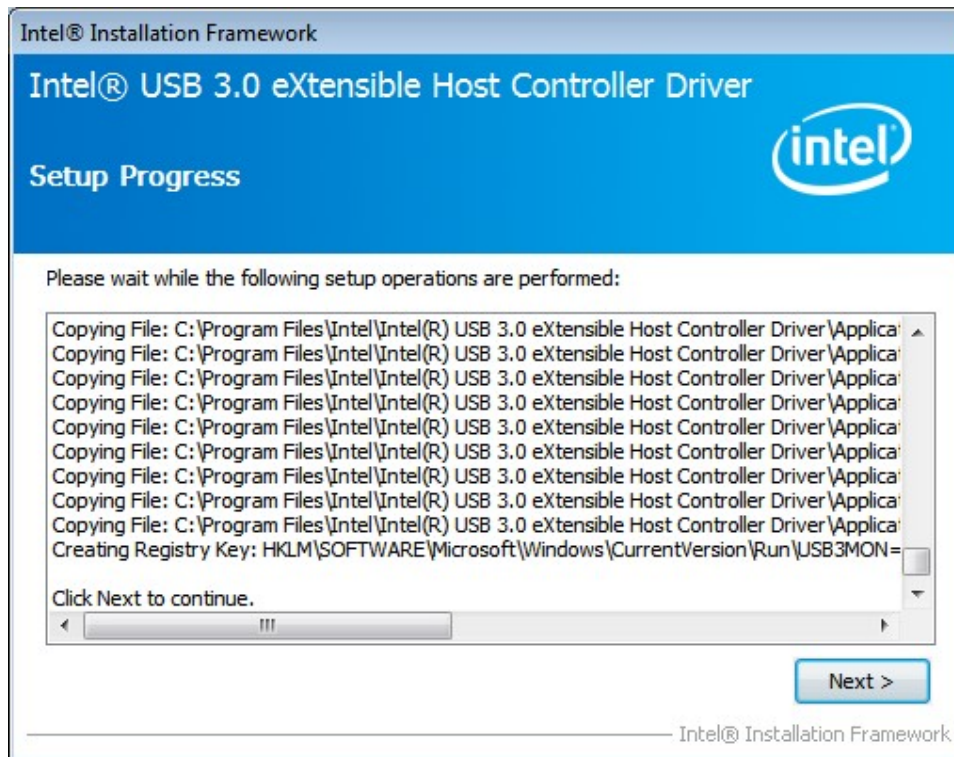



**Step 6.** Select **Yes, I want to restart this computer now.** Then click **Finish** to complete the installation.




## 4.6 Com Driver

To install the Com Driver, please follow the steps below.


**Step 1.** Select **Com Driver** from the list




**Step 2.** Click **Next** to continue.

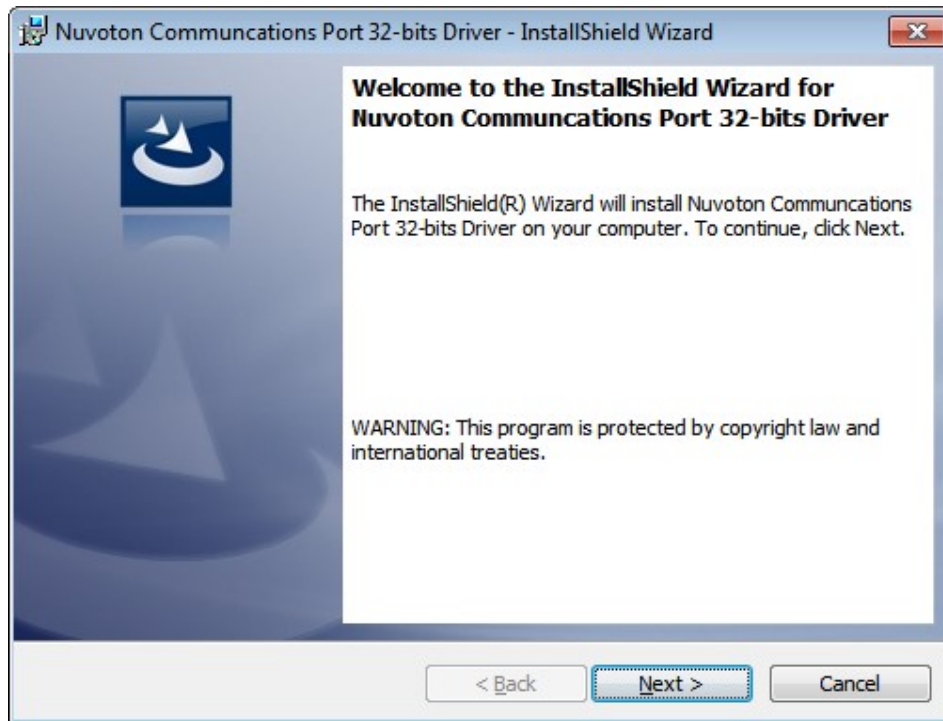

**Step 3.** Click **install** to begin the installation.

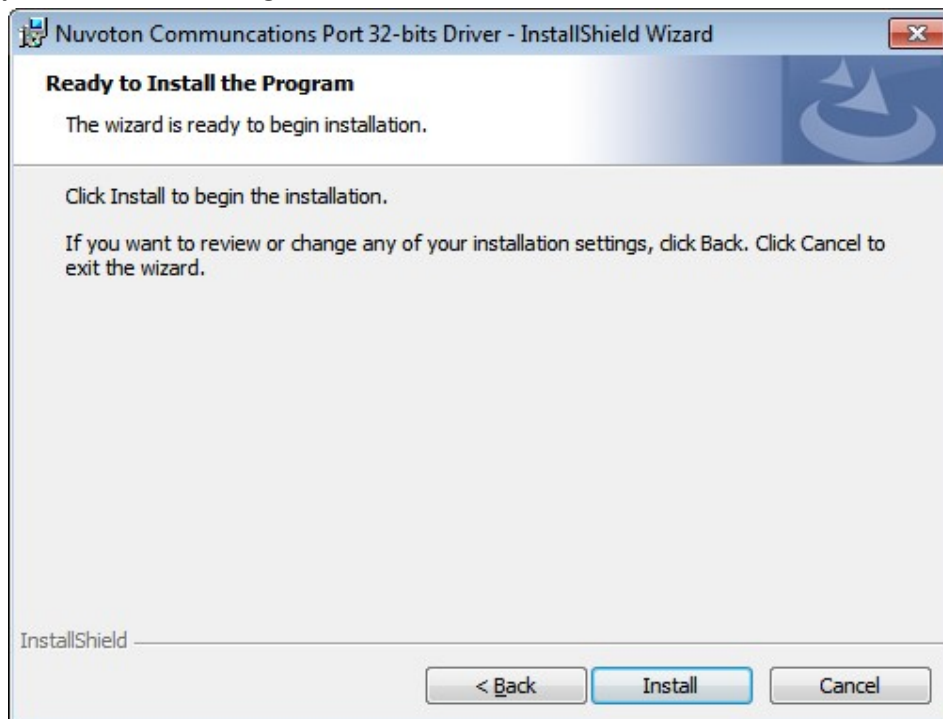

**Step 4.** Click **Finish** to complete the installation.

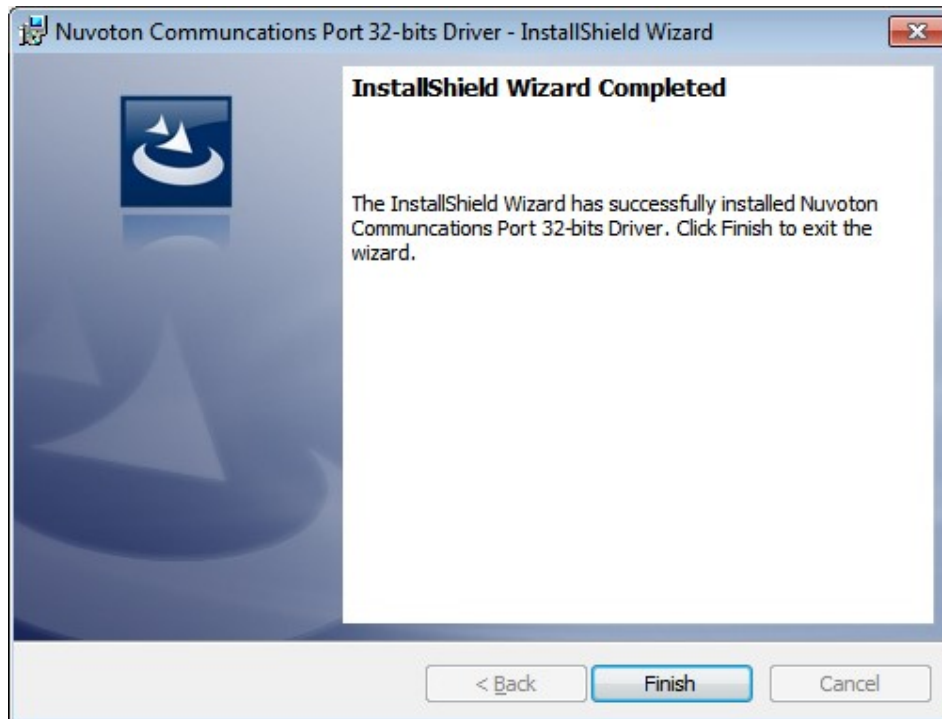

# Chapter 5 Touch Screen Installation

This chapter describes how to install drivers and other software that will allow your touch screen work with different operating systems.

## 5.1 Windows XP/2003/Vista/7 Universal Driver

### Installation for PenMount 6000 Series

Before installing the Windows XP/2003/Vista/7 driver software, you must have the Windows XP/2003/Vista/7 system installed and running on your computer. You must also have one of the following PenMount 6000 series controller or control boards installed: PM6500, PM6300.

#### 5.1.1 Installing Software(Resistive Touch)

If you have an older version of the PenMount Windows 7 driver installed in your system, please remove it first. Follow the steps below to install the PenMount DMC6000 Windows 7 driver.


**Step 1.** Insert the product CD, the screen below would appear. Click **Touch Panel Driver**.




**Step 2.** Select **Resistive Touch**.




**Step 3.** Click **Next** to continue.

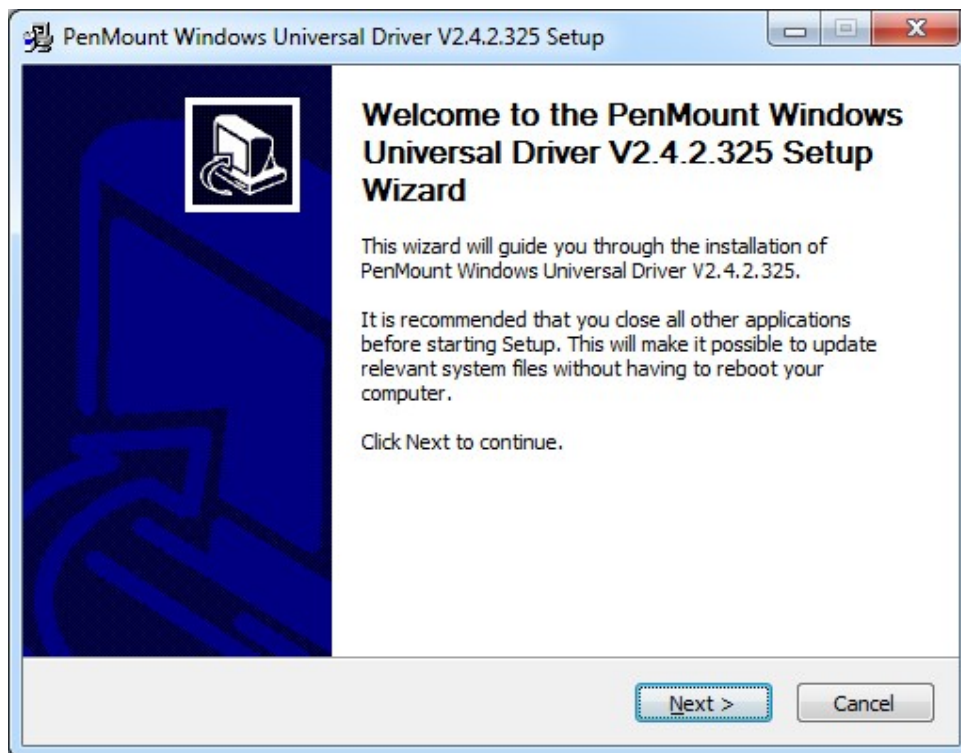


**Step 4.** Read the license agreement. Click **I Agree** to agree the license agreement.

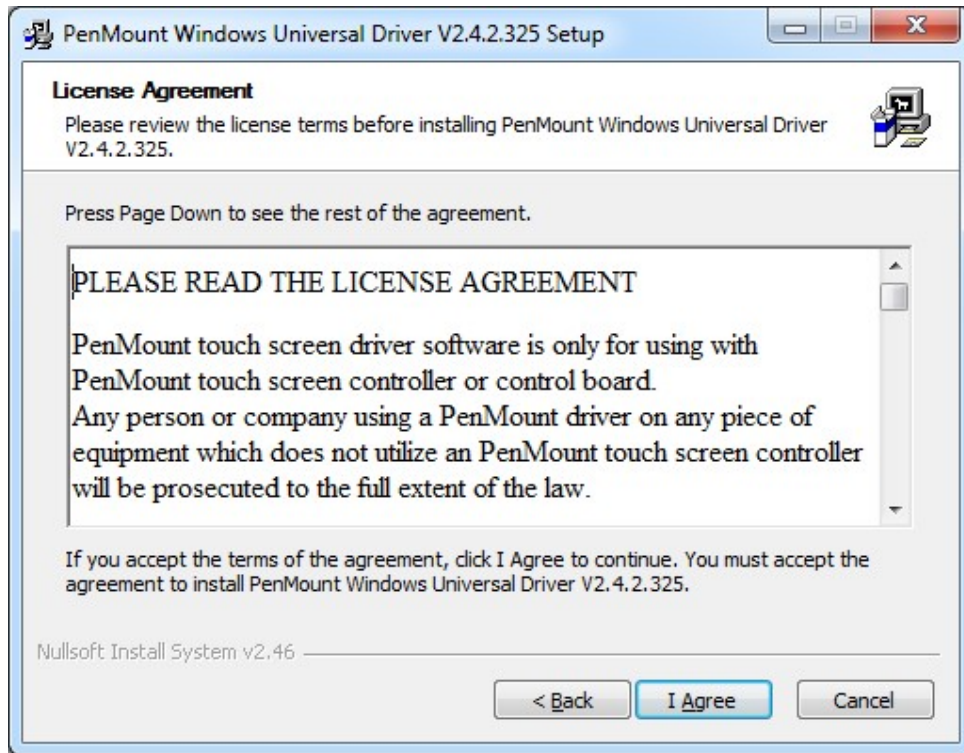


**Step 5.** Choose the folder in which to install PenMount Windows Universal Driver. Click **Install** to start the installation.

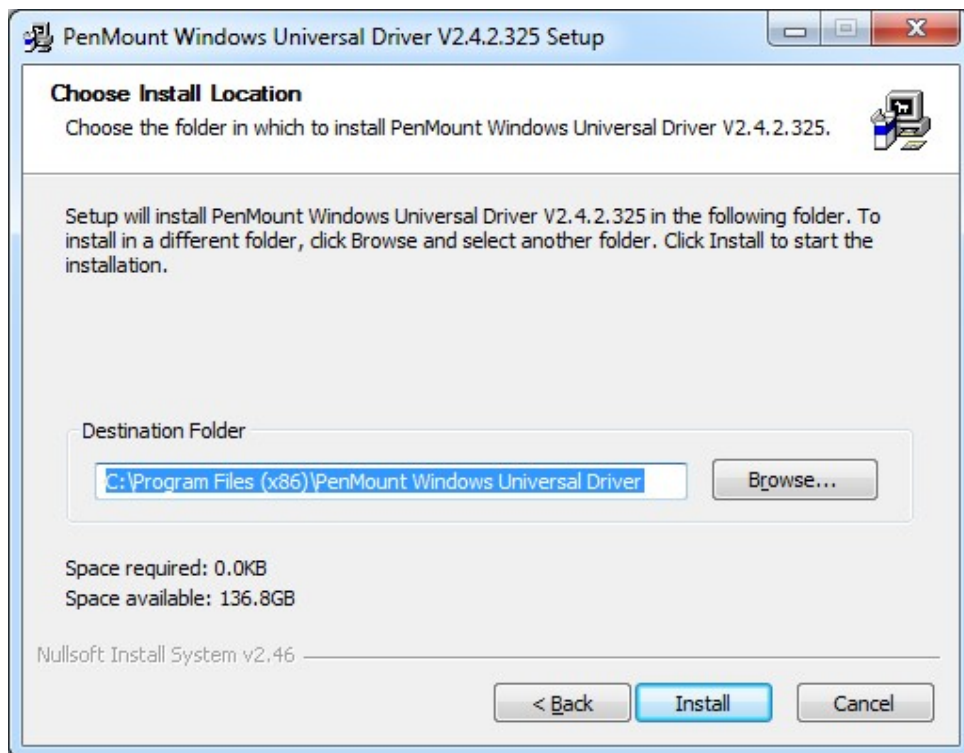

**Step 6.** Click **Yes** to continue.

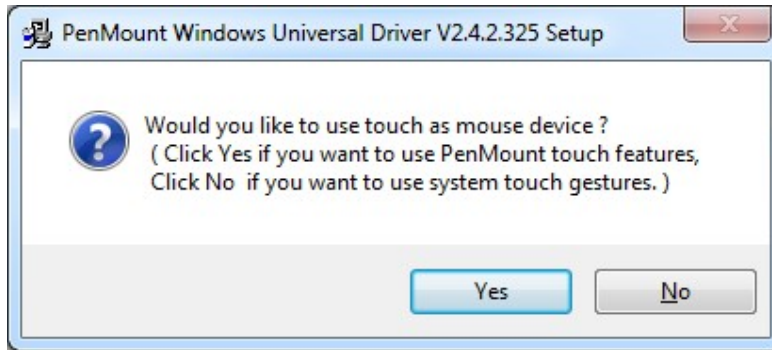

**Step 7.** Click **Finish** to complete installation.

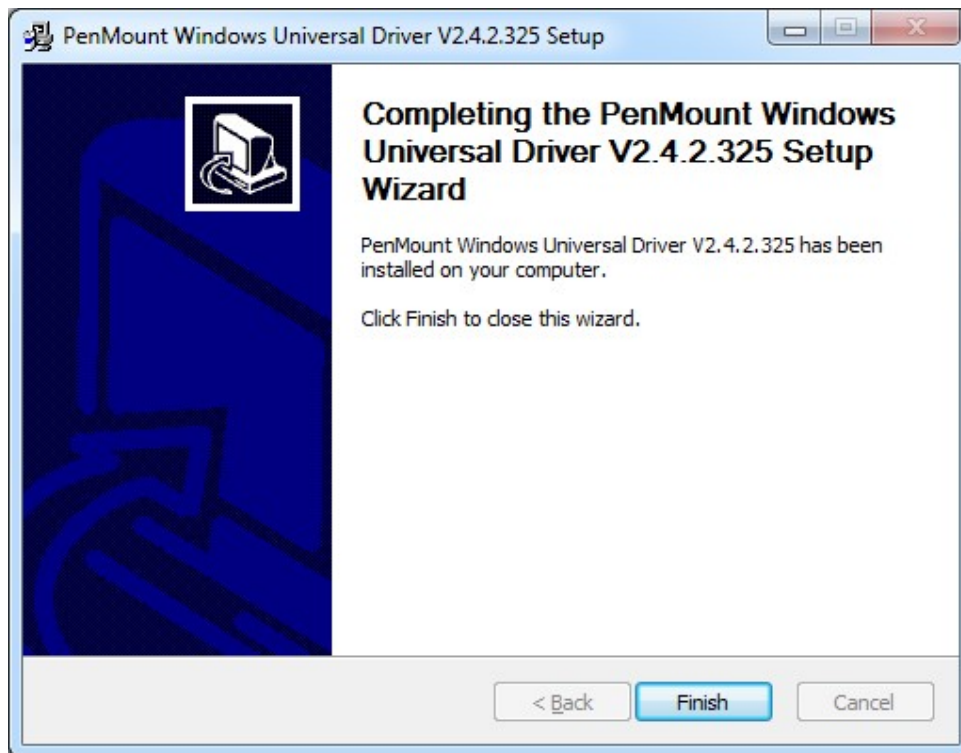

## 5.1.2 Installing Software (Projected Capacitive)

**Step 1.** Insert the product CD, the screen below would appear. Click touch panel driver.




**Step 2.** Select Projected Capacitive.







**Step 3.** Click **Next** to continue.

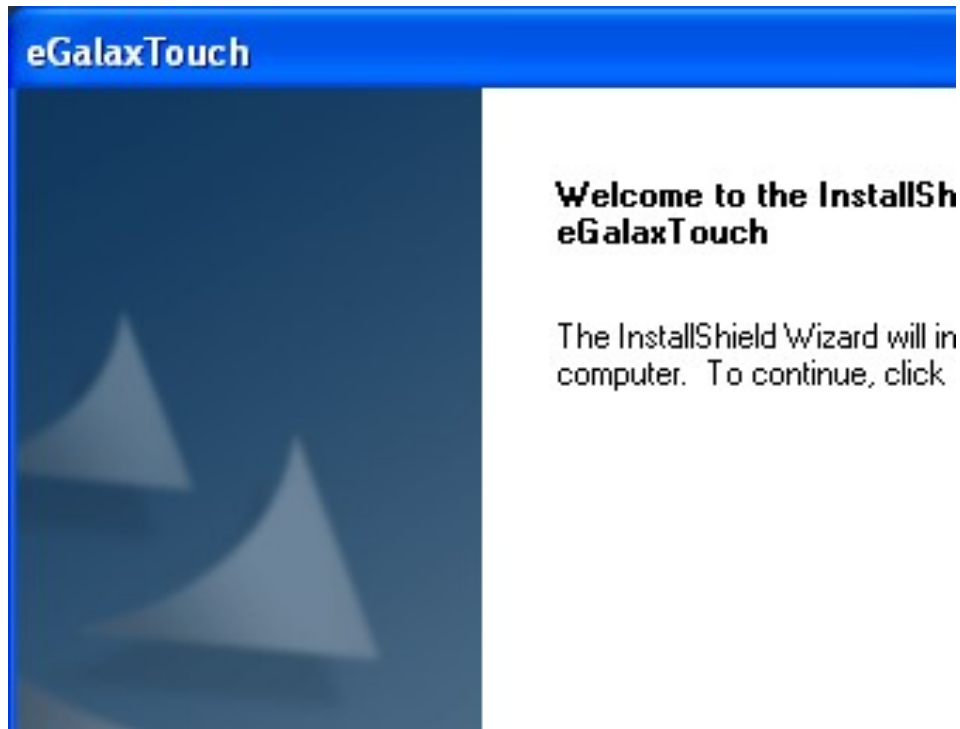

**Step 4.** Select **I accept the terms of the license agreement.** Click **Next.**

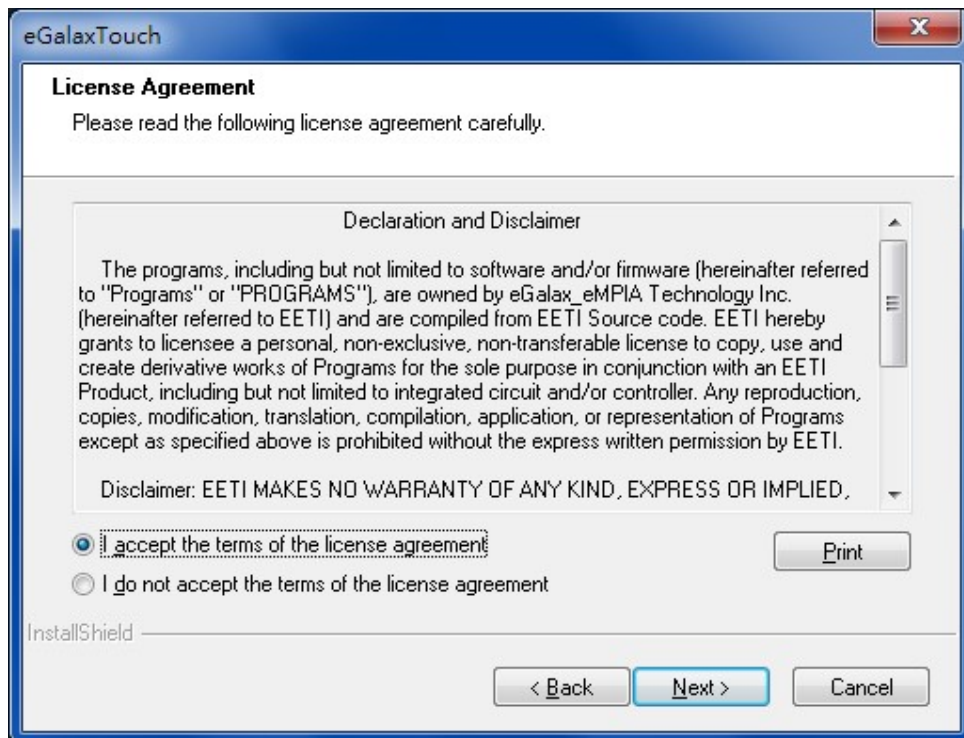


**Step.5.** Click **Next** to continue.

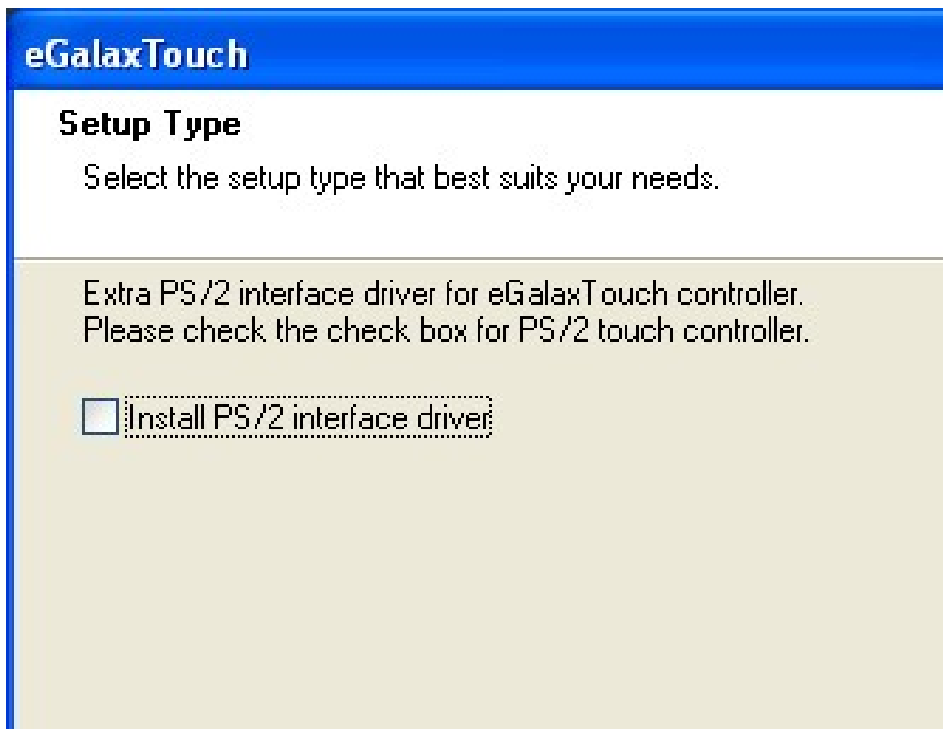


**Step 6.** Click **Install RS232 interface driver.**



**Step 7.** Select **None**. Click **Next**.

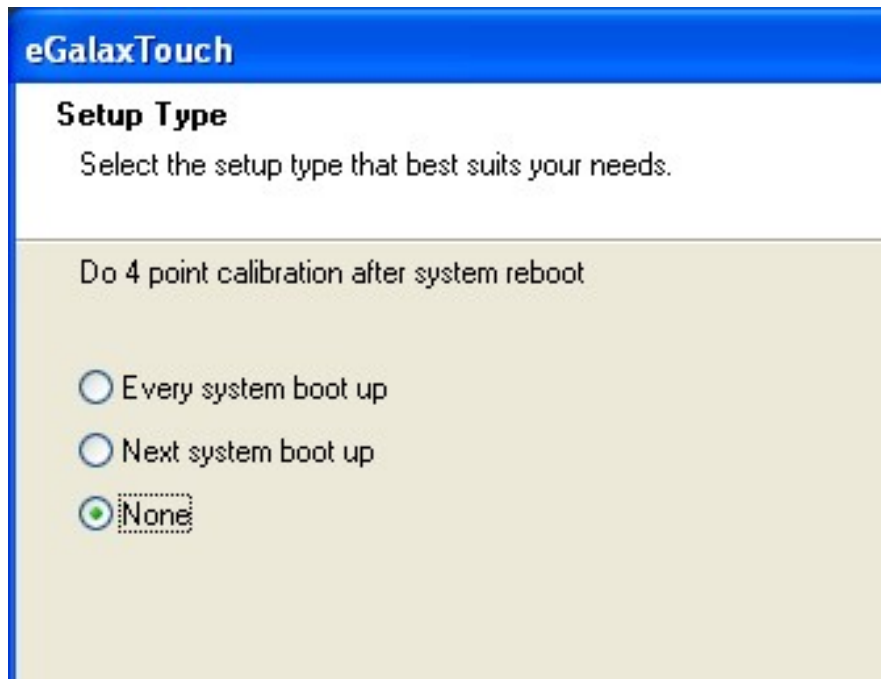


**Step 8.** Click **OK**.

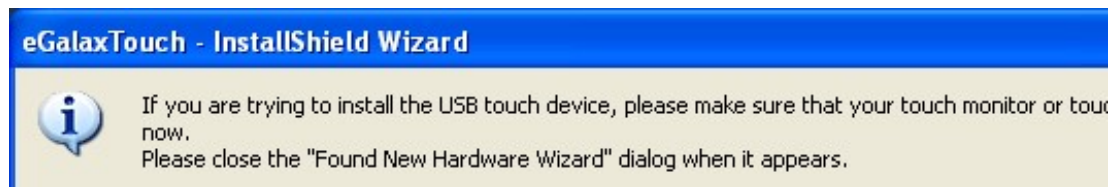


**Step 9.** Click **Support Multi-Monitor System**. Click **Next**.




**Step 10.** Go to C:\Program Files\eGalaxTouch. Click **Next**.

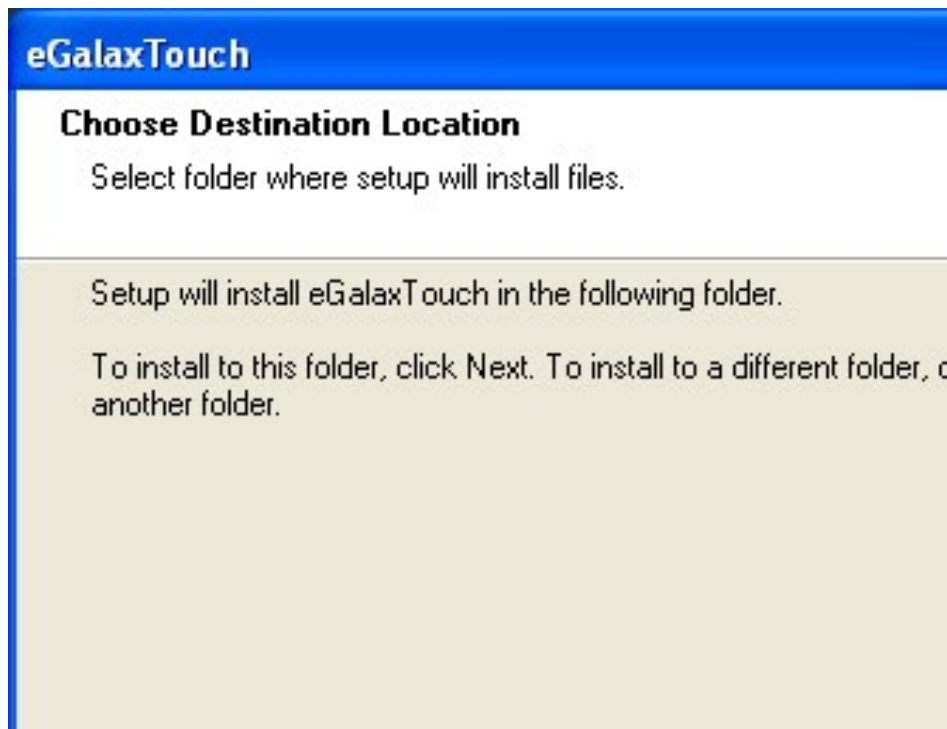


**Step 11.** Click **Next**.

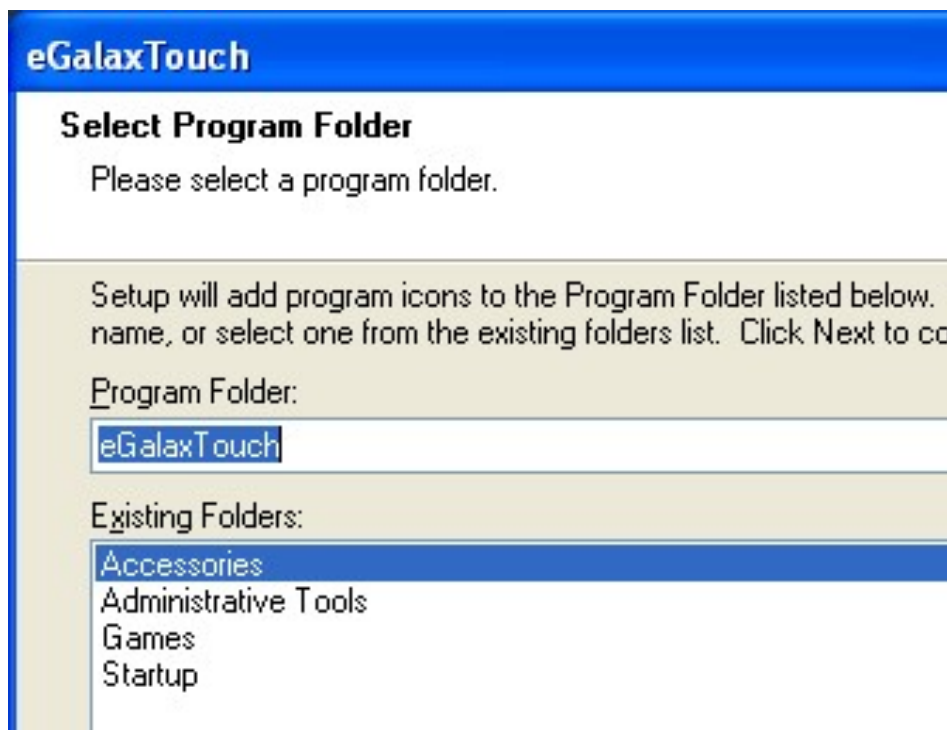


**Step 12.** Click **Create a eGalaxTouch Utility shortcut on desktop.** Click **Next.**

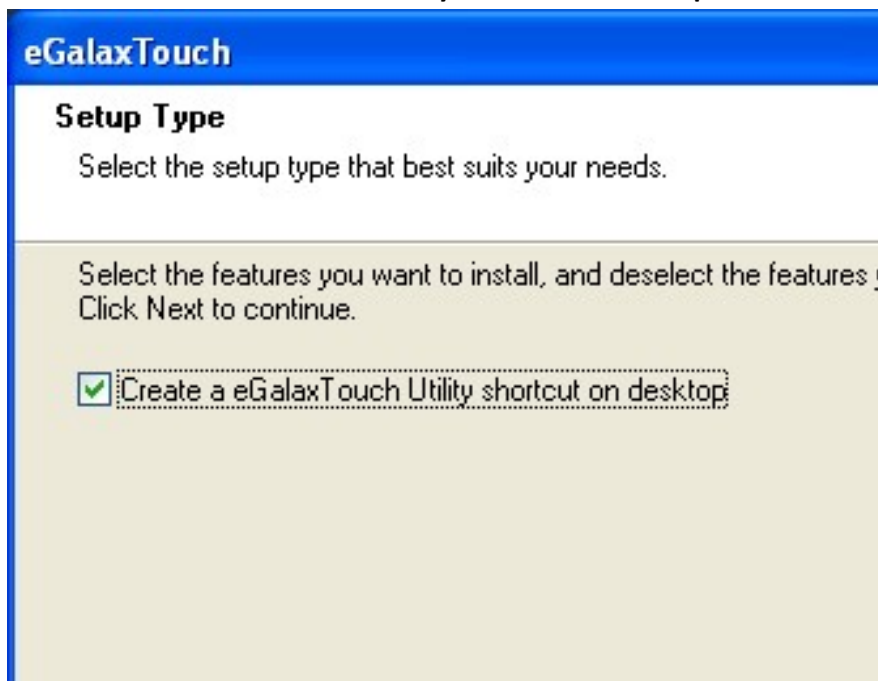

**Step 13.** Wait for installation.

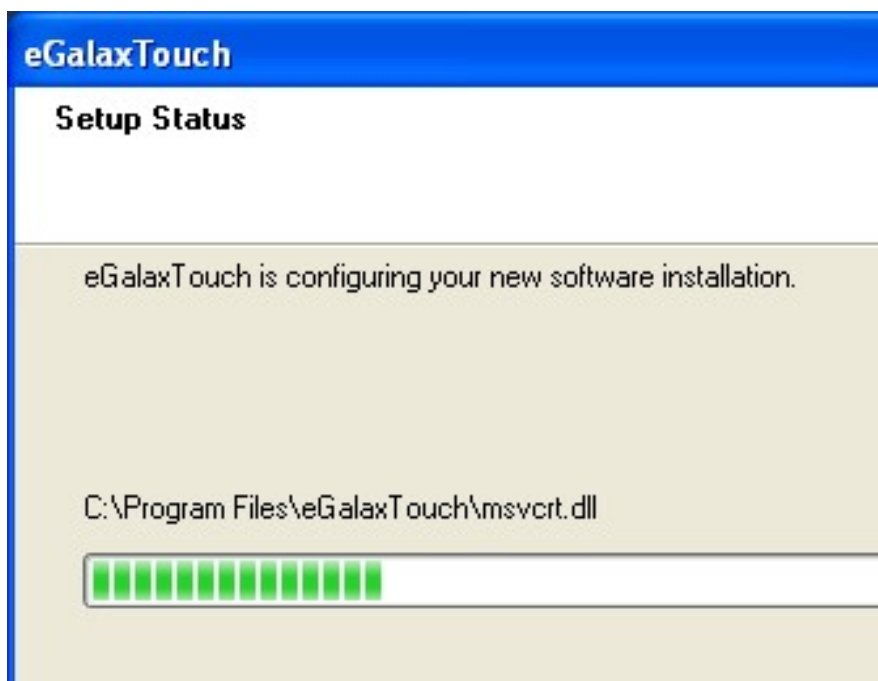

**Step 14.** Click **Yes** to do 4 point calibration.

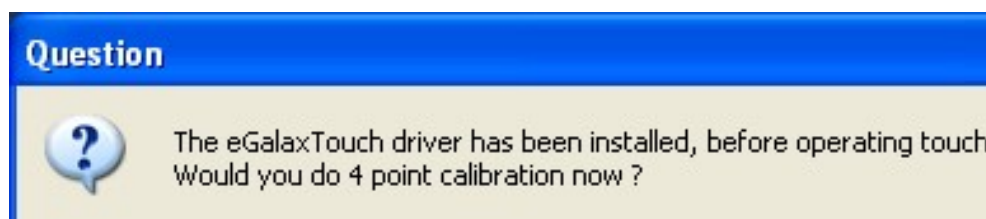

## 5.2 Software Functions

### 5.2.1 Software Functions(Resistive Touch)

Upon rebooting, the computer automatically finds the new 6000 controller board. The touch screen is connected but not calibrated. Follow the procedures below to carry out calibration.


1. After installation, click the PenMount Monitor icon “PM” in the menu bar.
2. When the PenMount Control Panel appears, select a device to “Calibrate.”

#### PenMount Control Panel(Resistive Touch)

The functions of the PenMount Control Panel are **Device**, **Multiple Monitors** ,**Tools** and **About**, which are explained in the following sections.

#### Device

In this window, you can find out that how many devices be detected on your system.

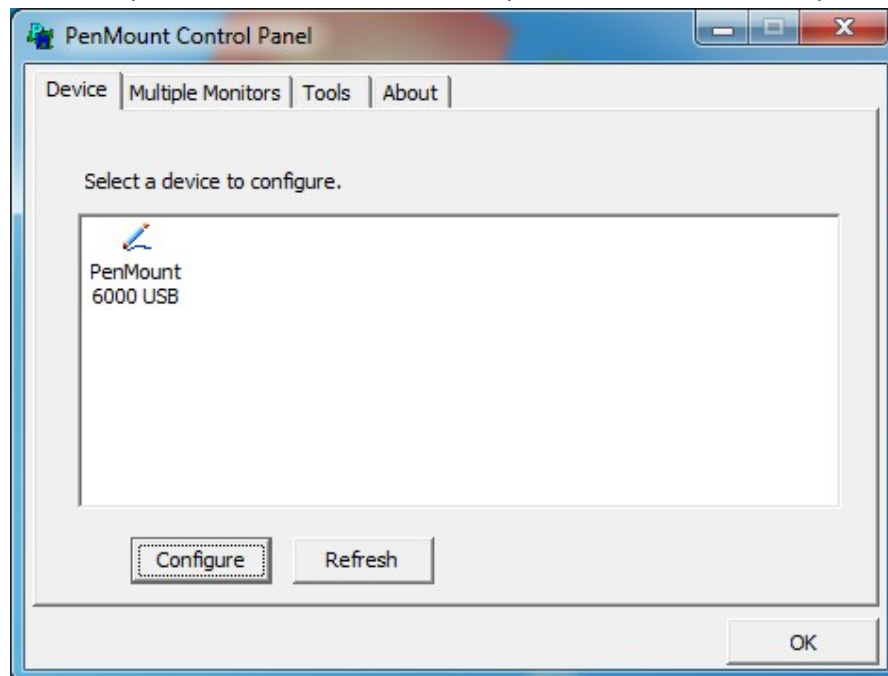


#### Calibrate



This function offers two ways to calibrate your touch screen. ‘Standard Calibration’ adjusts most touch screens. ‘Advanced Calibration’ adjusts aging touch screens.

|                      |  |
|----------------------|--|
| Standard Calibration | <b>Click this button and arrows appear pointing to red squares. Use your finger or stylus to touch the red squares in sequence. After the fifth red point calibration is complete. To skip, press 'ESC'.</b>             |
| Advanced Calibration | <b>Advanced Calibration uses 4, 9, 16 or 25 points to effectively calibrate touch panel linearity of aged touch screens. Click this button and touch the red squares in sequence with a stylus. To skip, press ESC'.</b> |

**Step 1.** Please select a device then click “Configure”. You can also double click the device too.

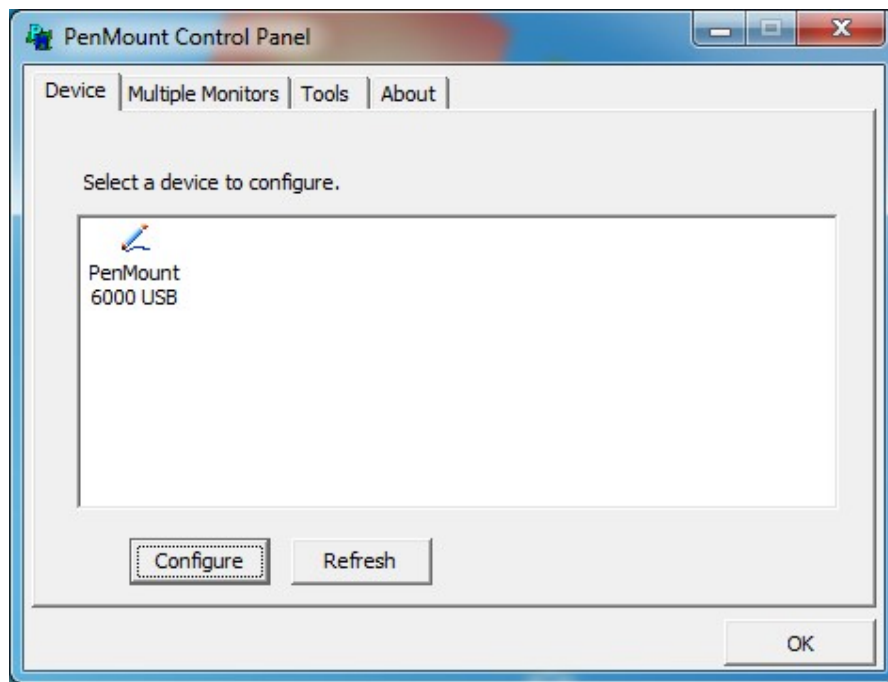


**Step 2.** Click “**Standard Calibration**” to start calibration procedure

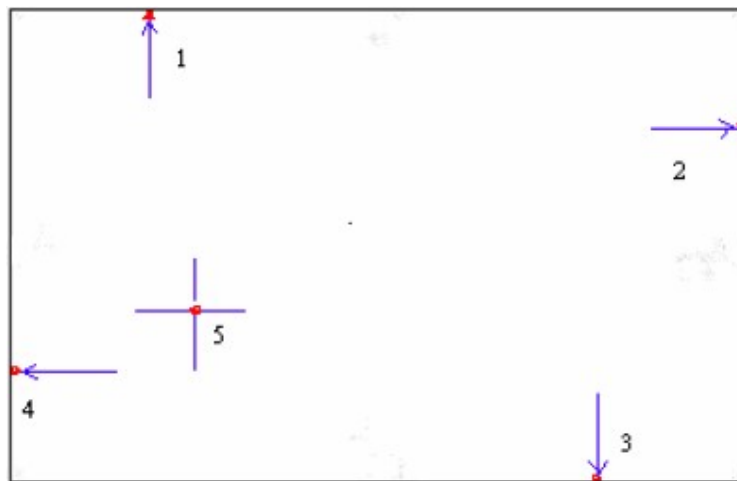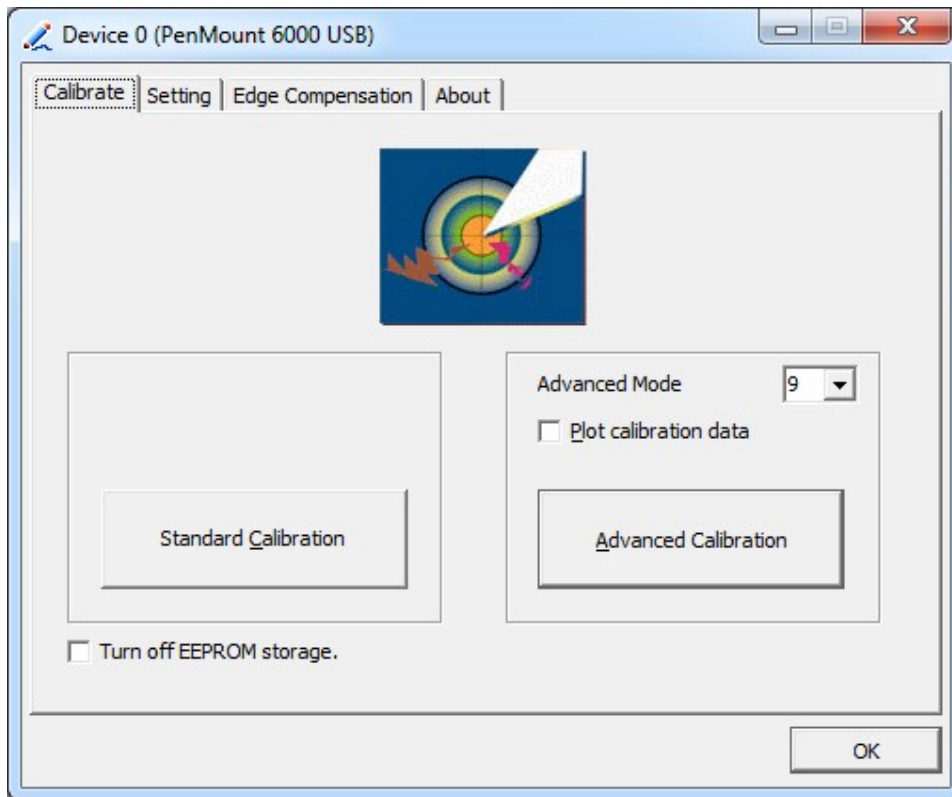

**NOTE:** The older the touch screen, the more Advanced Mode calibration points you need for an accurate calibration. Use a stylus during Advanced Calibration for greater accuracy. Please follow the step as below:



**Step 3.** Select **Device** to calibrate, then you can start to do **Advanced Calibration**.

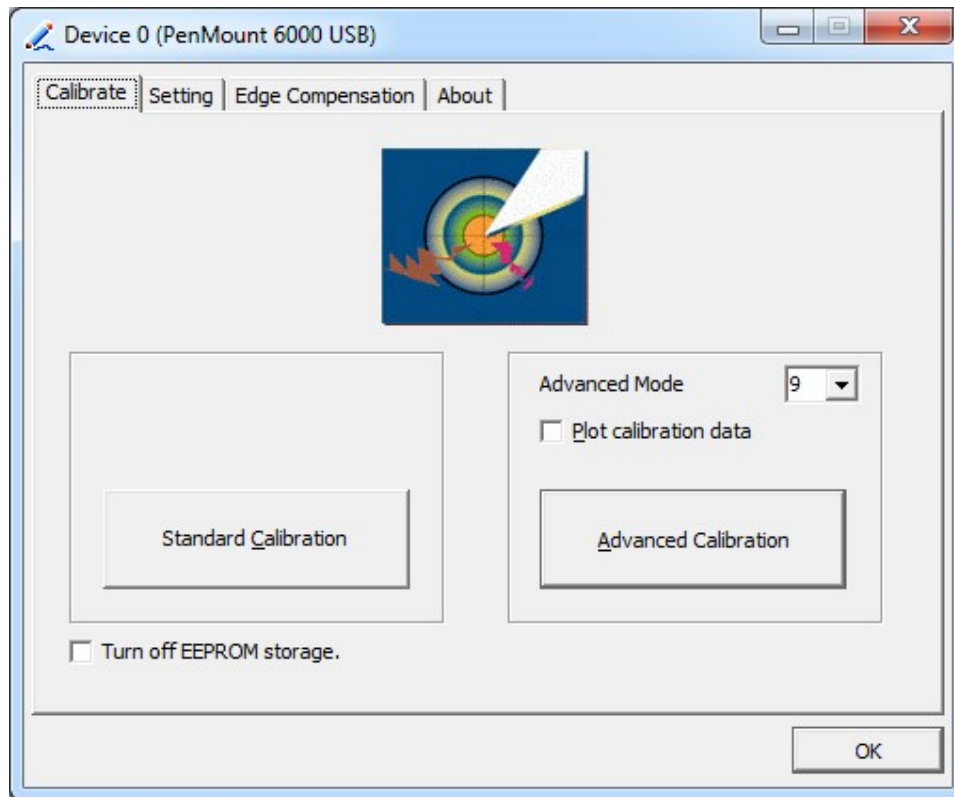


**NOTE:** Recommend to use a stylus during Advanced Calibration for greater accuracy.



|                         |   |
|-------------------------|---|
| Plot Calibration Data   | <b>Check this function and a touch panel linearity comparison graph appears when you have finished Advanced Calibration. The blue lines show linearity before calibration and black lines show linearity after calibration.</b> |
| Turn off EEPROM storage | <b>The function disable for calibration data to write in Controller. The default setting is Enable.</b>   |


## Setting

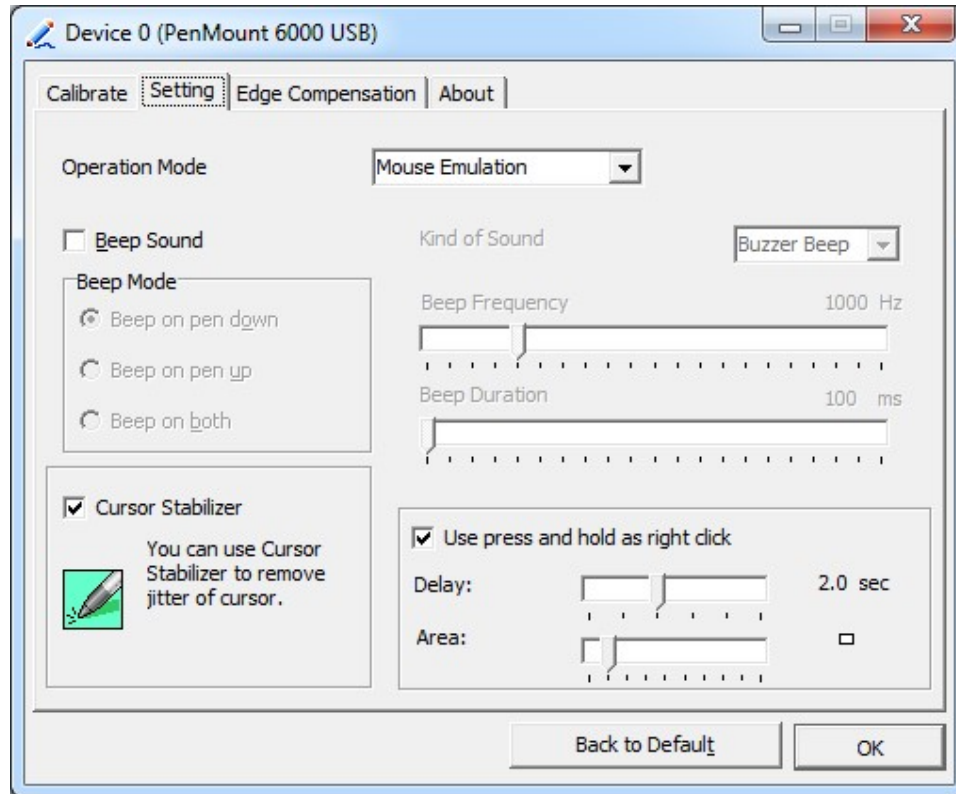

|                                   |   |
|-----------------------------------|---|
| Touch Mode                        | <p><b>This mode enables and disables the mouse’s ability to drag on-screen icons – useful for configuring POS terminals.</b></p> <p><b>Mouse Emulation –</b> Select this mode and the mouse functions as normal and allows dragging of icons.</p> <p><b>Click on Touch –</b> Select this mode and mouse only provides a click function, and dragging is disables.</p>                   |
| Beep Sound                        | <p><b>Enable Beep Sound –</b> turns beep function on and off</p> <p><b>Beep on Pen Down –</b> beep occurs when pen comes down</p> <p><b>Beep on Pen Up –</b> beep occurs when pen is lifted up</p> <p><b>Beep on both –</b> beep occurs when comes down and lifted up</p> <p><b>Beep Frequency –</b> modifies sound frequency</p> <p><b>Beep Duration –</b> modifies sound duration</p> |
| Cursor Stabilizer                 | <p><b>Enable the function support to prevent cursor shake.</b></p>  |
| Use press and hold as right click | <p><b>You can set the time out and area for you need.</b></p>   |


# Edge Compensation

You can use Edge Compensation to calibrate more subtly.

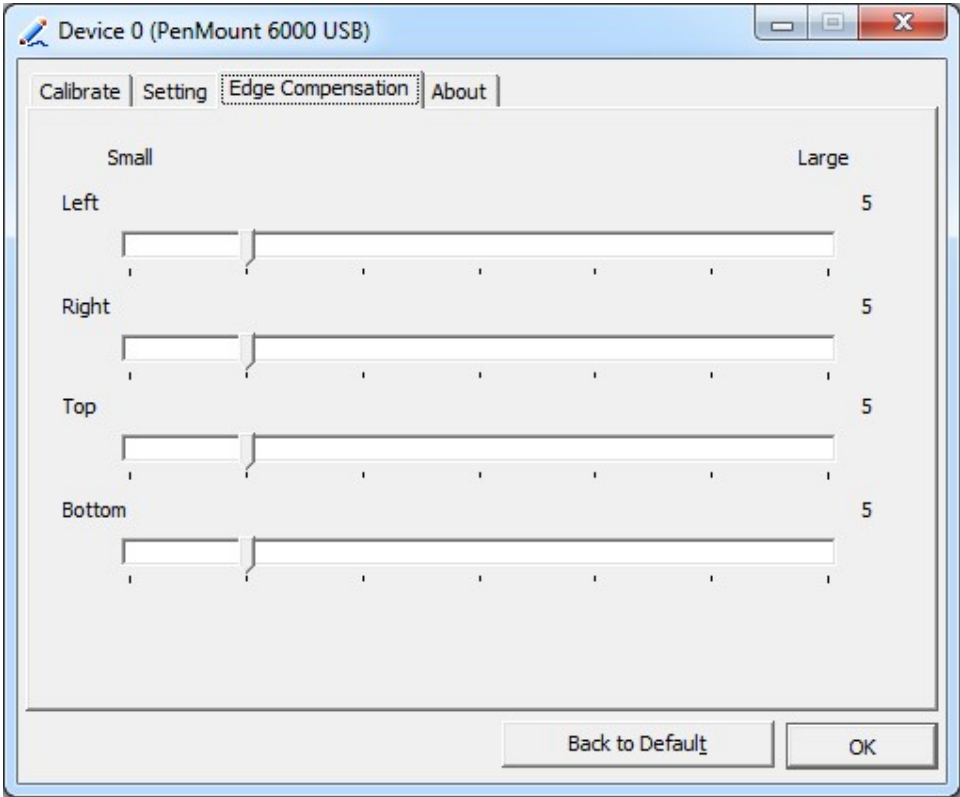

## About

This panel displays information about the PenMount controller and driver version.

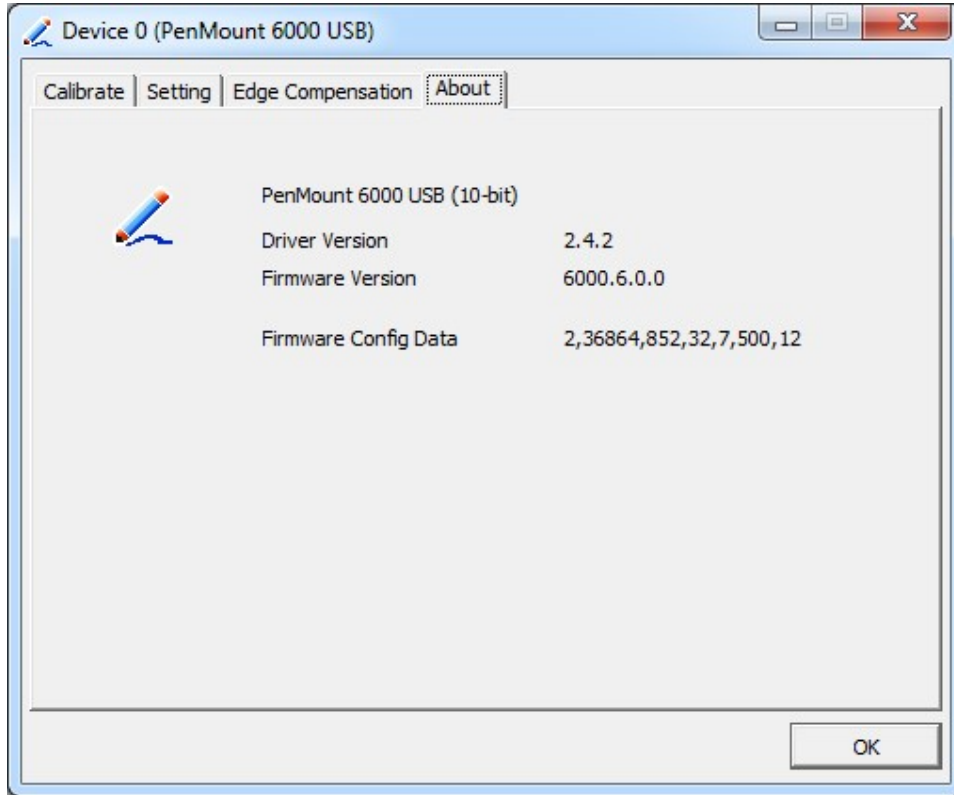

## Multiple Monitors


Multiple Monitors support from two to six touch screen displays for one system. The PenMount drivers for Windows XP/2003/Vista/7 support Multiple Monitors. This function supports from two to six touch screen displays for one system. Each monitor requires its own PenMount touch screen control board, either installed inside the display or in a central unit. The PenMount control boards must be connected to the computer COM ports via the USB interface. Driver installation procedures are the same as for a single monitor. Multiple Monitors support the following modes:

- Windows Extends Monitor Function
- Matrox DualHead Multi-Screen Function
- nVidia nView Function


**NOTE:** The Multiple Monitor function is for use with multiple displays only. Do not use this function if you have only one touch screen display. Please note once you turn on this function the rotating function is disabled.

Enable the multiple display function as follows:


1. Check the **Enable Multiple Monitor Support** box; then click **Map Touch Screens** to assign touch controllers to displays.

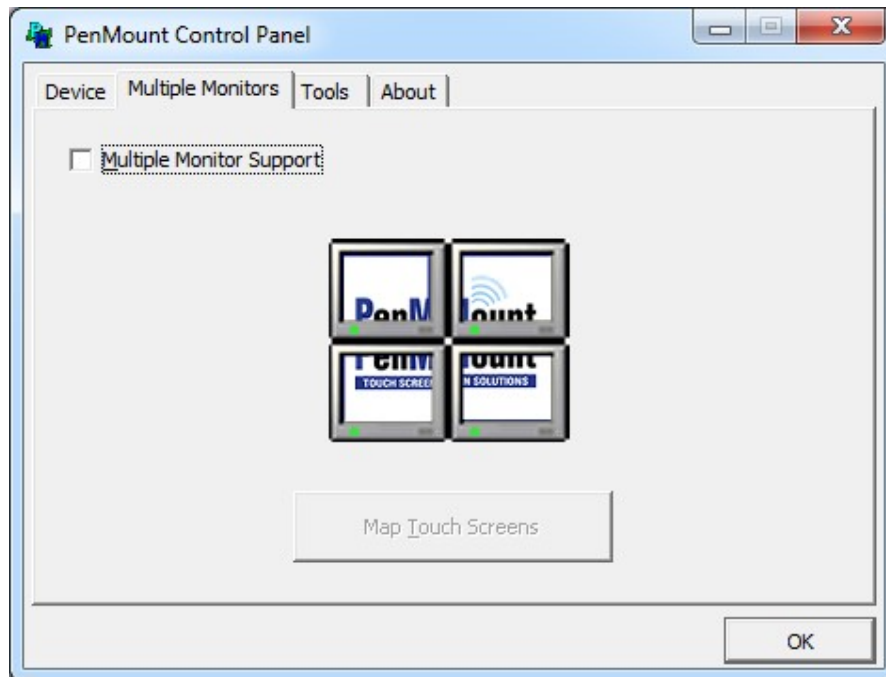

2. When the mapping screen message appears, click **OK**.
3. Touch each screen as it displays “Please touch this monitor”. Following this sequence and touching each screen is called **mapping the touch screens**.

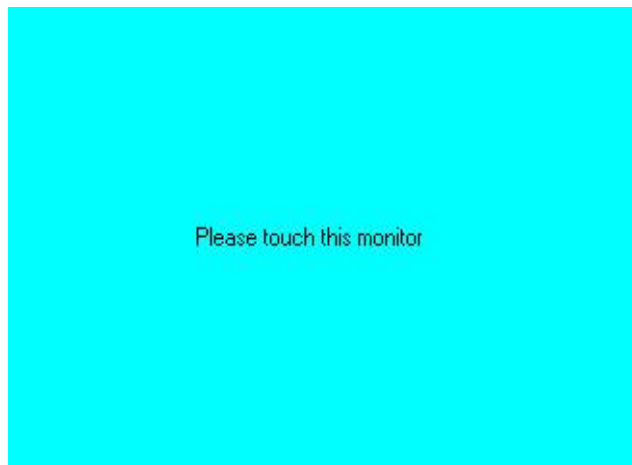

4. Touching all screens completes the mapping and the desktop reappears on the monitors.
5. Select a display and execute the “Calibration” function. A message to start calibration appears. Click **OK**.

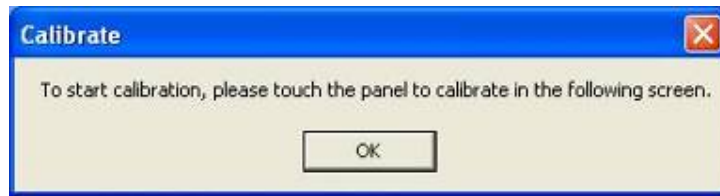

6. "Touch this screen to start its calibration" appears on one of the screens. Touch the screen.
7. "Touch the red square" messages appear. Touch the red squares in sequence.
8. Continue calibration for each monitor by clicking **Standard Calibration** and touching the red squares.

**NOTES:**

1. If you use a single VGA output for multiple monitors, please do not use the **Multiple Monitor** function. Just follow the regular procedure for calibration on each of your desktop monitors.
2. The Rotating function is disabled if you use the Multiple Monitor function.
3. If you change the resolution of display or screen address, you have to redo **Map Touch Screens**, so the system understands where the displays are.

**About**

This panel displays information about the PenMount controller and this driver version.




**PenMount Monitor Menu Icon**

The PenMount monitor icon (PM) appears in the menu bar of Windows XP/2003/Vista/7 system when you turn on PenMount Monitor in PenMount Utilities.




PenMount Monitor has the following function



|               |  |
|---------------|--|
| Control Panel | <b>Open Control Panel Windows</b>  |
| Beep          | <b>Setting Beep function for each device</b>   |
| Right Button  | <b>When you select this function, a mouse icon appears in the right-bottom of the screen.<br/>Click this icon to switch between Right and Left Button functions.</b>  |
| Exit          | <b>Exits the PenMount Monitor function.</b>  |

### Configuring the Rotate Function

1. Install the rotation software package.
2. Choose the rotate function (0°, 90°, 180°, 270°) in the 3rd party software. The calibration screen appears automatically. Touch this point and rotation is mapped.

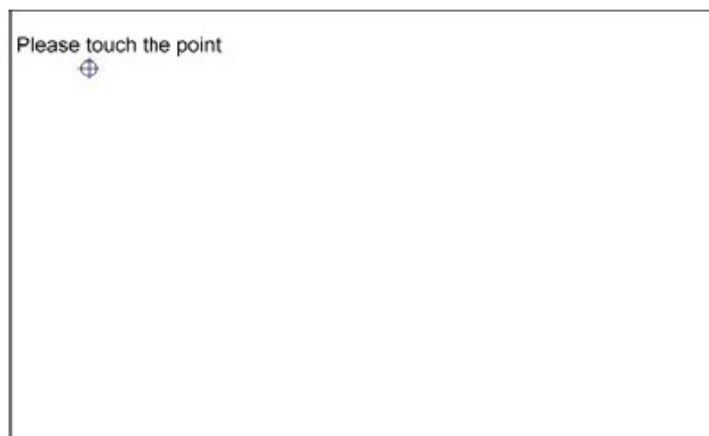


**NOTE:** The Rotate function is disabled if you use Monitor Mapping

## 5.2.2 Software Functions(Projected Capacitive)

### General

In this window, you can see there is USB Controller. Click **OK** to continue.

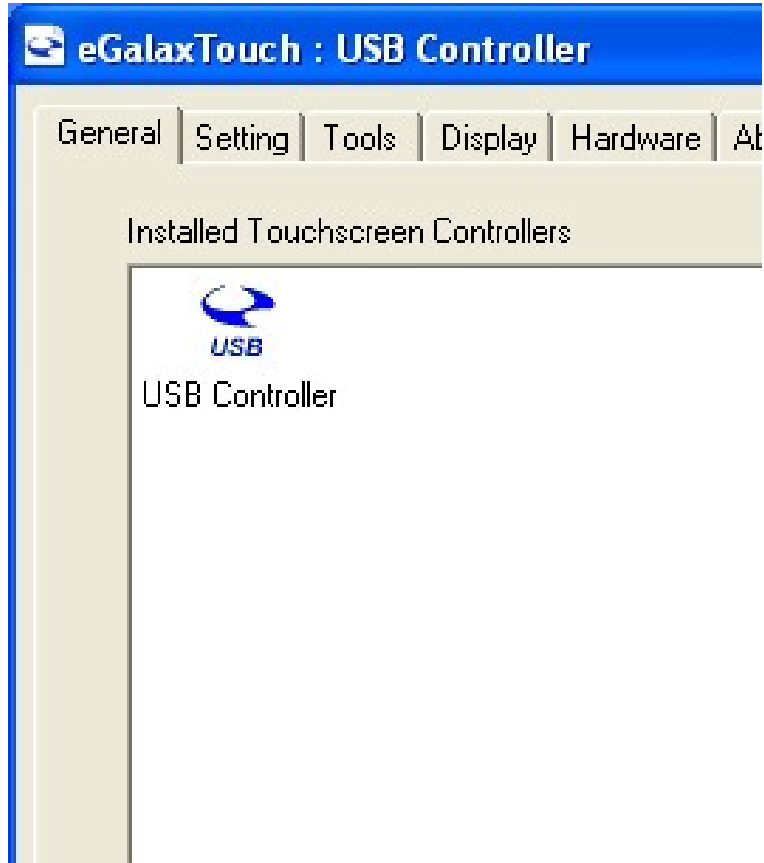

### Monitor Mapping


to adjust touch panel

### Add

to search for device



## Setting

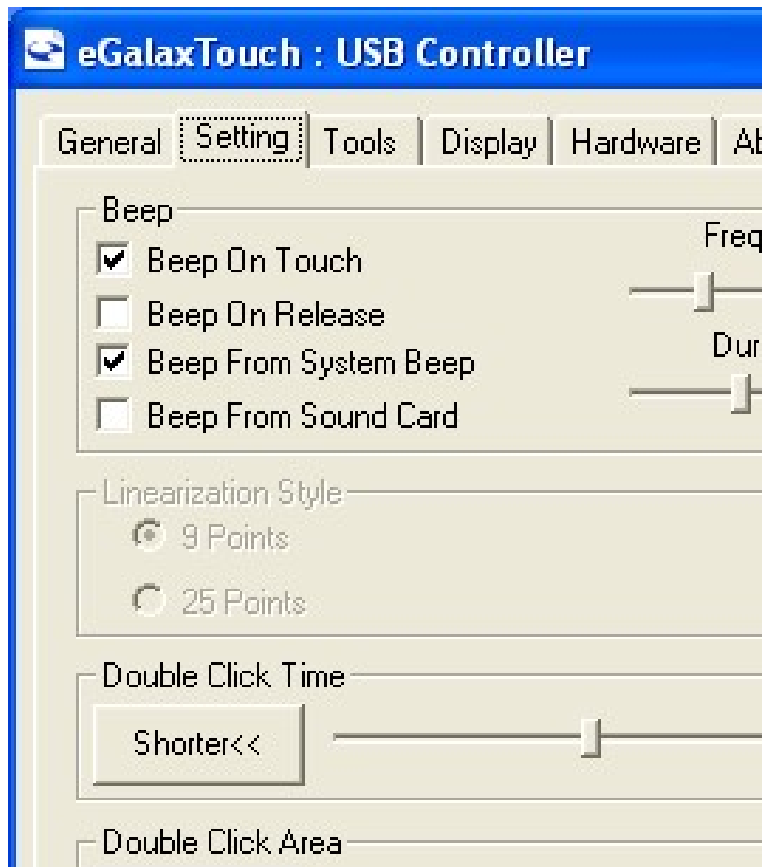

### Beep

- Beep On Touch
- Beep On Release
- Beep From System Beep
- Beep From Sound Card

### Linearization Style

- 9 points
- 25 points

### Double Click Time


- Shorter
- Longer

### Double Click Area

- Smaller
- Bigger

### Normal mode

- Simulate the mouse mode

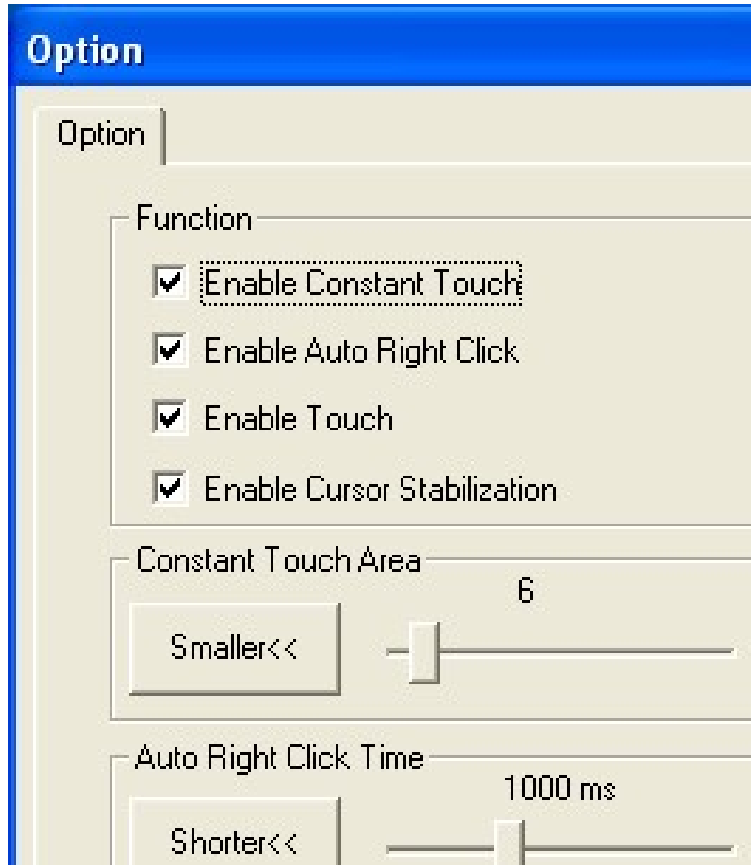


**Option**

- Function
  - Enable Constant Touch
  - Enable Auto Right Click
  - Enable Touch
  - Enable Cursor Stabilization
- Constant Touch Area
- Auto Right Click Time

## Tools

Click **OK** to continue the settings.

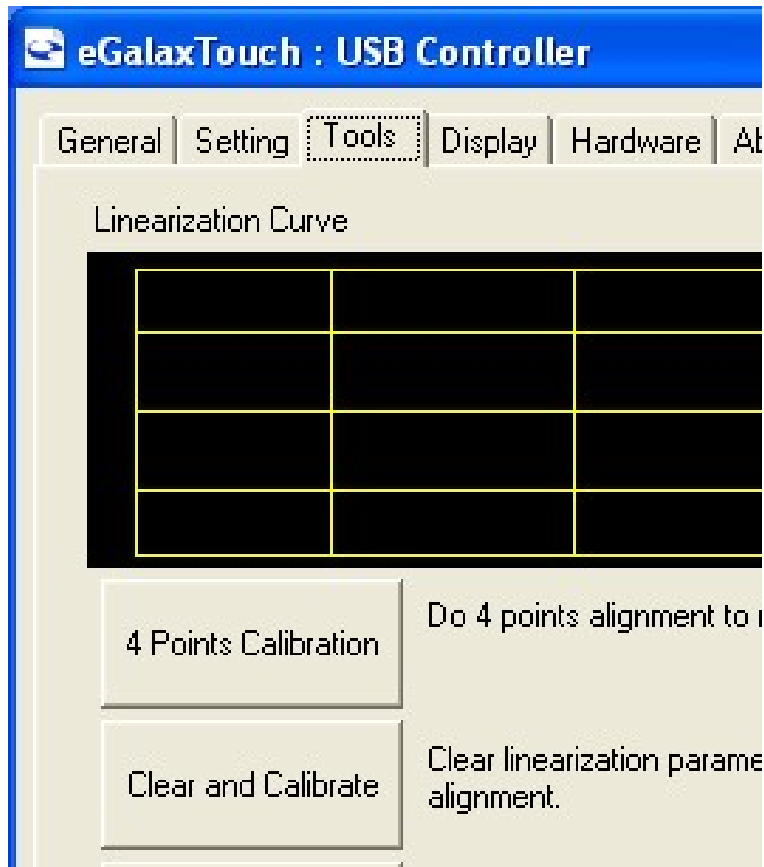

### **4 Points Calibration**

Do 4 points alignment to match display.

### **Clear and Calibrate**

Clear linearization parameter and do 4 points alignment.

### **Linearization**


Do 9 points linearization for better touchscreen linearity.

### **Draw Test**

Do draw test to verify the touch accuracy.

## Display


In this window, it shows the mode of display.

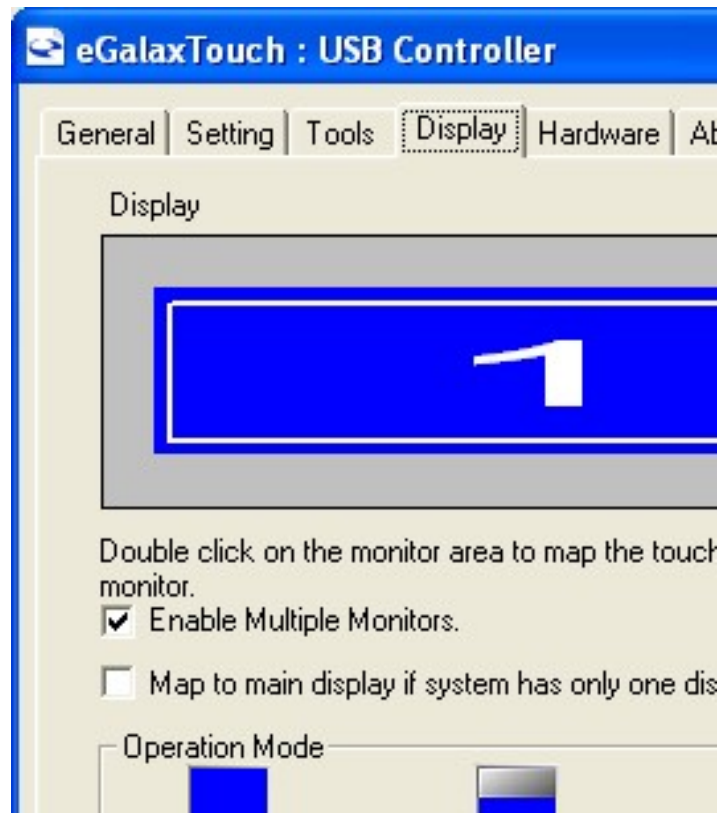

**Enable Multiple Monitors.**


**Map to main display if system has only one display monitor**

- Full Screen
- Lower Screen
- Left Screen
- Upper Screen
- Right Screen

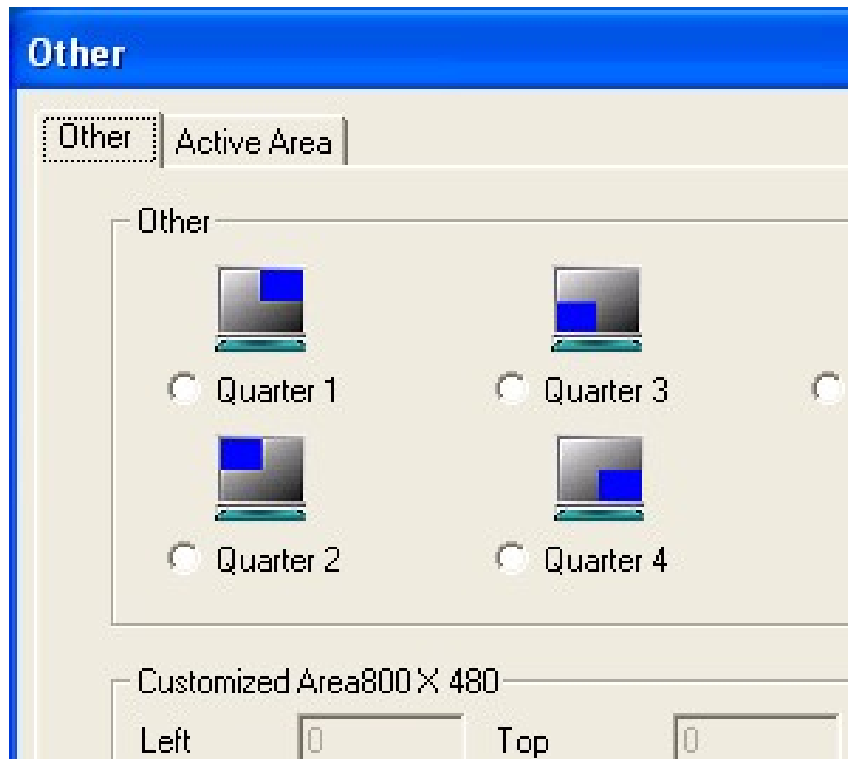

**Other**


Other mode of display. Quarter1~4 and Customized area.

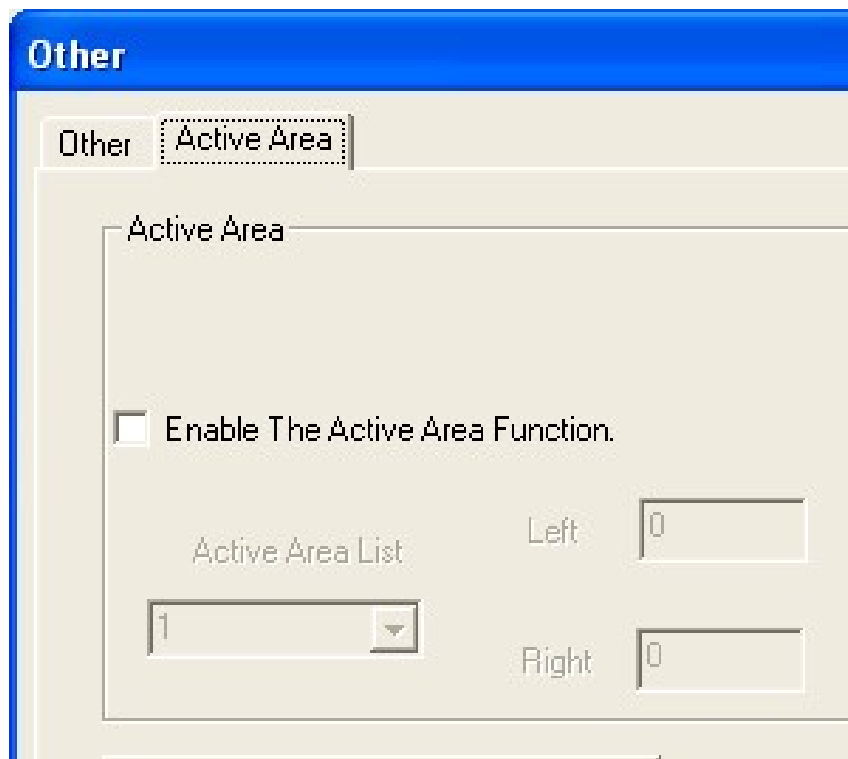


**Active Area**

Drag active area to enable Active Area Function.

## Hardware

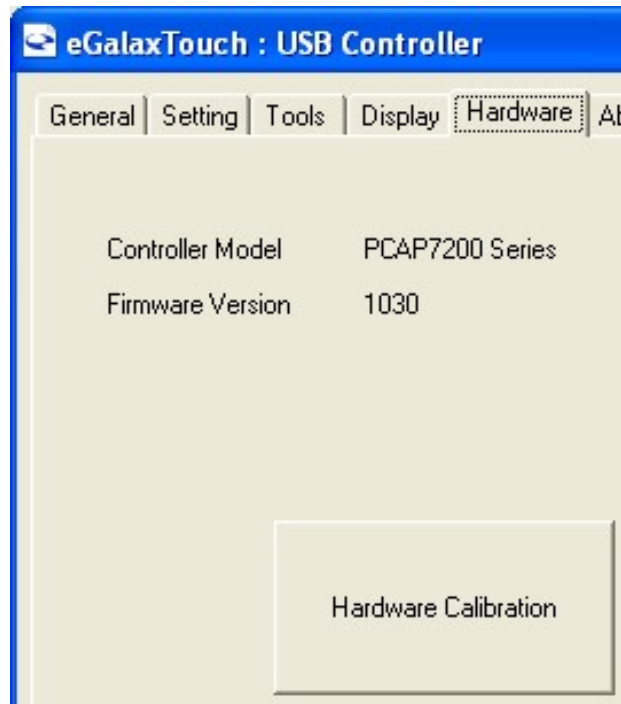

## Saturn Hardware Configuration

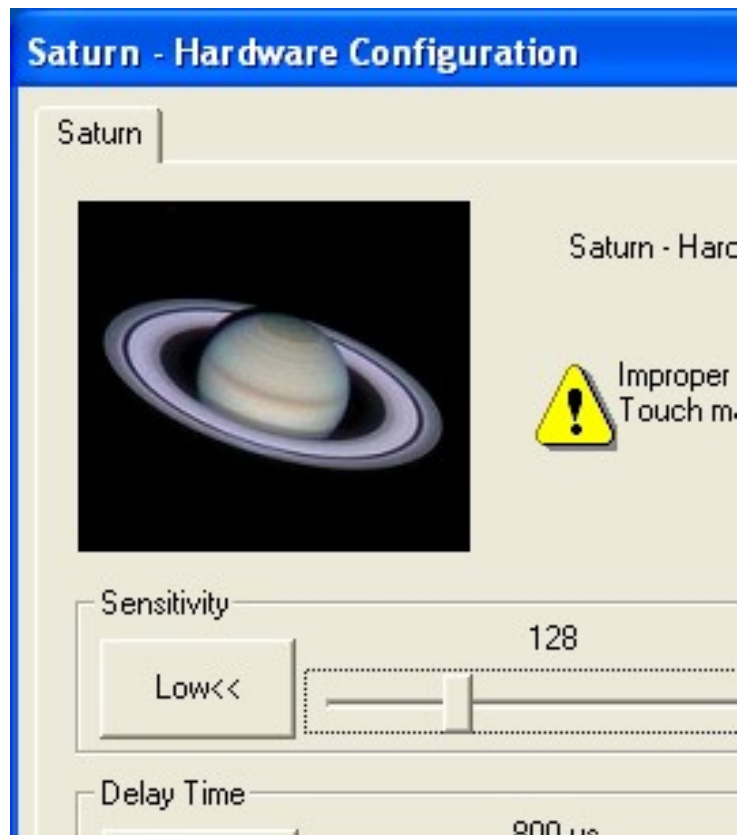

## About

To display information about eGalaxTouch and its version.

